

KVH Industries, Inc.

TracPhone® V7IP

with Integrated CommBox Modem (ICM)



User's Guide

TracPhone V7-IP

User's Guide

This user's guide provides all of the basic information you need to operate, set up, troubleshoot, and maintain the TracPhone V7-IP system. For detailed installation information, please refer to the TracPhone V7-IP Installation Guide.

If you have any comments regarding this manual, please e-mail them to manuals@kvh.com. Your input is greatly appreciated!



Technical Support

Within the Continental U.S.A.:

Phone: 1 866 701-7103

E-mail: mvbsupport@kvh.com

North/South America, Australia:

Phone: +1 401 851-3806

E-mail: mvbsupport@kvh.com

Europe, Middle East, Asia, Africa:

Phone: +45 45 160 180

E-mail: mvbsupport@kvh.com



Trademark Information

TracPhone, KVH, CommBox, and the unique light-colored dome with dark contrasting baseplate are trademarks of KVH Industries, Inc.

mini-VSAT Broadband is a service mark of KVH Industries, Inc.

ViaSat and the ViaSat logo are registered trademarks of ViaSat, Inc.

All other trademarks are the property of their respective owners.

Disclaimer

Every effort has been made to ensure the correctness and completeness of the material in this document. No company shall be liable for errors contained herein. The information in this document is subject to change without notice. No warranty of any kind is made with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Table of Contents

1 Introduction

About this Manual	3
Who Should Use this Manual	3
Icons Used in this Manual	3
Typographical Conventions	3
Related Documentation	4
Important Safety Information	5
RF Radiation Hazard Area.....	6
System Overview	7
System Components.....	8
Satellite Communications	9
Seamless Satellite Switching	11

2 Getting Started

Service Activation	15
Contacting the Satellite Airtime and Product Activation Department.....	15
Turning On the System	16
System Startup	17
Accessing the Web Interface	18
Understanding the Home Page	19
Viewing the Help (User Documentation)	20
Clearing the Cache of Your Web Browser.....	21

3 Interface Preferences

Changing the Administrator Password	25
Entering the Vessel Name.....	26

Assigning Phone Line Names	27
Adjusting the LCD Brightness	28
4 No-Transmit Zones	
No-Transmit Zones Overview.....	31
Status of No-Transmit Zones	32
Establishing No-Transmit Zones	33
Disabling No-Transmit Zones.....	38
Clearing No-Transmit Zones	39
5 Voice Connections	
Voice Service Overview.....	43
How the Voice Service Works.....	43
Making a Ship-to-Shore Call.....	44
Making a Shore-to-Ship Call.....	46
Adding Phone Lines	47
Additional MTA(s)	48
Crew Calling Gateway.....	49
Virtual Numbers	50
VoiceMail	51
Recording a VoiceMail Personal Greeting.....	51
Listening to Your VoiceMail Messages	51
Faxing	53
UCH-250 Fax Server	54
Accessing Your Voice Account.....	55
6 Network Configuration	
Wired DHCP Configuration	59
Wireless DHCP Configuration.....	60
Wireless Settings on ICM.....	61



Configuring Computers for DHCP.....	63
Windows 8 DHCP Settings.....	63
Windows 7 or Windows Vista DHCP Settings	64
Windows XP DHCP Settings	65
Mac OS X DHCP Settings.....	67
Static IP Configuration	68
LAN Settings on ICM	71
Cache Settings on ICM.....	73
Physical Ethernet Port Configurations	74
Static IP Port Configuration	75
Dual Dome Port Configuration.....	76
Legacy Port Configuration.....	77
CommBox Settings on ICM	78
Reset to Factory Configuration	79

7 Data Connections

Internet Access Overview	83
Connecting to the Internet.....	83
Tips for Minimizing Data Usage.....	84
Preventing Automatic Updates.....	85
Disabling Automatic File Backup and Synchronization	85
Firewall Protection	86
Web Browser Settings.....	86
Data-Intensive Applications	87
Mobile Websites.....	87
Disabling Wi-Fi Access on Mobile Devices.....	87
E-mail Best Practices	88
CommBox Features	89
Accessing the CommBox Web Interface	89

8 Troubleshooting

Initial Steps for Any Problem	93
Troubleshooting a Voice Problem	95
Troubleshooting a Data Problem.....	97
Error Messages.....	99
Status Information	103
Status Information on the Web Interface.....	103
Status Information on the ICM Front Panel LCD	109
LED Indicators.....	113
System Logs	115
Operational Log	115
Event Log.....	116
Equipment ID Numbers	117
Software Versions.....	118
Technical Support.....	119
Remote Diagnostics.....	120

9 Maintenance

Preventive Maintenance	123
Software Updates	124
Using the ICM to Update Software.....	125
Using Your Computer to Update Software	126
Using an iPhone/iPod touch to Update Software.....	127
Using a USB Flash Drive to Update Software	128
Modem Configuration Updates	129
Manually Updating the Modem Configuration Files.....	130
Corrective Maintenance	134
Gyro Calibration	135
Hardware Restart.....	137



A	Wiring Diagram	
	Wiring Diagram	141
B	LCD Menus	
	LCD Menus Quick Reference Guide	145
C	Specifications	
	System Specifications	149
D	Glossary	
	Glossary	153
E	Index	
	Index	167



1. Introduction

This section provides important safety information you need to know before using the system. It also provides a basic overview of the system and satellite communications.

Contents

About this Manual.....	3
Important Safety Information	5
System Overview	7
Satellite Communications.....	9



About this Manual

This manual provides complete operation, configuration, and troubleshooting information for the TracPhone V7-IP system.

Who Should Use this Manual

The **user** should refer to this manual to learn how to operate the system, configure all aspects of the system, and identify the cause of any problem.

The **installer** should refer to this manual for information on setting up the system for the user's desired preferences.

The **servicing technician** should refer to this manual to help identify the cause of a system problem.

Icons Used in this Manual

This manual uses the following icon:

Icon	Description
	This is a danger, warning, or caution notice. Be sure to read these carefully to avoid injury!

Typographical Conventions

This manual uses the following typographical conventions:

Text Example	Description
Press MENUS to view the menu.	Name of ICM buttons
At the confirmation message, click Save .	Element of a graphical user interface
SELECT SATELLITES	Text as it appears on the ICM display
See "Using this Manual" on page 3 .	Cross-reference to another chapter in the manual
Visit www.kvh.com/mvbservice for details.	Cross-reference to a website

Related Documentation

In addition to this User's Guide, the following documents are provided with your TracPhone system:

Document	Description
Installation Guide	Complete installation instructions
Quick Start Guide	Handy quick reference guide with basic operating instructions
Activation Checklist	Details on activating the system for mini-VSAT Broadband service
Installation Checklist	Form that the installer must return to validate the quality of the installation
Antenna Mounting Template	Template that the installer uses to lay out the antenna mounting holes
Warranty Statement	Warranty terms and conditions
Kitpack Contents List	List of every part supplied in the kit

Important Safety Information

For your own safety, and for the safety of your passengers and/or crew, be sure to read the following important notices.



WARNING

Risk of Electric Shock

Potentially lethal voltages are present within the ICM. To avoid electric shock, do not open the chassis enclosure.



WARNING

Risk of Electric Shock

If any component of the TracPhone system becomes damaged and/or no longer functions normally, disconnect it from vessel power, secure it from unintended operation, and contact KVH Technical Support (see [“Technical Support” on page 119](#)). All repairs or modifications must be performed by a trained, KVH-certified technician.



WARNING

Risk of Explosion

Do not operate the ICM (or any other electrical device) in an environment where flammable gases, vapors, or dusts are present.



WARNING

Risk of Electric Shock

Failure to ground the TracPhone system properly to ship's ground will cause an unsafe floating ground condition, risking potentially lethal electric shock. Refer to the Installation Guide for details on the proper grounding of the equipment.



CAUTION


RF Radiation Hazard

The antenna transmits up to 4 watts of radio frequency (RF) energy that is potentially harmful. Whenever the system is powered on, make sure everyone stays more than 36 feet (11 m) away from the antenna. No hazard exists directly below the antenna.

RF Radiation Hazard Area

Since a person above deck may not know which direction the antenna is pointing, you should always observe the minimum safe distance to prevent RF radiation exposure. Within the antenna's elevation range, the minimum safe distance is 36 feet (11 m). No hazard exists directly below the antenna.

Figure 1-1 Minimum Safe Distance to Avoid Risk of RF Radiation Exposure

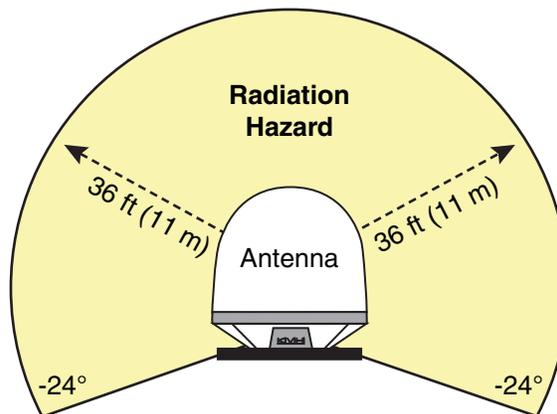

NOTE: You can set up no-transmit zones to inhibit transmissions within areas frequented by passengers and/or crew. See ["Establishing No-Transmit Zones"](#) on page 33 for details.


System Overview

Your TracPhone V7-IP is a complete mini-VSAT Broadband communications system for mariners on the move. Using cutting-edge CRMA (code reuse multiple access) and spread spectrum technologies, the TracPhone V7-IP delivers a seamless and consistent Internet experience. And it all comes with an antenna that is smaller and lighter than traditional VSAT antennas.

The system consists of an antenna and Integrated CommBox Modem (ICM) that connect to a land-based hub via a Ku-band satellite. The hub, managed by a Network Operations Center (NOC), then provides the link to the Internet and the terrestrial telephone network.

NOTE: A detailed wiring diagram is provided in "Wiring Diagram" on page 141.

Figure 1-2 TracPhone V7-IP mini-VSAT Broadband Network Diagram

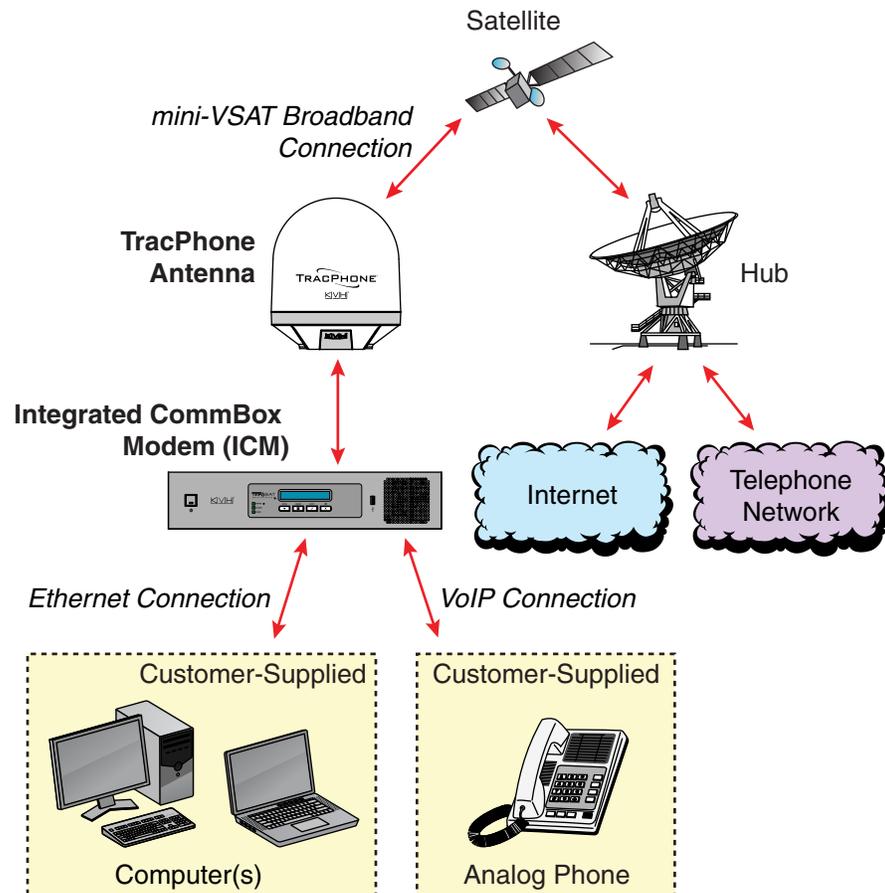

System Components

The TracPhone V7-IP system includes the following components:

Antenna Unit

The antenna unit provides the satellite link to the land-based hub. Using its integrated GPS, advanced reflector technology, and gyro stabilization, the antenna automatically locates and tracks the correct satellite, even while your vessel is on the move.


Figure 1-3 Antenna Unit



Integrated CommBox Modem (ICM)

The ICM is the transceiver and “brain” of the system. Its built-in modem processes all incoming and outgoing data traffic using its proprietary spread spectrum technologies. Its built-in router and wireless access point (WAP) provide the connection to your onboard local area network (LAN). And its easy-to-use web interface and front panel LCD allow you to operate and configure all aspects of the system.

Figure 1-4 ICM

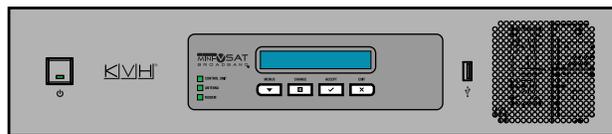


Satellite Communications

Communications satellites are located in fixed positions above the Earth's equator and relay data to/from the earth within the regions that they serve. Therefore, to communicate via a given satellite, you must be located within that satellite's unique coverage area, also known as its "footprint."

To view the latest mini-VSAT Broadband satellite coverage map, visit KVH's website at www.kvh.com/minivsatmap. The map is an amalgamation of all of the individual satellites' coverage areas.

Figure 1-5 Example of a Satellite Footprint

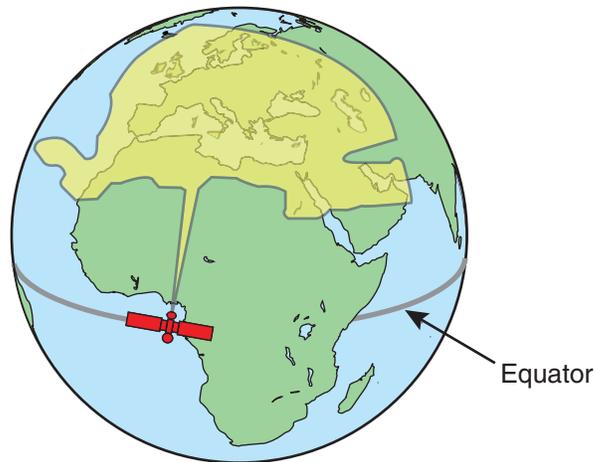


In addition, since satellites are located 22,300 miles (35,900 km) above the equator, the TracPhone antenna must have a clear view of the sky to transmit and receive signals. Anything that stands between the antenna and the satellite can block signals, resulting in lost data.

Common causes of blockage include the following:

- Trees, buildings, and bridges
- Other vessels docked alongside your vessel
- Onboard masts, antennas, or other structures
- Inclement weather conditions

Figure 1-6 Example of Satellite Blockage

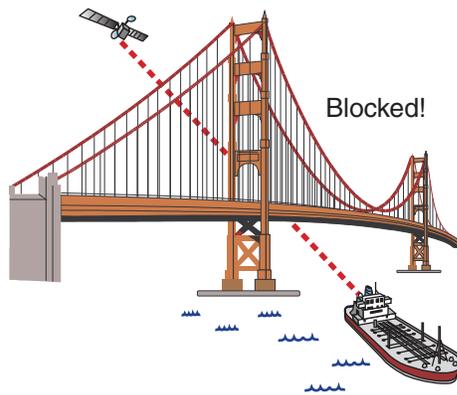


Seamless Satellite Switching

The high-traffic regions of the global mini-VSAT Broadband coverage area are covered by more than one satellite. The ICM's built-in modem maintains a prioritized list of all satellites in the network and selects the highest priority satellite that provides coverage at the vessel's current GPS location. If the antenna is unable to track the chosen satellite for any reason (due to a blockage condition, for example), the modem selects the next available satellite on the list and the antenna automatically switches to that satellite.

In addition, whenever the vessel travels outside the boundary of the current satellite's coverage area, the modem selects the highest priority satellite in the adjoining region and the antenna automatically switches to that satellite to maintain the service connection.

Figure 1-7 Example of Automatic Satellite Switching

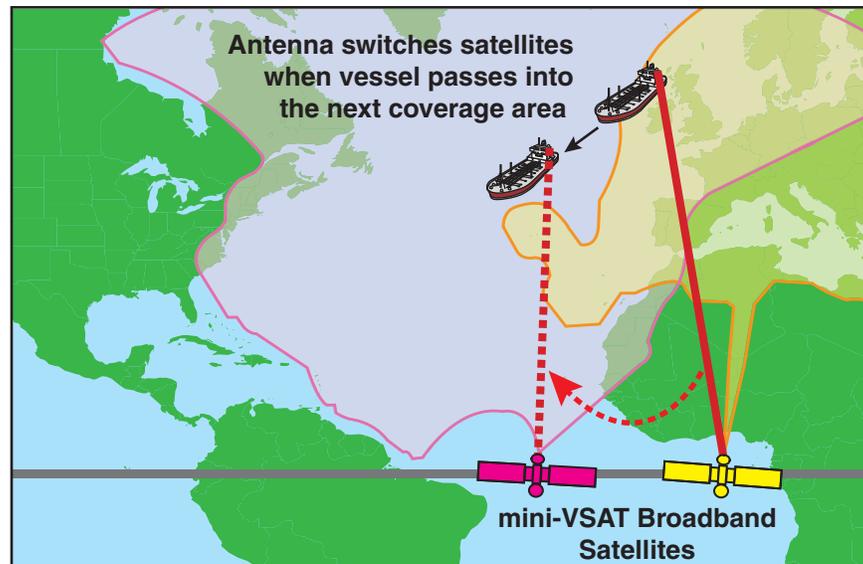

NOTE: The coverage areas shown here are for illustration purposes only. They do not represent boundaries of actual coverage areas.



2. Getting Started

This section explains how to activate the TracPhone system for mini-VSAT Broadband service. It also explains how to turn on the system for the first time and how to interpret the system's startup screens. Then it introduces the TracPhone V7-IP web interface, detailing how to access the Home page and the Help documentation.

Contents

Service Activation.....	15
Turning On the System.....	16
System Startup.....	17
Accessing the Web Interface.....	18
Understanding the Home Page.....	19
Viewing the Help (User Documentation).....	20



Service Activation

Before you can start using the TracPhone system, you need to activate it for mini-VSAT Broadband service. To activate, fill out and submit the appropriate form(s) available at www.kvh.com/mvbservice.

NOTE: You will need to enter the antenna and ICM serial numbers on the form. You can find these numbers on the Support page of the TracPhone V7-IP web interface or in the System Info LCD menu on the ICM's front panel. See "Equipment ID Numbers" on page 117.

Fax or e-mail the completed form(s) to KVH:

Fax: +1 401 851-3823

E-mail: satelliteservices@kvh.com

Once KVH processes the form(s), activates your account, and registers your product, you will receive an e-mail with the details of your new service, including your vessel's phone numbers.

Contacting the Satellite Airtime and Product Activation Department

If you have any questions, or would like to make a change to your account, please contact KVH's Satellite Airtime & Product Activation Department via e-mail at satelliteservices@kvh.com or by phone at:

Region	Phone Number
Europe & Middle East	+45 45 160 197
North & South America	+1 401.847.3327
Asia	+65 31584084
U.S. & Canada	866.399.8509 (toll-free)

Turning On the System

To turn on your TracPhone system, follow these steps:




CAUTION

The antenna transmits RF energy that is potentially harmful. Make sure everyone stays more than 36 feet (11 m) away from the antenna while it is in use. The antenna transmits down to an elevation of -24° , so no hazard exists directly below the antenna.

1. Make sure the antenna has a clear, unobstructed view of the sky.
2. Make sure vessel AC power is applied to the ICM and your computer(s).
3. Press the power button on the front of the ICM. The button's light should illuminate green.

Figure 2-1 Power Button

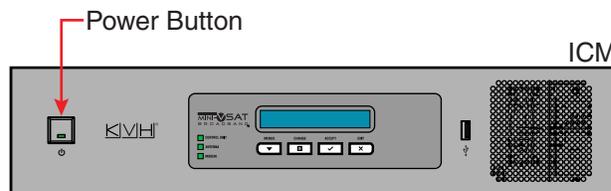

4. Wait five minutes for system startup.
5. Turn on your computer(s) that are connected to the network. Once the antenna finds the service satellite and the ICM's modem logs into the mini-VSAT Broadband service, all status lights on the ICM should be lit green. If any lights are not lit green, refer to ["LED Indicators" on page 113](#).

System Startup

The ICM shows the following screens during startup. Similar messages will also appear on the web interface. If the display shows an error message, see [“Error Messages” on page 99](#).

ICM Screen	Description
ICM INITIALIZING . . . 59	The system is running a self test routine
NO-TRANSMIT ZONE 1 AZ RANGE: 335-025	Displays the azimuth ranges of any user-configured no-transmit zones
ANTENNA READY WAITING FOR MODEM	The antenna is waiting for the ICM's modem to initialize
MODEM COMMS: OK	The ICM's modem is communicating OK
WAITING FOR GPS	The antenna is waiting for a GPS fix
GPS: ACQUIRED 41.5198N, 123.5817W	When GPS acquires a fix, momentarily displays your latitude/longitude
RECEIVING SATELLITE INFO FROM MODEM	The ICM's modem is providing satellite identification data to the antenna
ANTENNA STATE INITIALIZING	The antenna is initializing
SEARCHING FOR 105.0W SATELLITE	The antenna is searching for the mini-VSAT Broadband satellite
RF RADIATION HAZARD! TRANSMIT INHIBITED	If the antenna is pointing within an enabled no-transmit zone, it will not transmit
OFFLINE TRACKING 105.0W	The antenna is now tracking the satellite
ONLINE TRACKING 105.0W	The ICM's modem has accessed the mini-VSAT Broadband service; the system is ready for use!

Accessing the Web Interface


The ICM offers a local web interface, which you can use to check system status, update software, and configure all aspects of the system. To access the web interface, simply open a web browser window on any computer on the network and enter the following web address:

http://minivsat.kvh

NOTE: This web address may not work on all platforms and browsers. It also will not work in certain network configurations. If the web interface does not appear, enter the ICM's IP address instead (default is 192.168.5.1). You can find this address on the ICM front panel LCD (go to Settings > Network Settings > IP Assignments).

As long as the ICM is turned on and functioning properly, the Home page will appear in your browser.

Figure 2-2 Web Interface Home Page

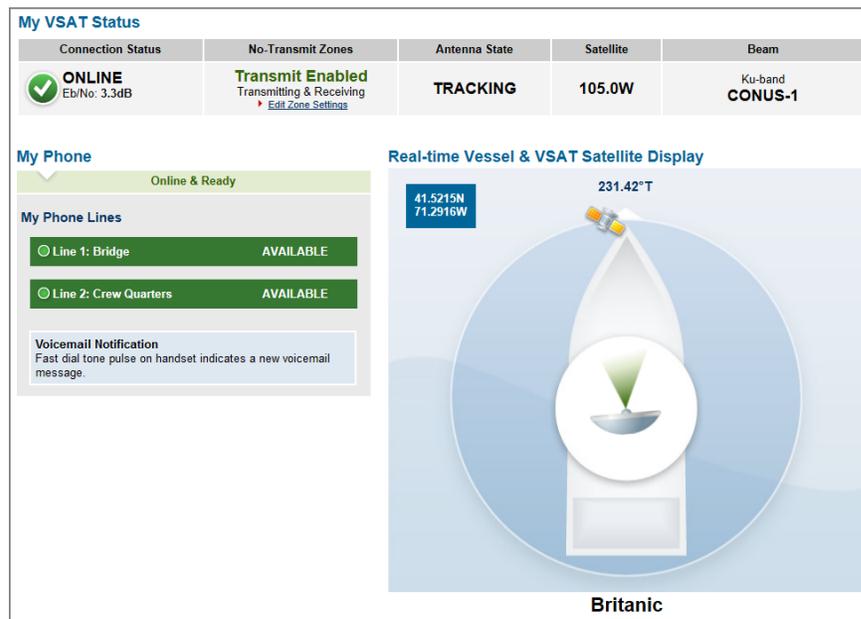


Understanding the Home Page

The Home page of the TracPhone V7-IP web interface provides essential system status information, including the status of the antenna, the system's connection to the mini-VSAT Broadband service, and the voice service connection. It also displays the vessel's GPS position and true heading and provides a graphical representation of the antenna's pointing direction relative to the bow of the vessel.

Important!

If true heading is not displayed, the TracPhone system does not have a valid connection to the vessel's NMEA 0183 talker.

Figure 2-3 Real-time Vessel & VSAT Satellite Display

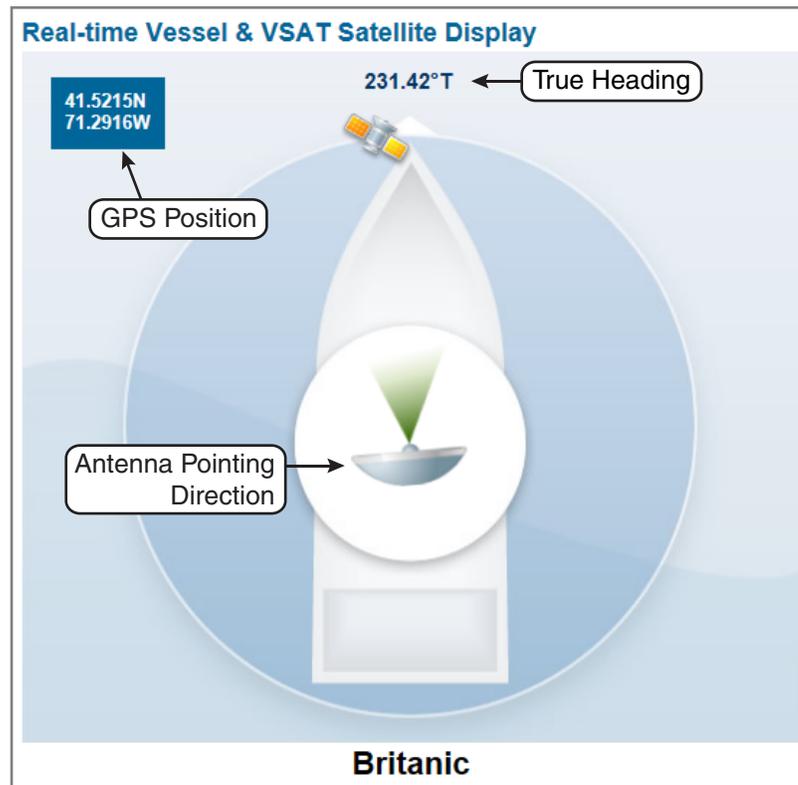

Viewing the Help (User Documentation)

The system's Help is available on the Support page of the TracPhone V7-IP web interface. Two options are offered: Condensed and Extended. Refer to either of these resources for answers to your operation, configuration, or troubleshooting questions.

Important!

You might need to clear your web browser's cache in order to view the latest version of the Help. See ["Clearing the Cache of Your Web Browser" on page 21](#) for details.

NOTE: The Help is compatible with the following web browsers: Internet Explorer, Mozilla Firefox, Google Chrome, and Apple Safari. If you are using Internet Explorer version 10, you will first need to adjust the width of the Help's navigation pane to view topics due to a known software issue.

Condensed Help

- Resides on the ICM locally
- Text-only format


Extended Help

- Resides on the KVH website (airtime charges may apply)
- Media-rich format, complete with images and tutorials

To access either of these resources from the ICM, follow these steps:

1. At the TracPhone V7-IP web interface, click the **Support** tab.
2. On the **Help** menu, click the desired option.


Figure 2-4 Help Options

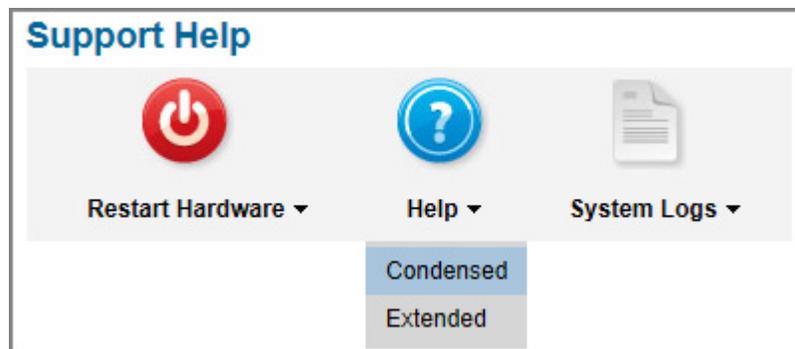

Clearing the Cache of Your Web Browser

When you visit a web page, your browser may store a copy of it in its local cache. As a result, when you revisit the page, the browser may display the old copy it had previously stored rather than reload the latest version from the web. Since the Help actually consists of a set of web pages, you might need to clear your web browser's cache to force it to load the latest version. For example, in Internet Explorer, go to Tools > Safety > Delete Browsing History (or press Ctrl + Shift + Del), select **Temporary Internet files**, then click **Delete**.

Figure 2-5 Clearing the Cache in Internet Explorer

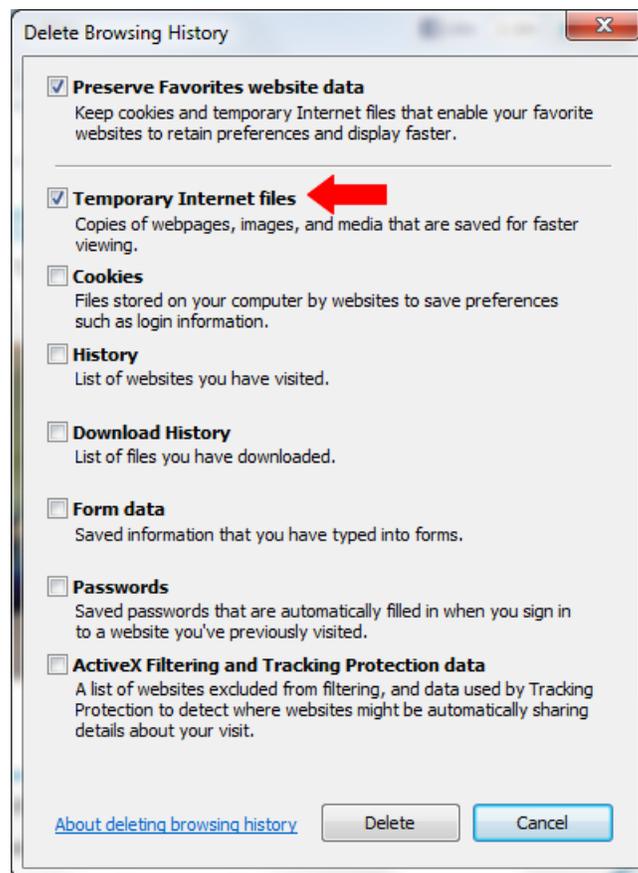



3. Interface Preferences

This section explains how to customize the TracPhone V7-IP web interface by entering the names of the vessel and phone lines. It also explains how to change the Administrator password and adjust the brightness of the ICM's front panel LCD.

Contents

Changing the Administrator Password	25
Entering the Vessel Name	26
Assigning Phone Line Names	27
Adjusting the LCD Brightness	28



Changing the Administrator Password

You must be logged in as an Administrator to make any substantial changes to the system's configuration on the TracPhone V7-IP web interface. To prevent unauthorized user access, KVH recommends that you change the Administrator password to something unique.

To change the Administrator password, follow these steps:

1. At the TracPhone V7-IP web interface, click the **Settings** tab. Then click **Account**.
2. In Security, click **Edit**.
3. Enter the current password. If the password has never been changed, enter the default password: "**password**".

NOTE: The password must be between 4 and 20 characters in length, with at least one letter and one number, case-sensitive.

4. Enter and then re-enter your new password.
5. Click **Save Settings**.

Figure 3-1 Changing the Administrator Password

The screenshot shows a web interface titled "Security" with the instruction "Change the administrator's login password." It contains three input fields: "Enter the current password:" (with 8 dots), "Enter the new password:" (with 12 dots and a green "Strong" indicator), and "Re-enter the new password:" (with 12 dots). The "Enter the new password:" field includes a note: "(between 4 and 20 characters long, with at least one letter and one number, case sensitive)". At the bottom are "Cancel" and "Save Settings" buttons.


Entering the Vessel Name

The vessel name is displayed on the Home page of the TracPhone V7-IP web interface. It also appears in all technical support communications.

To enter your vessel's name in the TracPhone V7-IP web interface, follow these steps:

1. At the TracPhone V7-IP web interface, click the **Settings** tab. Then click **Account**.
2. In Vessel Name, click **Edit**.
3. If the Login window appears, log in with the Administrator password.
4. Enter your vessel's name.
5. Click **Save Settings**.

Figure 3-2 Entering the Vessel Name

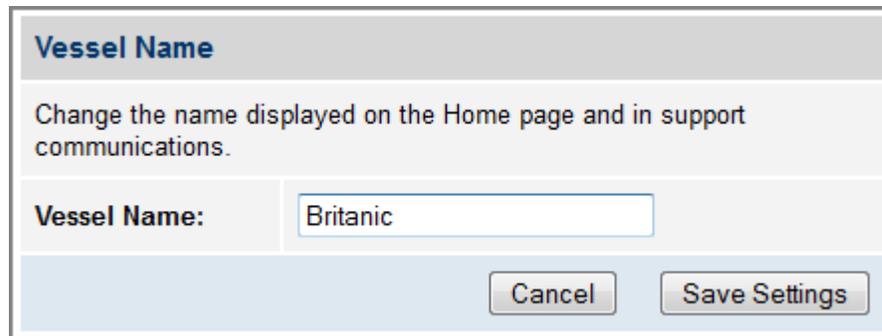

The screenshot shows a web form titled "Vessel Name". Below the title is a descriptive text: "Change the name displayed on the Home page and in support communications." There is a text input field labeled "Vessel Name:" containing the text "Britanic". At the bottom right of the form are two buttons: "Cancel" and "Save Settings".


Assigning Phone Line Names

The phone line names are displayed on the Home page of the TracPhone V7-IP web interface. They also appear in all technical support communications. For example, you might assign the name "Bridge" to Line 1 and "Crew Quarters" to Line 2.

To assign a name to each phone line, follow these steps:

1. At the TracPhone V7-IP web interface, click the **Settings** tab. Then click **Other**.
2. In Phone Line Names, click **Edit**.
3. If the Login window appears, log in with the Administrator password.
4. Enter names for Lines 1 and 2.
5. Click **Save**.

Figure 3-3 Assigning Phone Line Names

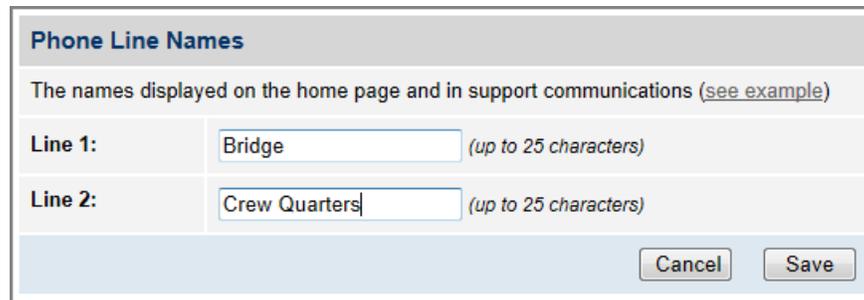

The screenshot shows a web form titled "Phone Line Names". Below the title is a subtitle: "The names displayed on the home page and in support communications (see example)". There are two rows of input fields. The first row is labeled "Line 1:" and contains a text box with "Bridge" and a note "(up to 25 characters)". The second row is labeled "Line 2:" and contains a text box with "Crew Quarters" and a note "(up to 25 characters)". At the bottom right of the form are two buttons: "Cancel" and "Save".

Phone Line Names	
The names displayed on the home page and in support communications (see example)	
Line 1:	<input type="text" value="Bridge"/> (up to 25 characters)
Line 2:	<input type="text" value="Crew Quarters"/> (up to 25 characters)
<input type="button" value="Cancel"/> <input type="button" value="Save"/>	


Adjusting the LCD Brightness

You can adjust the brightness of the ICM's front panel LCD to suit your preferences.

To adjust the brightness of the ICM's display, follow these steps:

1. At the ICM front panel, press **MENUS** until the display shows "SETTINGS."
2. Press **ACCEPT**.
3. At "SYSTEM SETTINGS," press **ACCEPT**.
4. At "LCD BRIGHTNESS," press **ACCEPT**.
5. Press **MENUS** until the display shows the desired brightness setting: HIGH, MEDIUM, or LOW.
6. Press **ACCEPT**.
7. Press **EXIT** to exit the menu.

Figure 3-4 LCD Brightness Setting

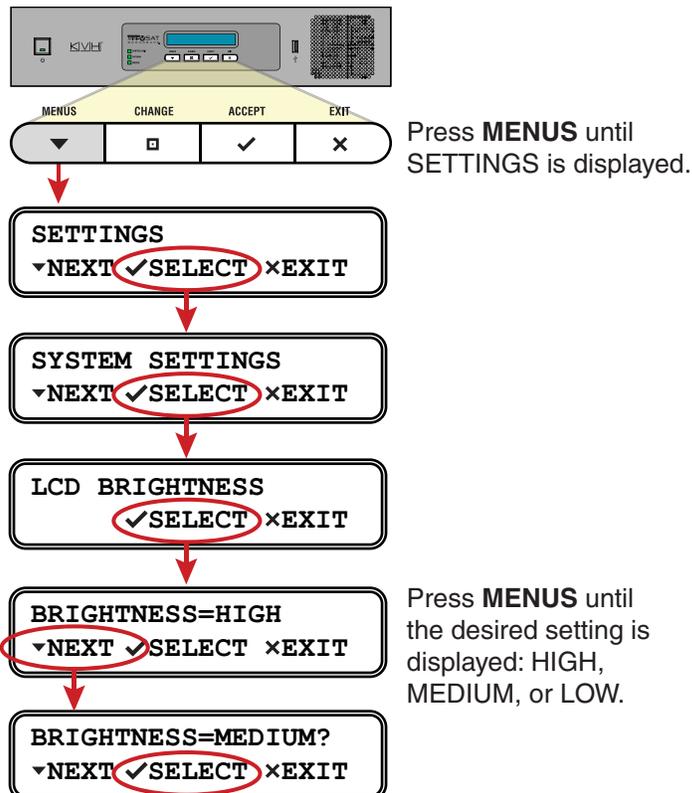



4. No-Transmit Zones

This section explains how to view, configure, temporarily disable, and clear no-transmit zones, which prohibit the antenna from transmitting within a certain azimuth/elevation range.

Contents

No-Transmit Zones Overview	31
Status of No-Transmit Zones.....	32
Establishing No-Transmit Zones.....	33
Disabling No-Transmit Zones	38
Clearing No-Transmit Zones.....	39




No-Transmit Zones Overview

To prevent exposure to the antenna's radiated RF (radio frequency) energy, you can configure up to two no-transmit zones for areas where crew and passengers frequent. Whenever the antenna points within a no-transmit zone, the system disables the transmitter. Transmission capability is restored whenever the antenna points outside the zone.

NOTE: See "RF Radiation Hazard Area" on page 6 for details on the minimum safety distances.


Figure 4-1 Example of a No-Transmit Zone

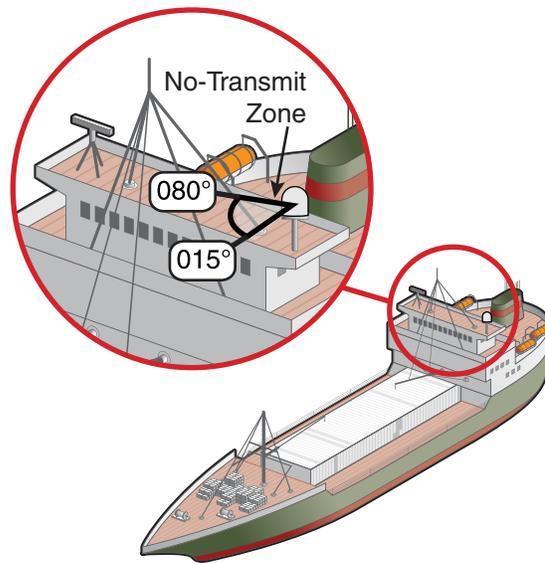

Status of No-Transmit Zones

You can view the current status of the system's no-transmit zones on the Home page of the TracPhone V7-IP web interface. If no-transmit zones have been set up, "My VSAT Status" includes a No-Transmit Zones column. If this column is missing, no transmit zones have not yet been set up or they have been cleared from memory. See ["Establishing No-Transmit Zones" on page 33](#) for details on setting up no-transmit zones.

Figure 4-2 No-Transmit Zones Status Information on Home Page

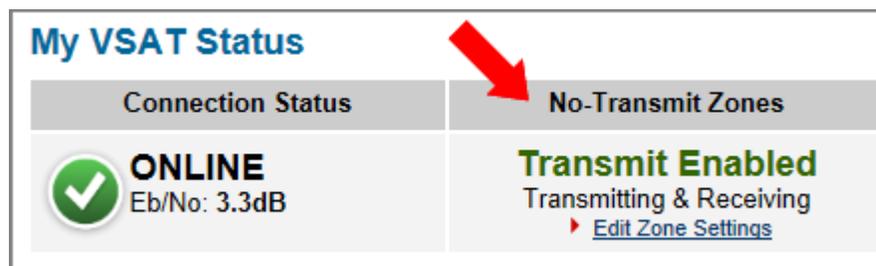

The No-Transmit Zones column will display one of the following status indications:

- **Transmit Enabled (green)** – One or two no-transmit zones have been set up and are currently enforced. However, the antenna is not pointing within a no-transmit zone.
- **Transmit Disabled (orange)** – One or two no-transmit zones have been set up and are currently enforced. The antenna is pointing within a no-transmit zone and will not transmit.
- **Transmit Enabled (red)** – One or two no-transmit zones have been set up, but they are currently being ignored. The antenna can transmit in any direction without restriction.

NOTE: You can also view the status of no-transmit zones on the ICM's front panel LCD (go to No-Transmit Zones).

Establishing No-Transmit Zones

To configure a no-transmit zone, follow these steps:


1. Identify the necessary azimuth range for the zone (see [“Identify the Azimuth Range”](#)).
2. Identify the necessary elevation range for the zone (see [“Identify the Elevation Range”](#) on page 34).
3. At the TracPhone V7-IP web interface, configure a no-transmit zone for that combination of azimuth and elevation ranges (see [“Configure the No-Transmit Zone\(s\) at the Web Interface”](#) on page 35).

Identify the Azimuth Range

First, you need to determine the necessary azimuth range for the no-transmit zone(s). You will need to enter, in clockwise order, the beginning and ending azimuths that define the outer boundaries of the zone, **relative to the antenna's forward arrow**, which should be pointing toward the bow.

NOTE: Each no-transmit zone must span at least 5°. Therefore, be sure to set beginning and ending azimuths at least 5° apart.

Figure 4-3 Beginning and Ending Azimuths Defining a No-Transmit Zone (Example)

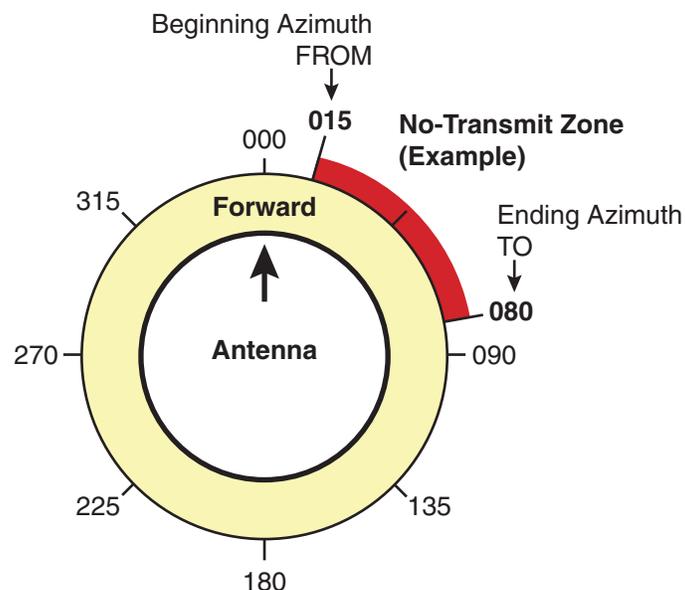


Identify the Elevation Range

Now you need to determine the necessary elevation range for the no-transmit zone(s). You will need to enter, in ascending order, the beginning and ending elevations that define the outer boundaries of the zone.

NOTE: Each no-transmit zone must span at least 5°. Therefore, be sure to set beginning and ending elevations at least 5° apart.

Figure 4-4 Beginning and Ending Elevations Defining a No-Transmit Zone (Example)

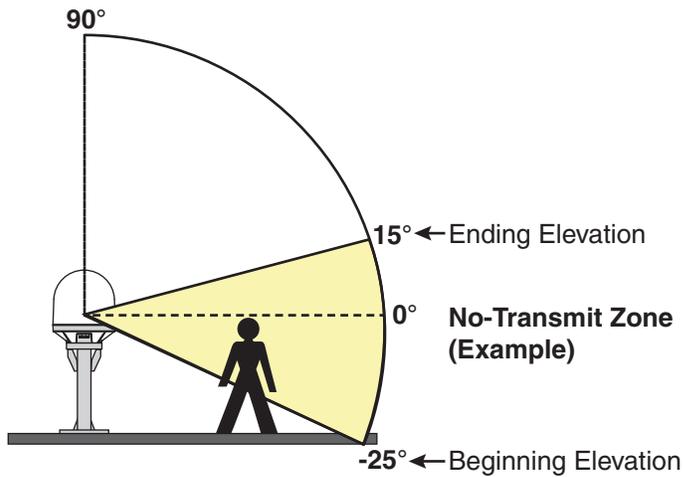



Configure the No-Transmit Zone(s) at the Web Interface

1. At the TracPhone V7-IP web interface, click the **Settings** tab. Then click **No-Transmit Zones**.
2. Click **Edit**.
3. If the Login window appears, log in with the Administrator password.
4. In No-Transmit Zone Ranges, make sure **Enforce Zones** is selected.

Important!

When "Enforce Zones" is selected, the antenna will not transmit whenever it points within one of your configured no-transmit zones. If "Ignore Zones" is selected instead, the zones are disabled, allowing the antenna to transmit in any direction without restriction.

5. Enter the azimuth and elevation ranges for Zone 1.
6. If you wish to set up a second no-transmit zone, enter the azimuth and elevation ranges for Zone 2.
7. Click **Save Settings**.
8. At the confirmation message, click **Save**.

Figure 4-5 Configuring No-Transmit Zones


No-Transmit Zone Ranges:

- Enforce Zones**
The antenna will not transmit within the zone(s) specified below.
- Ignore Zones**
The antenna will be able to transmit in any direction without restriction. Be sure everyone stays the minimum safe distance away from the antenna.

Zone #1


Azimuth Range:
Must span at least 5°

From: °
To: °

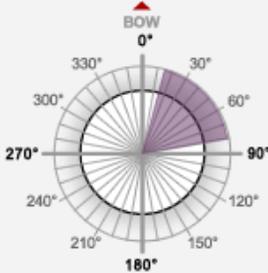

Elevation Range:
Must span at least 5°


From: °
To: °

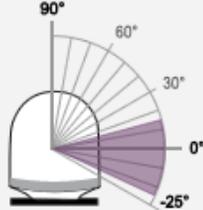

Zone #2


Azimuth Range:
Must span at least 5°

From: °
To: °

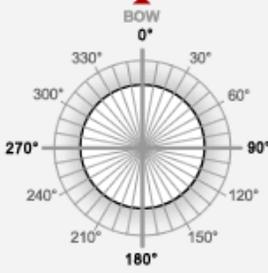

Elevation Range:
Must span at least 5°

From: °
To: °

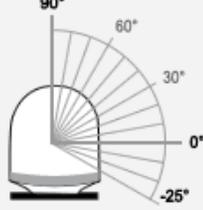


Understanding the Cumulative View

The No-Transmit Zones page displays a diagram that indicates the cumulative azimuth and elevation ranges of the no-transmit zones you set up. The circumference of the circle indicates azimuth, while the radius indicates elevation.

In the example shown here, the following no-transmit zones are set up:

- Zone #1 (purple) = Azimuth: 170° to 190°, Elevation: -25° to 20°
- Zone #2 (blue) = Azimuth: 15° to 55°, Elevation: 30° to 90°

Figure 4-6 Cumulative View of All No-Transmit Zones

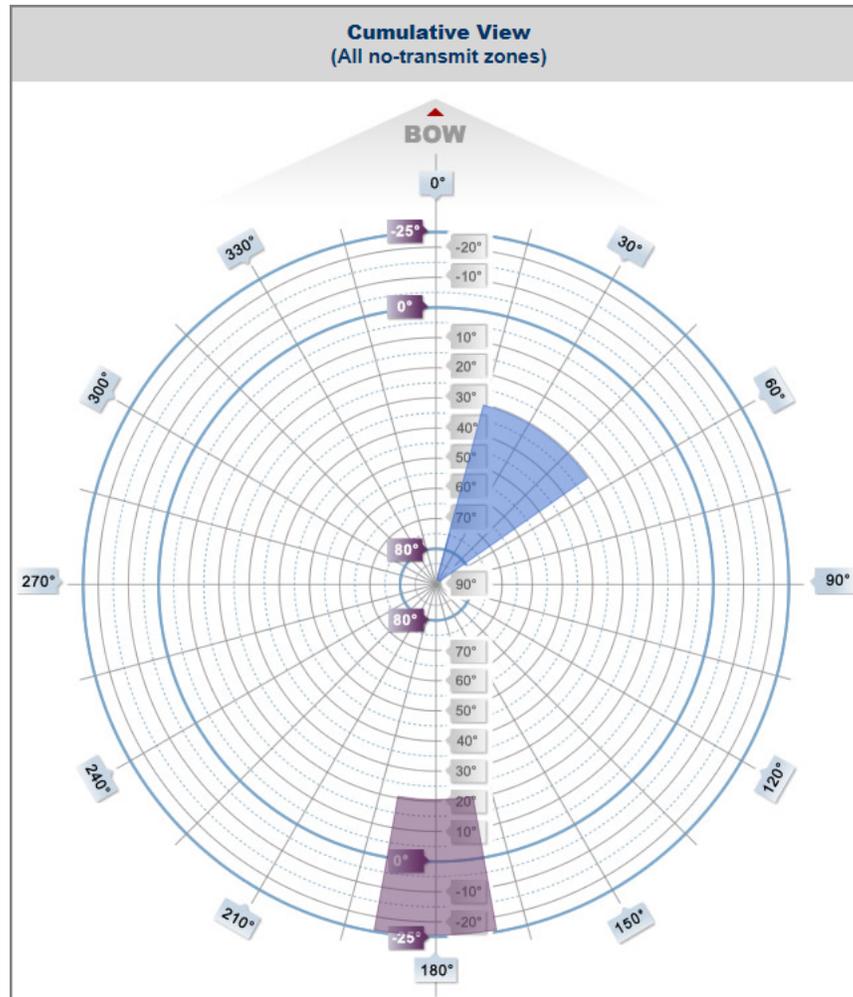

Disabling No-Transmit Zones

You can disable your programmed no-transmit zones to temporarily remove all restrictions on transmissions. This function permits the antenna to ignore the zones; it does not delete them from the system's memory.



CAUTION

Disabling no-transmit zones allows the antenna to transmit in any direction, even if the antenna is pointing in an area accessible to passengers and crew. Make sure everyone stays the minimum safe distance away from the antenna while it is in use (see [“RF Radiation Hazard Area”](#) on page 6).

To disable the no-transmit zones, follow these steps:

1. At the TracPhone V7-IP web interface, click the **Settings** tab. Then click **No-Transmit Zones**.
2. Click **Edit**.
3. If the Login window appears, log in with the Administrator password.
4. In No-Transmit Zone Ranges, click **Ignore Zones**.
5. Click **Save Settings**.
6. At the confirmation message, click **Ignore Zones**.

Figure 4-7 Disabling No-Transmit Zones

No-Transmit Zone Ranges:

Enforce Zones
The antenna will not transmit within the zone(s) specified below.

Ignore Zones
The antenna will be able to transmit in any direction without restriction. Be sure everyone stays the minimum safe distance away from the antenna.

Clearing No-Transmit Zones

You can clear all no-transmit zones from the system's memory. Unlike disabling zones, clearing zones permanently deletes them.



CAUTION


Clearing no-transmit zones allows the antenna to transmit in any direction without restriction. Make sure everyone stays the minimum safe distance away from the antenna while it is in use (see ["RF Radiation Hazard Area"](#) on page 6).

NOTE: This procedure explains how to clear no-transmit zones using the TracPhone V7-IP web interface. If you prefer, you may use the front panel LCD menu instead (go to Diagnostic Tools > Factory Reset).

To clear the no-transmit zones, follow these steps:

1. At the TracPhone V7-IP web interface, click the **Settings** tab. Then click **No-Transmit Zones**.
2. Click **Edit**.
3. If the Login window appears, log in with the Administrator password.
4. In No-Transmit Zone Ranges, click **Clear Zones**.
5. At the confirmation message, click **Clear Zones**.

Figure 4-8 Clearing No-Transmit Zones

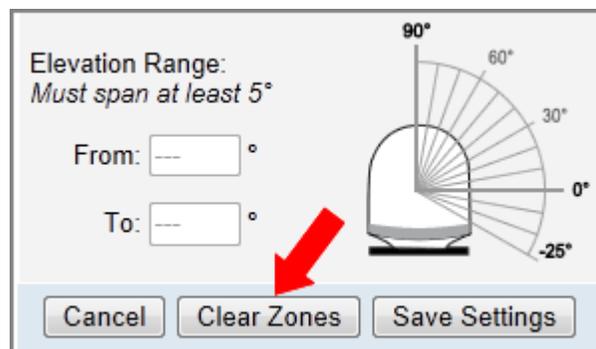



5. Voice Connections

This section covers everything you need to know about the enhanced voice service. It explains how to place calls, add additional phone lines and virtual numbers, check VoiceMail, send a fax, and access your voice account online.

Contents

Voice Service Overview	43
Making a Ship-to-Shore Call	44
Making a Shore-to-Ship Call	46
Adding Phone Lines	47
Virtual Numbers.....	50
VoiceMail	51
Faxing.....	53
Accessing Your Voice Account	55



Voice Service Overview

KVH's enhanced voice service – Voice over IP (VoIP) optimized for satellite communications – allows you to make and receive phone calls via the TracPhone system and the mini-VSAT Broadband service. Voice traffic is given priority on the network over standard Internet data to ensure the highest quality voice connections at all times.


Important!

The TracPhone V7-IP voice service will not provide Automatic Number Identification or Automatic Location Information capabilities associated with emergency services, such as 911 or E911. In addition, the voice service will not work in the event of either a network service outage or a power failure. Therefore, it is critical that you maintain your vessel's separate distress and safety communications system for emergency calls. Be sure to inform anyone who may use the TracPhone V7-IP of the limitations of emergency services. *The manufacturer, distributor, and service provider shall not be liable for, and expressly disclaim, any direct or indirect damages, claims, losses, expenses, liabilities, actions, risks, or harms arising out of or related to the services provided through this equipment, including without limitation, emergency services.*

How the Voice Service Works

When you dial a phone number using the ship's analog phone, the TracPhone system converts its analog signal into digital VoIP data and transmits it over the mini-VSAT Broadband network to an Internet-based SIP (session initiation protocol) server. The digital VoIP data is then converted back into its original analog signal and routed via a proxy server to the appropriate public switched telephone network (PSTN). Finally, the telephone network's carrier completes the call to ring the desired shore phone line.

Figure 5-1 Voice Service Call Routing

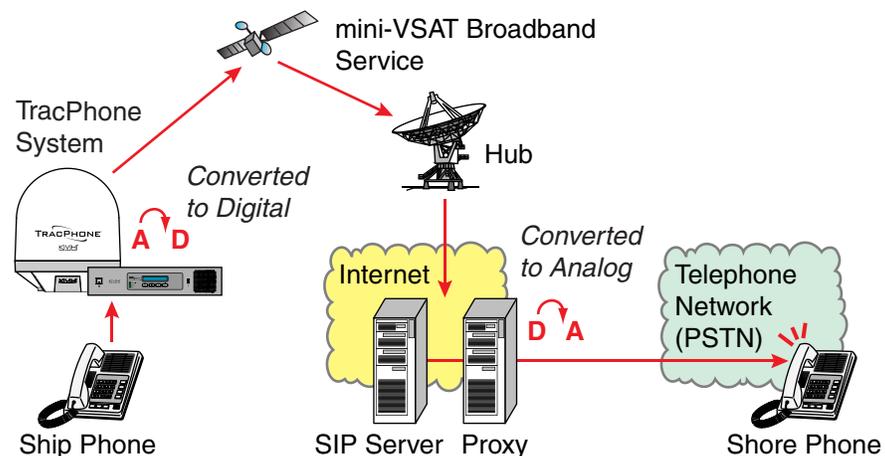

Making a Ship-to-Shore Call

To place a call from the vessel, follow these steps:

1. Make sure the TracPhone system is online.
2. Pick up the handset on any phone connected to the ICM. You should hear a dial tone. If you don't, check the phone line status on the web interface's Home tab.
3. Dial the phone number you wish to call. The dialing sequence you use depends on the vessel's Line 1 phone number.

Dialing a Number Outside the Country Assigned to Line 1

Dial the number as an international call:

<**International prefix**, as originating from your Line 1 country>
+ <**country code**>
+ <**area/city code**>
+ <**local phone number**>

Dialing a Number Within the Country Assigned to Line 1

Dial the number as an in-country call:

<**area/city code**>
+ <**local phone number**>


Dialing a Number Within the Country & Area Code Assigned to Line 1

Dial the number as a local call:

<**local phone number**>

NOTE: When you place a call, your voice travels to a satellite in space then back to Earth. This transit will cause a brief delay (approximately 1/2 second) in your conversation.

Figure 5-2 Ship-to-Shore Calls (Example)

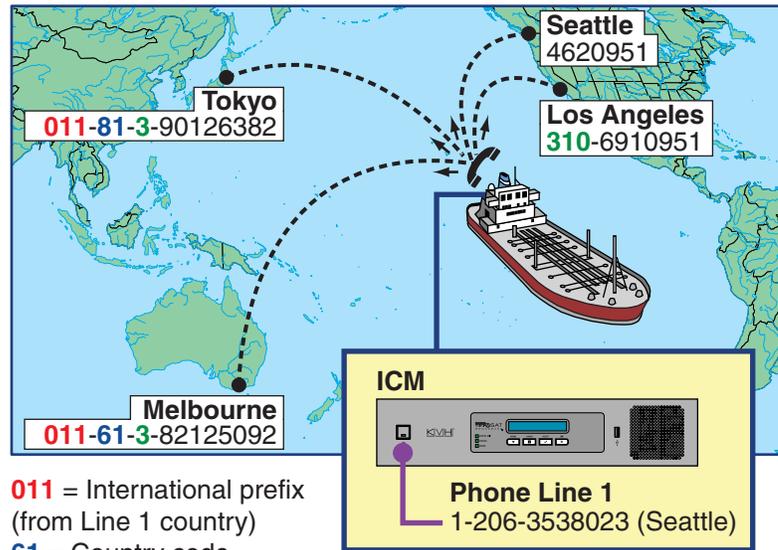

011 = International prefix
(from Line 1 country)
61 = Country code
3 = Area/City code
82125092 = Local phone no.

On a fixed rate plan, all calls are charged termination fees as calls originating from the U.S., regardless of vessel location or phone number. Long distance rates will apply. On a metered rate plan, incoming and outgoing calls are charged one flat rate per minute. For details, refer to the rate sheet available online at www.kvh.com/mvbcustomercenter.


Making a Shore-to-Ship Call

People on shore call your vessel by dialing one of your vessel's phone numbers. They are billed international and long-distance charges based on the vessel's phone number, and not on the location of the vessel. Therefore, when you set up phone numbers during service activation, it is advisable to select the same country code and area/city code you use at home. This will allow family, friends, and business associates in your home region to call your vessel as an in-country call.

NOTE: If you wish to change your vessel's phone numbers, contact KVH's Satellite Airtime & Product Activation department. See "[Contacting the Satellite Airtime and Product Activation Department](#)" on page 15.

In the example shown here, people in Los Angeles who call the vessel's U.S.-based phone number will not be charged international fees.

Figure 5-3 Shore-to-Ship Calls (Example)

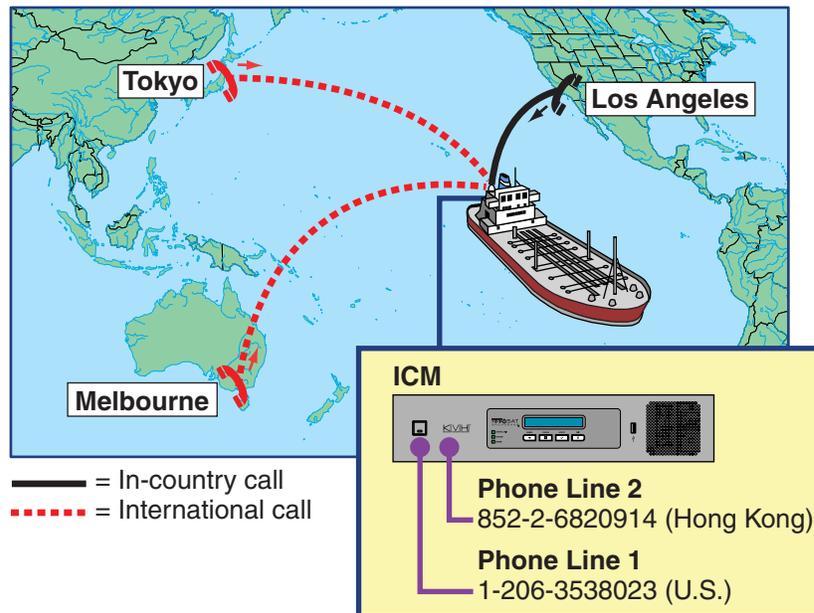

Adding Phone Lines

The ICM supports two phone lines, one for each "Voice Line" jack. As a result, the system supports two simultaneous voice calls. However, KVH offers the following optional accessories that add additional phone lines to support three or more simultaneous calls:

- Multimedia Terminal Adapter (MTA) (see "[Additional MTA\(s\)](#)" on page 48)
- Crew Calling Gateway (see "[Crew Calling Gateway](#)" on page 49)

NOTE: Only voice calls carried on phone lines 1 and 2 are prioritized over general data traffic.


Additional MTA(s)

If your vessel requires more than two phone lines, you may install one or two multimedia terminal adapters (MTAs) (KVH part no. 19-0504) to enable up to four additional lines. This allows the system to sustain three or more simultaneous calls. An additional monthly fee applies to each additional line. In addition, your service plan must accommodate the minimum data rate required (bidirectional) to support these additional lines:

- 1 or 2 phone lines - 128 kbps
- 3 or 4 phone lines - 256 kbps
- 5 or 6 phone lines - 512 kbps

Contact your dealer/distributor for details.

Figure 5-4 Multiple MTA Connections

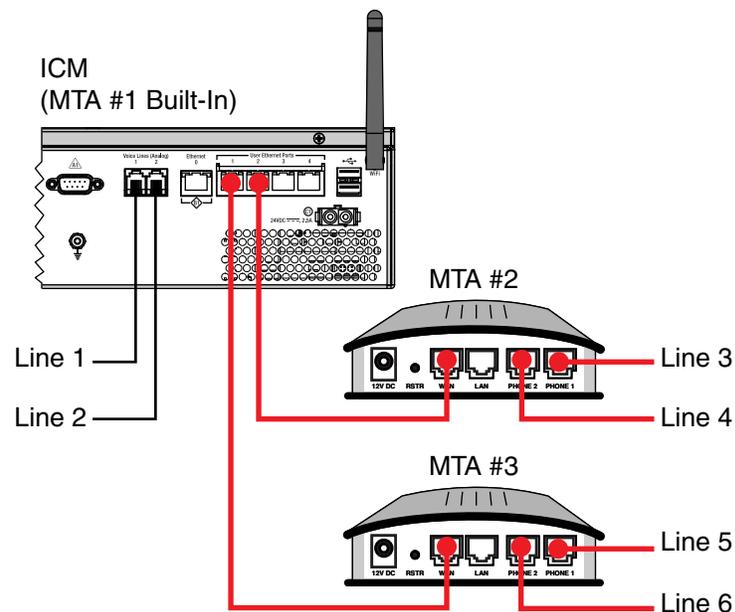

Crew Calling Gateway


The optional Crew Calling Gateway (KVH part no. 72-0349) adds four additional phone lines for crew members and charter passengers to place ship-to-shore calls using prepaid calling cards. Since the ICM also provides two main voice lines, the TracPhone V7-IP may support up to six simultaneous voice calls with the Crew Calling Gateway installed. To support multiple concurrent calls, your service plan must accommodate the minimum data rate required (bidirectional) to support the total number of calls:

- 1 or 2 concurrent calls - 128 kbps
- 3 or 4 concurrent calls - 256 kbps
- 5 or 6 concurrent calls - 512 kbps

Contact your dealer/distributor for details.

NOTE: As an alternative to the external Crew Calling Gateway, one of the ICM's built-in phone lines can be configured for Crew Calling functionality (KVH part no. 95-0036-1008). Contact KVH Network Services at networkservices@kvh.com for details.

Figure 5-5 Crew Calling Gateway Connections

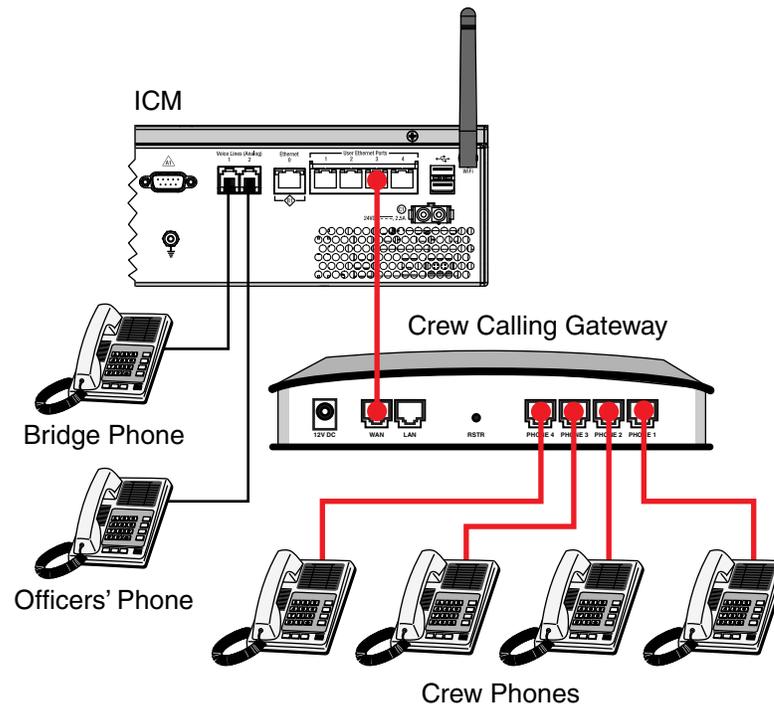

Virtual Numbers


For an additional fee, you may assign up to five virtual phone numbers to each vessel phone line (10 total). Each of these numbers can be set up with a different country code and area/city code, allowing people on shore within those regions to avoid international or long-distance charges when they call the vessel.

To set up virtual numbers, contact KVH's Satellite Airtime & Product Activation department. See ["Contacting the Satellite Airtime and Product Activation Department"](#) on page 15.

NOTE: Each virtual number you set up will forward calls to a specific phone line and jack on the ICM (whichever line you requested during setup). Only phones that are connected to that jack will ring when someone dials the virtual number.

In the example shown here, the vessel's company has offices in Tokyo and Melbourne. Therefore, they set up Japanese and Australian virtual numbers so that their employees on shore can call the vessel without running up an international phone bill.

Figure 5-6 Virtual Numbers (Example)

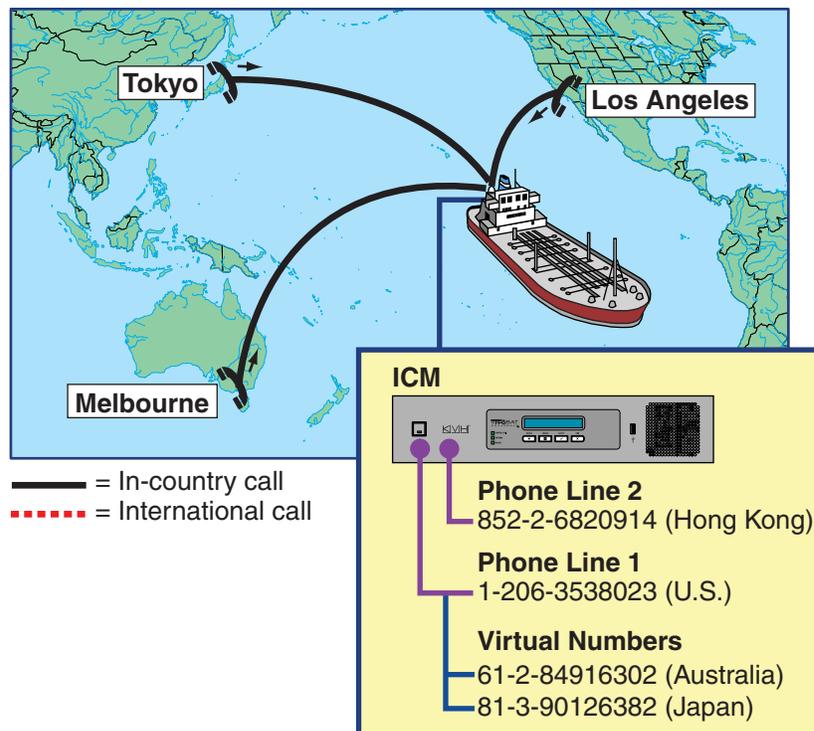

VoiceMail

KVH's enhanced voice service offers a similar suite of features as you might find with any landline telephone service. One of these features is VoiceMail.

With VoiceMail, people who call the vessel may record a message if you are unable to answer the call or the line is busy. You can then play back and listen to your messages anytime (24/7) from anywhere, even if you are not currently onboard the vessel.

Recording a VoiceMail Personal Greeting

To record your VoiceMail personal greeting, follow these steps:

1. Pick up the handset on any phone connected to the ICM. You should hear a dial tone.
2. Dial **123#** to connect to the VoiceMail system.
3. Press **2** to access your mailbox.
4. Press **1** to access your personal greeting.
5. Press **2** to change your greeting. You will be prompted to record your greeting.
6. Press **1** to listen to your personal greeting.
7. When you are satisfied with your greeting, press **3** to accept and activate your greeting. You will hear the message "Your personal greeting has been activated."

Listening to Your VoiceMail Messages

If you hear a fast dial tone pulse in the phone's handset, you have new VoiceMail messages. To listen to your VoiceMail messages, follow these steps:

1. Dial **123#** to connect to the VoiceMail system.
2. Press **1** to listen to your messages.
3. Follow the spoken instructions to listen to, save, and/or delete your messages.

Listening to Your Messages on Shore

You still have access to your VoiceMail messages when you disembark the vessel. Choose one of the following options:

- **Use a computer:** Go to your voice account web page (see ["Accessing Your Voice Account" on page 55](#)). Then click the **VoiceMail** button.
- **Use a regular landline telephone:** Dial the number for your main vessel phone line (Line 1), press *, then enter your PIN (provided during service activation).

Faxing

You can fax documents via the enhanced voice service. Connect a fax machine to either "Voice Line" jack on the ICM and dial the fax number as you would a voice call (see ["Making a Ship-to-Shore Call" on page 44](#)).


NOTE: Faxing requires 70 kbps bandwidth for sending and up to 90 kbps bandwidth for receiving. When fax and voice are used simultaneously, the bandwidth requirement increases to between 100 kbps and 170 kbps.

For extremely reliable faxing, KVH offers the UCH-250 fax server (see ["UCH-250 Fax Server" on page 54](#)). The UCH-250 avoids the industry-wide problem of dropped or incomplete faxes commonly associated with faxing over Voice over IP (VoIP) connections.

UCH-250 Fax Server

Faxing over Internet Protocol can be unreliable at times (normally an 80% success rate). Glitches like latency, packet loss, and jitter, common with any VoIP connection, can interrupt the synchronization necessary for fax communications. KVH's optional UCH-250 Fax Server (KVH part no. 19-0520) overcomes these limitations by providing a dedicated fax line with the reliability of a fully managed, store-and-forward system. In addition to installing the fax server, you will need to activate the supplemental fax service. Contact your dealer/distributor for details.

Figure 5-7 UCH-250 Fax Server Connections

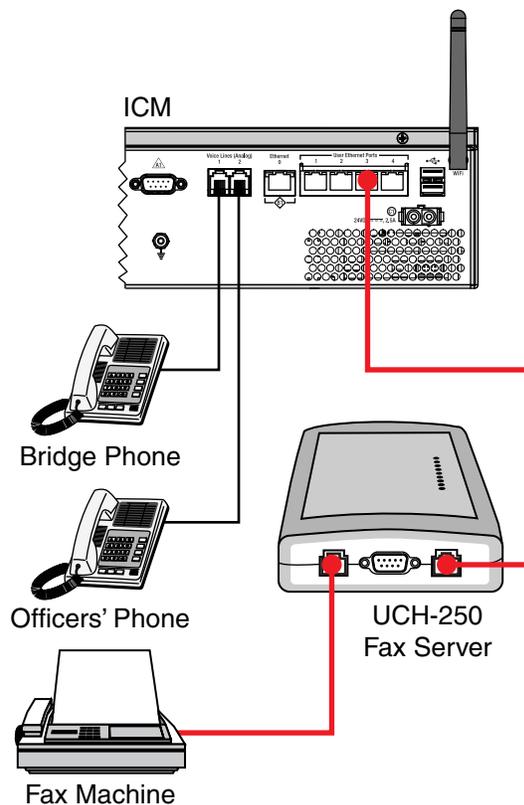

Accessing Your Voice Account

You can manage your account online at KVH's Enhanced VoIP Service Account Center. You can view and configure all of the various calling features available to you, as well as view account information and listen to VoiceMails. To log onto the site, follow these steps:

1. Go to <http://kvh.myaccountcenter.net>.
2. At the login page, enter your Line 1 phone number and PIN, provided during service activation. Then click **Login**.

Figure 5-8 Enhanced VoIP Service Account Center


The screenshot displays the 'mini-VSAT Broadband Enhanced VoIP Service Account Center' interface. At the top right, the logo for 'KVH INDUSTRIES MINI-VSAT BROADBAND' is visible. The page title is 'mini-VSAT Broadband Enhanced VoIP Service'. Below the title, there is a navigation bar with 'Account Center ::' and a 'Logout' link. The main content area is titled 'My Information' and is divided into two columns. The left column shows 'Your Device ID: 00109911fd18', 'Phone Line(s): View all phone numbers', a dropdown menu for 'Line 1 - Phone Number: 14013674517', and 'Your calling plan is: us unlimited (no canada)'. The right column shows 'Current Usage' for the period '14-Jul-2012 to 14-Aug-2012' and 'Calling Plan Usage: Local & National(Unlimited) -- Unlimited'. Below this, there is a message: 'You have 0 new VoiceMail messages.' A section of support information follows, with links for 'Support', 'Billing/Activation', and 'Tech Support'. A row of four icons provides quick access to 'Call History', 'Find Rates', 'VoiceMail', and 'Manage Features'. A section titled 'Test your Internet connection speed:' includes a link to 'www.voipreview.org'. A final section says 'Finished with Enhanced VoIP Service Account Center: Please Logout.' The footer contains navigation links for 'www.kvh.com', 'Your Account Home', and 'Technical Support', along with a promotional message for TracVision and an image of TracVision satellite devices.

6. Network Configuration

This section explains the three main options for connecting your vessel's computers to the TracPhone system: wired DHCP, wireless DHCP, and static IP. (You can use one, two, or all three configurations to meet your network requirements.) It also provides an overview of the advanced network settings that are available on the ICM.

Contents


Wired DHCP Configuration	59
Wireless DHCP Configuration	60
Configuring Computers for DHCP	63
Static IP Configuration	68
LAN Settings on ICM	71
Cache Settings on ICM	73
Physical Ethernet Port Configurations	74
CommBox Settings on ICM	78
Reset to Factory Configuration	79

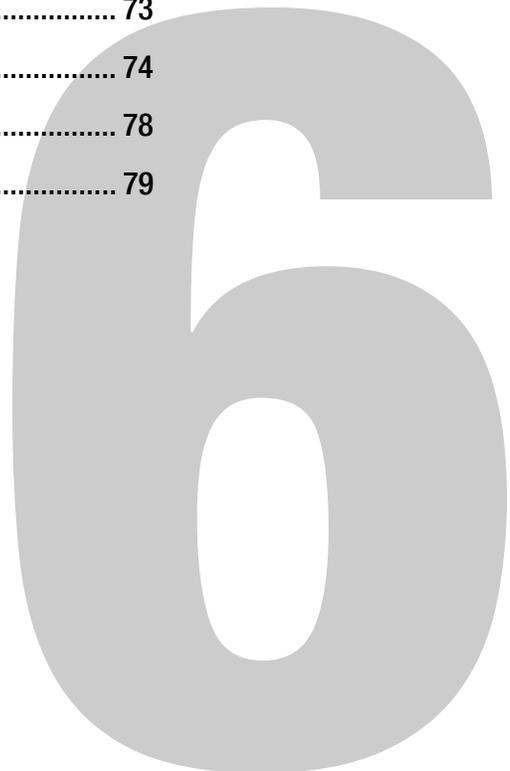

Wired DHCP Configuration

In a wired DHCP configuration, vessel computers connect to the ICM via Ethernet cables and receive IP addresses from the ICM. This is the system's default configuration.

Figure 6-1 Wired DHCP Configuration (Example)

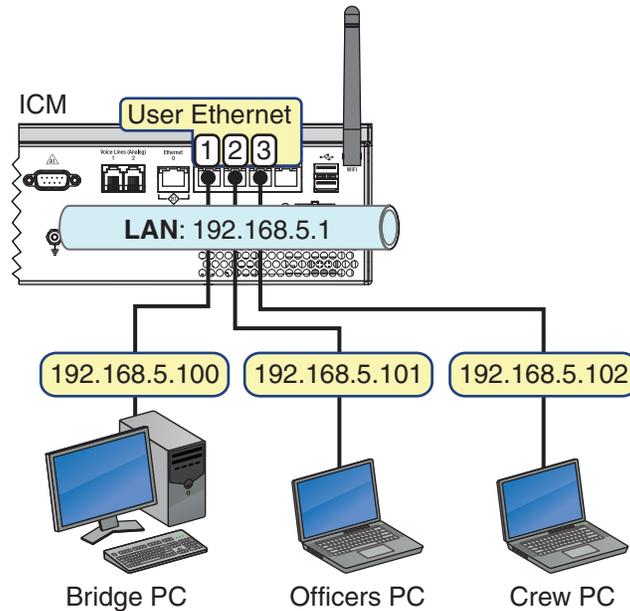

To configure a wired DHCP network connection, follow these steps:

1. Connect your computers and other network devices to any of the four "User Ethernet" ports on the rear panel of the ICM.

NOTE: Use straight-through 100 Mbps fast Ethernet UTP CAT5 cables (or better) with RJ45 connectors.

2. Make sure the computers are configured for DHCP addressing (see ["Configuring Computers for DHCP" on page 63](#)).


Wireless DHCP Configuration

In a wireless (Wi-Fi) DHCP configuration, vessel computers connect to the ICM via its built-in wireless access point (WAP) and receive IP addresses from the ICM.

Important!

The range of the ICM's WAP will depend on the layout and structure of the vessel. For example, wireless signals degrade when passing through bulkheads and near metal masses. If the system is installed on a steel vessel, you might need a special WAP and the services of a technician with advanced networking expertise.

Figure 6-2 Wireless DHCP Configuration (Example)

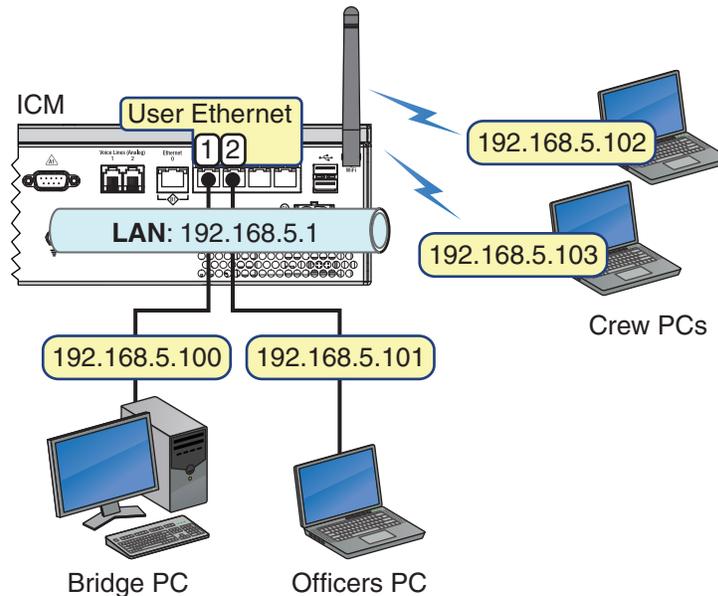

To configure a wireless DHCP network connection, follow these steps:

1. Make sure the computers are equipped with a wireless network interface card and configured for DHCP addressing (see [“Configuring Computers for DHCP”](#) on page 63).
2. Enable the wireless access point on the ICM and apply security settings to protect it from outside intrusion (see [“Wireless Settings on ICM”](#) on page 61).

Wireless Settings on ICM

NOTE: If the optional CommBox software is enabled, or the ICM is configured for Dual Dome-Secondary or Legacy mode, the Network Settings page of the ICM will not contain any configurable fields. (See “CommBox Features” on page 89 for details on enabling the CommBox software. See “Physical Ethernet Port Configurations” on page 74 for details on changing the ICM’s configuration.)

To enable a wireless network connection and protect it from outside intrusion, follow these steps:

1. At the TracPhone V7-IP web interface, click the **Settings** tab. Then click **Network Settings**.
2. In Wireless Settings, click **Edit**.
3. If the Login window appears, log in with the Administrator password.
4. Select **Enabled**.
5. Set the following wireless options:

SSID: Keep the default name, or enter a unique name for the wireless network.

Protocol: Select either protocol – **802.11b** or **802.11g**.

Security: Select either security type – **WPA2** or **WEP (128-bit)**.

Password/Passphrase: If you selected WPA2, enter a password (between 8-20 characters). If you selected WEP, enter a passphrase (must be 13 characters).

Channel: Keep the default channel, or select any other channel for wireless communications.

6. Click **Save**.
7. At the confirmation message, click **Save**.

Figure 6-3 Wireless Settings

Wireless Settings	
State:	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled (default)
SSID:	<input type="text" value="KVH-130101379"/> (Up to 32 characters)
IP Address:	<input type="text" value="192 . 168 . 5 . 1"/>
Protocol:	<input type="text" value="802.11b"/> ▼
Security:	<input type="text" value="WPA2"/> ▼
Password:	<input type="text" value="●●●●●●"/> (between 8 to 20 characters)
Channel:	<input type="text" value="7"/> ▼
<input type="button" value="Cancel"/> <input type="button" value="Save"/>	

Configuring Computers for DHCP

To configure your computers for DHCP, allowing them to receive IP addresses from the ICM, follow the steps for your operating system:

- [“Windows 8 DHCP Settings”](#)
- [“Windows 7 or Windows Vista DHCP Settings” on page 64](#)
- [“Windows XP DHCP Settings” on page 65](#)
- [“Mac OS X DHCP Settings” on page 67](#)


NOTE: KVH Technical Support fully supports the five operating systems described here: Windows 8, Windows 7, Windows Vista™, Windows XP, and Macintosh® OS X.

Windows 8 DHCP Settings

To configure a Windows 8 computer for DHCP addressing, follow these steps:

1. In Control Panel, double-click **Network and Sharing Center**.
To open the Control Panel, go to the desktop, select Settings from the Charms bar, then select Control Panel.
2. In Network and Sharing Center, double-click the **Ethernet** link for the Ethernet connection you are using for mini-VSAT Broadband.
3. In the Ethernet Status dialog box, click **Properties**. *If this screen doesn't appear, just skip to Step 4.*
4. In the Ethernet Properties dialog box, on the **Networking** tab, select **Internet Protocol Version 4**, and then click **Properties**.
5. In the Internet Protocol Properties dialog box, select **Obtain an IP address automatically** and **Obtain DNS server address automatically**. Then click **OK**.

Figure 6-4 Windows 8 - Internet Protocol Properties

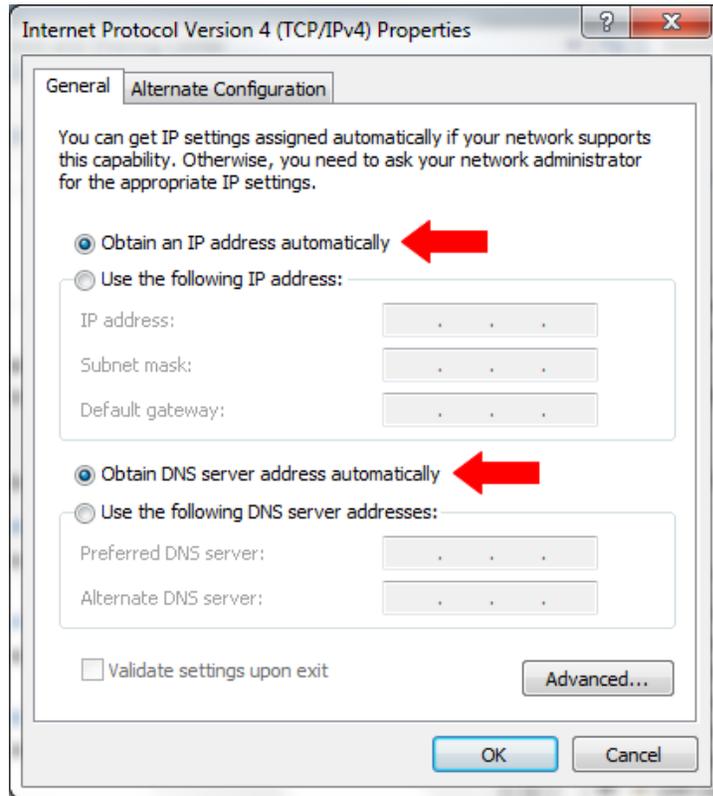

6. In the Ethernet Properties dialog box, click **Close**.


Windows 7 or Windows Vista DHCP Settings

To configure a Windows 7 or Windows Vista computer for DHCP addressing, follow these steps:

1. In Control Panel, double-click **Network and Sharing Center**. (You might need to click **Network and Internet** first.) *You can find the Control Panel either through the Start menu or "My Computer."*
2. In Network and Sharing Center, double-click the **Local Area Connection** (Windows 7) or **View Status** (Windows Vista) for the Ethernet connection you are using for mini-VSAT Broadband.
3. In the Local Area Connection Status dialog box, click **Properties**. *If this screen doesn't appear, just skip to Step 4.*

4. In the Local Area Connection Properties dialog box, click the **Networking** tab, select **Internet Protocol Version 4**, and then click **Properties**.
5. In the Internet Protocol Properties dialog box, select **Obtain an IP address automatically** and **Obtain DNS server address automatically**. Then click **OK**.

Figure 6-5 Windows 7/Windows Vista - Internet Protocol Properties

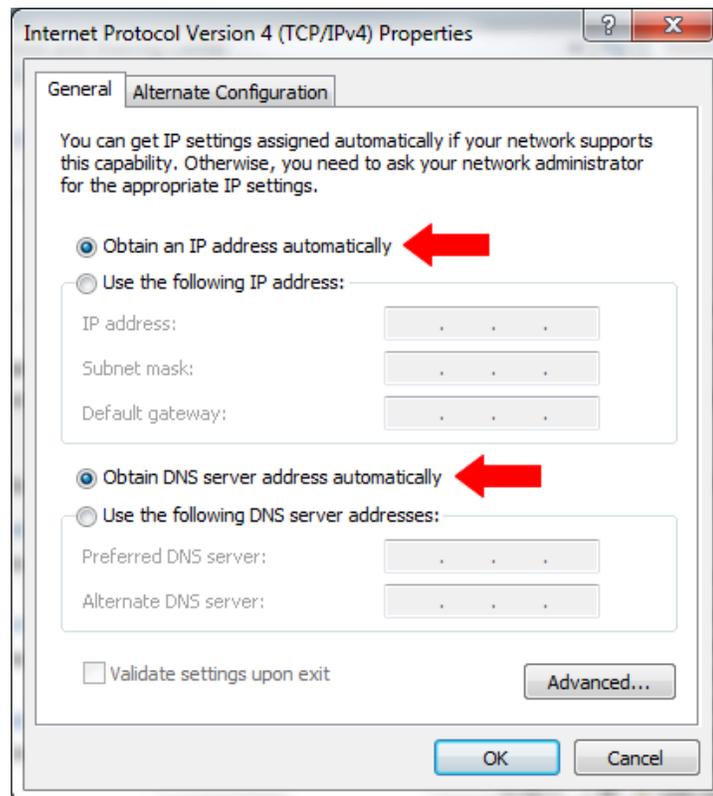

6. In the Local Area Connection Properties dialog box, click **OK**.


Windows XP DHCP Settings

To configure a Windows XP computer for DHCP addressing, follow these steps:

1. In Control Panel, double-click **Network Connections**. *You can find the Control Panel either through the Start menu or "My Computer."*

2. In Network Connections, double-click the **Local Area Connection** for the Ethernet connection you are using for mini-VSAT Broadband.
3. In the Local Area Connection Status dialog box, click the **General** tab. Then click **Properties**. *If this screen doesn't appear, simply skip to Step 4.*
4. In the Local Area Connection Properties dialog box, click the **General** tab, select **Internet Protocol (TCP/IP)**, and then click **Properties**.
5. In the Internet Protocol (TCP/IP) Properties dialog box, click the **General** tab. Then select **Obtain an IP address automatically** and **Obtain DNS server address automatically**. Then click **OK**.

Figure 6-6 Windows XP - Internet Protocol (TCP/IP) Properties

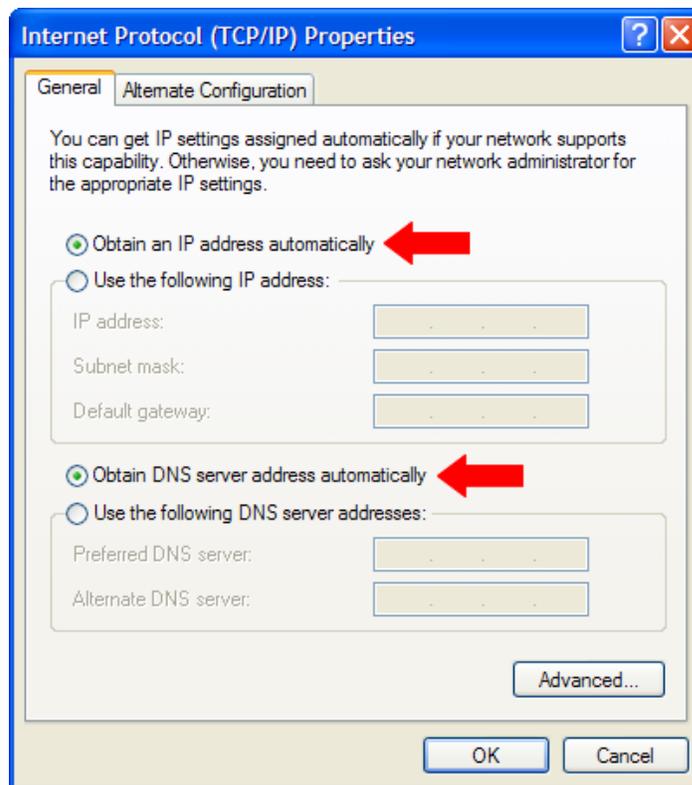


6. In the Local Area Connection Properties dialog box, click **OK**.
7. Restart your computer.

Mac OS X DHCP Settings

To configure a Mac OS X computer for DHCP addressing, follow these steps:

1. In System Preferences, click **Network**.
2. In the Network dialog box, select **Ethernet** then set the following:
 - Location: **Automatic**
 - Configure IPv4: **Using DHCP**

Figure 6-7 Mac OS X - Network

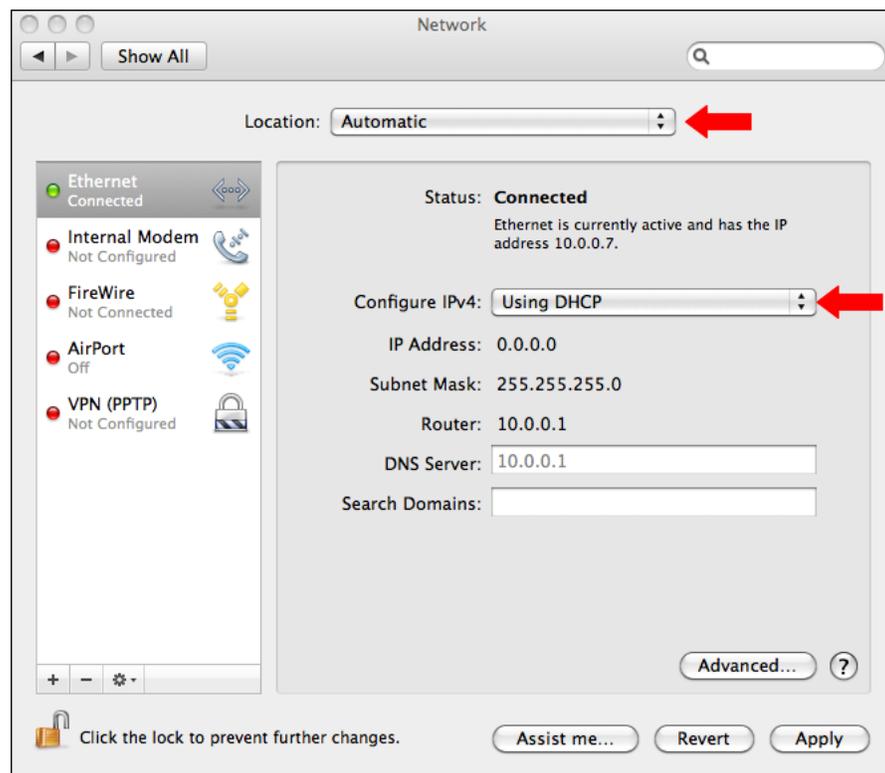

3. Click **Apply**.
4. Restart the computer.


Static IP Configuration

In a static IP configuration, an onboard network device is assigned a public IP address that can be accessed directly from the Internet. It does not receive an IP address from the ICM.

Important!


A static IP address provides an open, unprotected connection to the Internet. Therefore, you should only assign a static IP address to a secure device, such as a firewall router.

Figure 6-8 Static Configuration (Example)

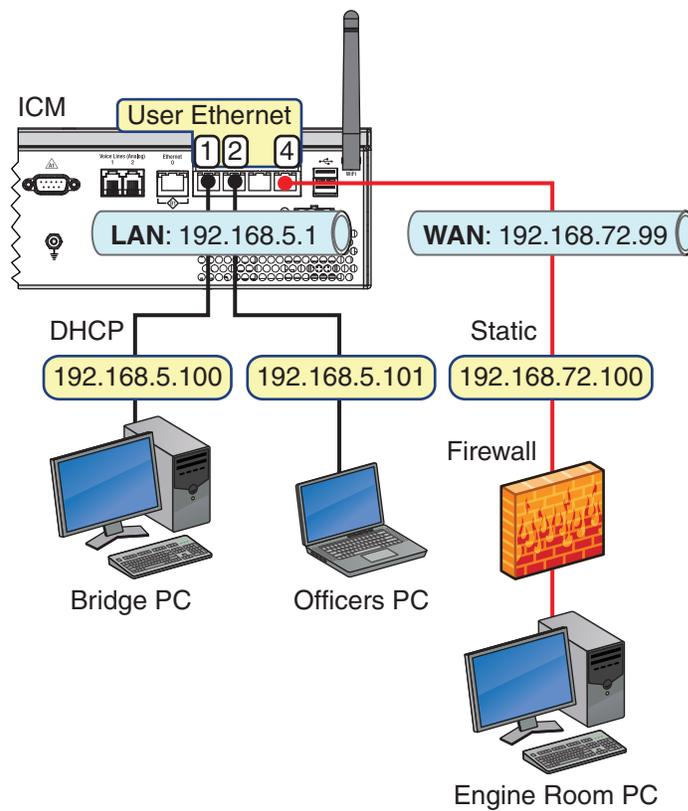

A static IP connection is commonly used by commercial vessels to enable remote monitoring and IT management from shore, and to allow a vessel's crew to access their company's secure VPN (virtual private network).

Figure 6-9 Common Static IP Applications

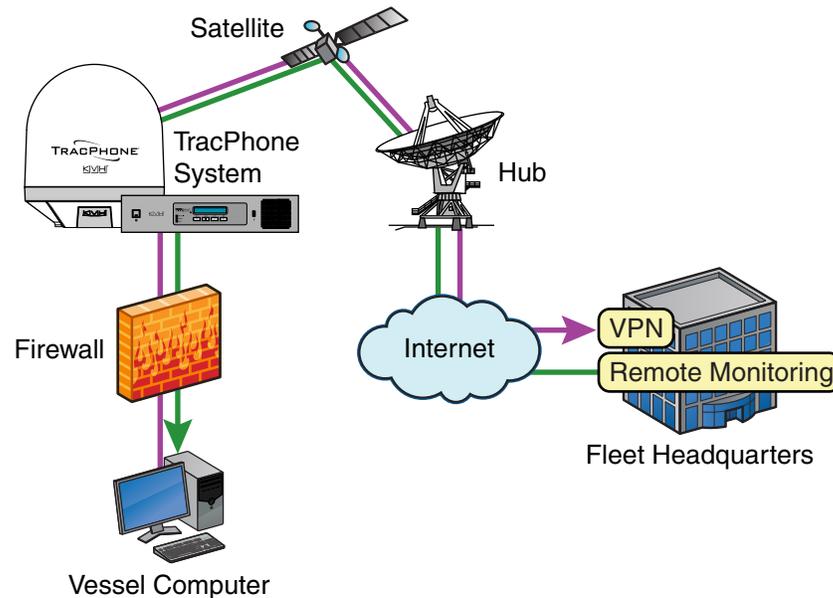

Setting Up a Static IP Connection

To establish a static IP network connection, follow these steps:


1. Make sure the system is activated for mini-VSAT Broadband service.
2. Turn on the TracPhone system and make sure it is "Online." The system must remain online to allow KVH to set up your system over the satellite link.
3. Fill out the online form at www.kvh.com/staticip. Be sure to read all of the details on this form. An additional monthly fee for static IP service will apply.

Important!

Only the "User Ethernet 4" port on the ICM can be used to connect static IP devices, as this port bypasses the ICM's local subnet to connect directly to the built-in modem. Ports 1, 2, and 3 are configured for DHCP addressing only.

4. Connect your network device or computer to the "User Ethernet 4" port on the rear panel of the ICM (see [Figure 6-8 on page 68](#)). Use a straight-through CAT5 (or better) Ethernet cable with RJ45 connectors.
5. At the TracPhone V7-IP web interface, select the **Static IP** physical Ethernet port configuration. Refer to "[Physical Ethernet Port Configurations](#)" on page 74 for details.
6. When you receive an e-mail from KVH confirming that your static IP address has been set up, configure the TCP/IP properties of your network device or computer with the static IP data provided in the e-mail. For details on accessing your computer's TCP/IP properties, refer to "[Configuring Computers for DHCP](#)" on page 63.

Figure 6-10 Static IP Data

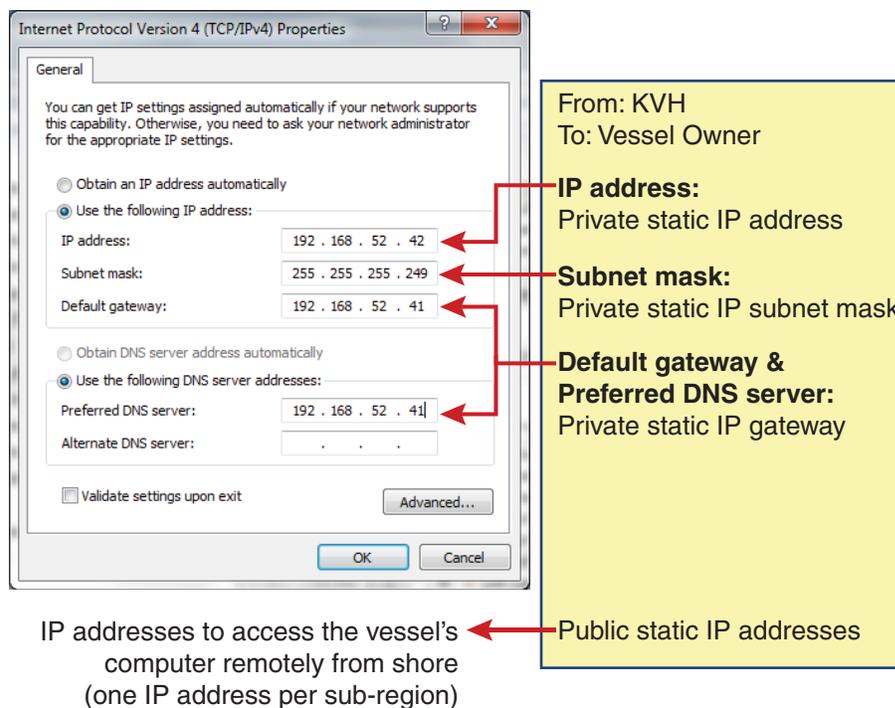

NOTE: A unique public static IP address is associated with each sub-region in the region you requested. Therefore, users on shore must know where the vessel is located and use its corresponding IP address to access the onboard computer remotely.

LAN Settings on ICM

By default, the ICM has a gateway address of 192.168.5.1 and assigns IP addresses in the 192.168.5.100-200 range (DHCP configurations only). If this configuration conflicts with another onboard network, you may change these settings.

Important!

The default LAN settings work well for most installations. Do not change these settings unless absolutely necessary.

NOTE: If the optional CommBox software is enabled, or the ICM is configured for Dual Dome-Secondary or Legacy mode, the Network Settings page of the ICM will not contain any configurable fields. (See ["CommBox Features" on page 89](#) for details on enabling the CommBox software. See ["Physical Ethernet Port Configurations" on page 74](#) for details on changing the ICM's configuration.)

To change the ICM's LAN settings, follow these steps:

1. At the TracPhone V7-IP web interface, click the **Settings** tab. Then click **Network Settings**.
2. In LAN Settings, click **Edit**.
3. If the Login window appears, log in with the Administrator password.
4. Modify the IP Address, Subnet Mask, and DHCP Mode settings as necessary.
5. Click **Save**.
6. At the confirmation message, click **Save**.

Figure 6-11 LAN Settings

LAN Settings	
IP Address:	192 . 168 . 5 . 1 <i>Note: 192.168.0.1 is reserved for system use. Be sure to assign a different IP address.</i>
Subnet Mask:	255 . 255 . 255 . 0
DHCP Mode:	<input checked="" type="radio"/> Enabled (default) <input type="radio"/> Disabled DHCP Start: 192 . 168 . 5 . 100 DHCP End: 192 . 168 . 5 . 150
Reset to Defaults <input type="button" value="Cancel"/> <input type="button" value="Save"/>	

Cache Settings on ICM

By default, the local web cache is enabled on the ICM. This feature allows the ICM to temporarily store the content of web pages you visit, so they will load faster on subsequent visits. The local web cache should stay enabled to ensure the best possible web browsing experience. However, it can be disabled if necessary.

Important!


Do not change the cache settings unless absolutely necessary.

NOTE: If the optional CommBox software is enabled, or the ICM is configured for Dual Dome-Secondary or Legacy mode, the Network Settings page of the ICM will not contain any configurable fields. (See [“CommBox Features” on page 89](#) for details on enabling the CommBox software. See [“Physical Ethernet Port Configurations” on page 74](#) for details on changing the ICM's configuration.)

To disable the local web cache on the ICM, follow these steps:

1. At the TracPhone V7-IP web interface, click the **Settings** tab. Then click **Network Settings**.
2. In Cache Settings, click **Edit**.
3. If the Login window appears, log in with the Administrator password.
4. Select **Disabled**.
5. Click **Save**.
6. At the confirmation message, click **Save**.

Figure 6-12 Cache Settings

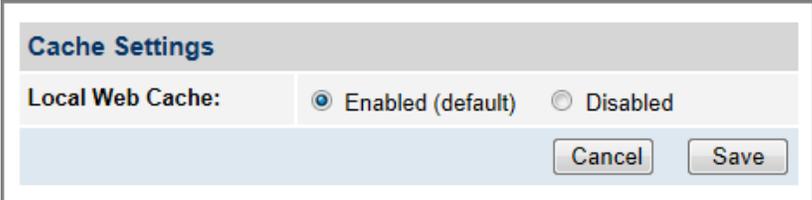

Cache Settings

Local Web Cache: Enabled (default) Disabled

Cancel Save

Physical Ethernet Port Configurations

By default, all four “User Ethernet” ports on the rear panel of the ICM are set up for a standard LAN configuration – the ICM assigns IP addresses to all devices connected to its network. However, at the TracPhone V7-IP web interface, you can modify the ICM to support any of the following alternate configurations:

- [“Static IP Port Configuration” on page 75](#)
- [“Dual Dome Port Configuration” on page 76](#)
- [“Legacy Port Configuration” on page 77](#)

Important!


If you select the Static IP, Dual Dome-Secondary, or Legacy configuration, you will not be able to use minivsat.kvh to access the web interface. You will need to enter the IP address of the ICM (default is 192.168.0.9 in Static IP and Legacy modes, 192.168.0.10 in Dual Dome-Secondary mode). In addition, if you select the Dual Dome-Secondary or Legacy configuration, you will not be able to change any other settings on the Network Settings page.

To select a physical Ethernet port configuration, follow these steps:

1. At the TracPhone V7-IP web interface, click the **Settings** tab. Then click **Network Settings**.
2. In Physical Ethernet Port Configuration, click **Edit**.
3. If the Login window appears, log in with the Administrator password.

4. Select the desired configuration from the **Configuration** drop-down menu. Then click **Save**.

Figure 6-13 Physical Ethernet Port Configuration Setting

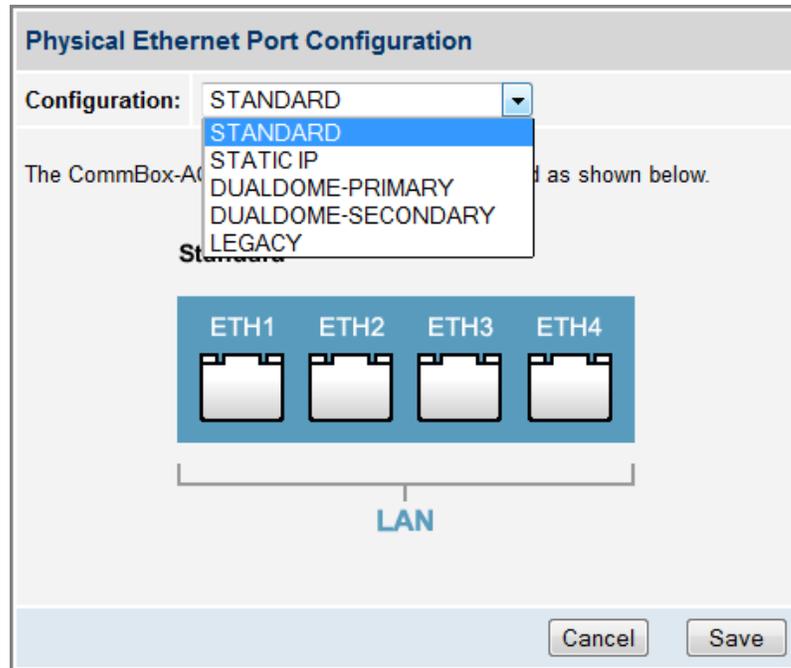


5. At the confirmation message, click **Save**.

Static IP Port Configuration

In a static IP configuration, the “User Ethernet 4” port bypasses the ICM’s local subnet to connect directly to the built-in modem. Ports 1, 2, and 3 remain configured for the LAN. See [“Static IP Configuration” on page 68](#) for details.

Figure 6-14 Static IP Configuration

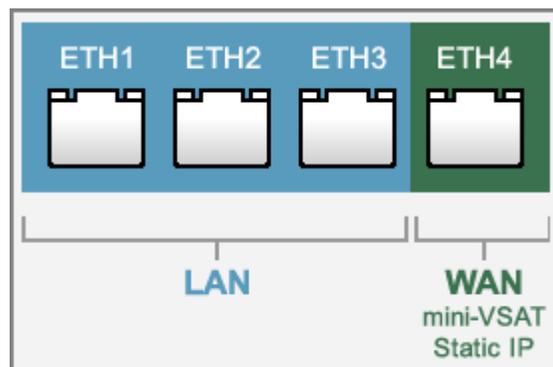


Dual Dome Port Configuration

If a second TracPhone system is installed as a backup, one of the "User Ethernet" ports on that secondary system's ICM must be connected to the "User Ethernet 4" port on the primary system's ICM.

Important!

Contact KVH Technical Support before you configure the secondary ICM (see ["Technical Support" on page 119](#)). KVH will need to modify a setting on the secondary ICM over the air to support a dual dome configuration.

Figure 6-15 Dual Dome Wiring (Example)

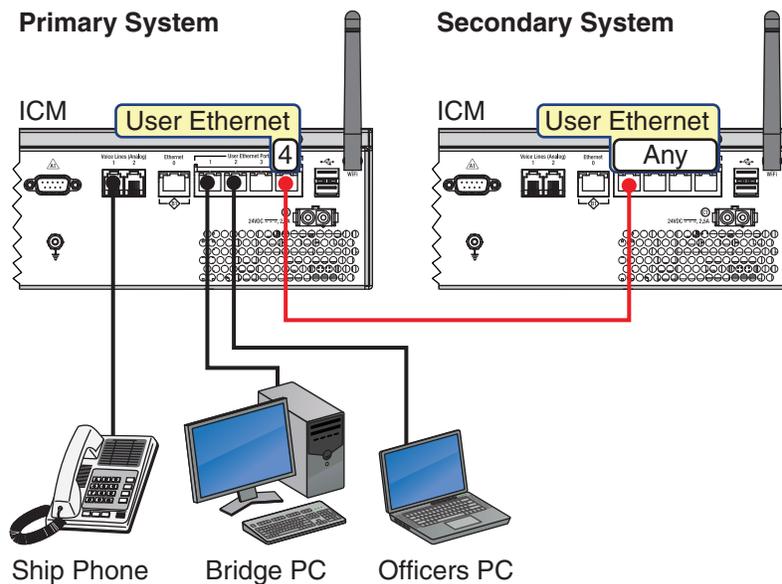

In this dual-dome configuration, the vessel's phones and network devices connect to the primary system. The "User Ethernet 1, 2, and 3" ports on the primary system's ICM remain configured for the LAN. The "User Ethernet" ports on the secondary system's ICM are configured as a bridge to the primary system's ICM. Whenever the primary system loses its connection to the mini-VSAT Broadband service (e.g., its view of the satellite becomes blocked), all voice and data traffic will automatically get routed through the "User Ethernet 4" port to the secondary system.

Figure 6-16 Dual Dome-Primary Configuration


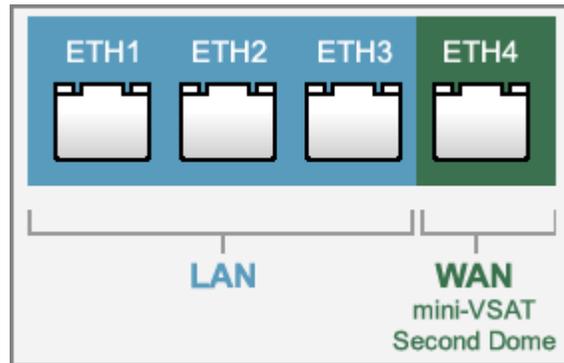


Figure 6-17 Dual Dome-Secondary Configuration

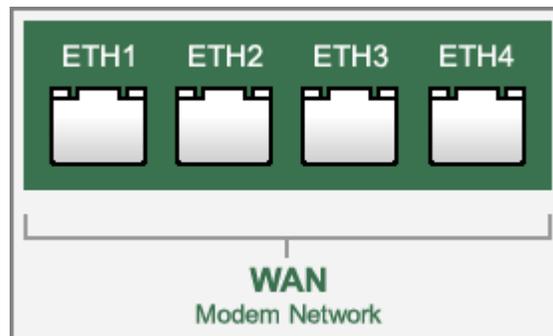


Legacy Port Configuration

Use the legacy configuration only if the ICM is replacing an older TracPhone V7 or V3 antenna system's belowdecks equipment. Do not use this mode with a TracPhone V3-IP, V7-IP, V11, or V11-IP antenna system.

In a legacy configuration, many of the ICM's features are disabled to make the configuration similar to a standard TracPhone V7 or V3.

Figure 6-18 Legacy Configuration

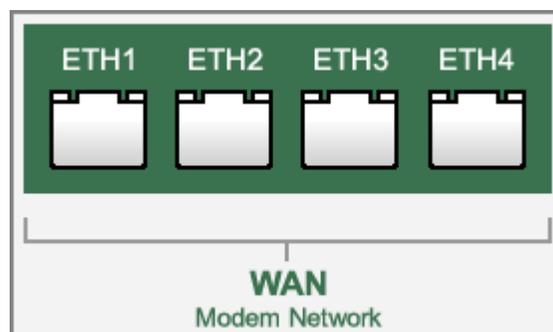

CommBox Settings on ICM

If the optional CommBox software is enabled, the ICM's network settings are configured by KVH over the air. The Network Settings page of the ICM will not contain any configurable fields.

NOTE: See "CommBox Features" on page 89 for details on enabling the CommBox software.

For complete details about the CommBox software, refer to the CommBox manual. To view the CommBox manual, follow these steps:

1. At the TracPhone V7-IP web interface, click the **CommBox** tab.

Figure 6-19 CommBox Tab




2. Click **Log in to CommBox Control**.
3. Log into the CommBox web page with your CommBox user name and password.

NOTE: The CommBox user name and password differs from the ICM's Administrator password.

4. At the CommBox web page, click the **Help** tab.

Figure 6-20 CommBox Help Tab

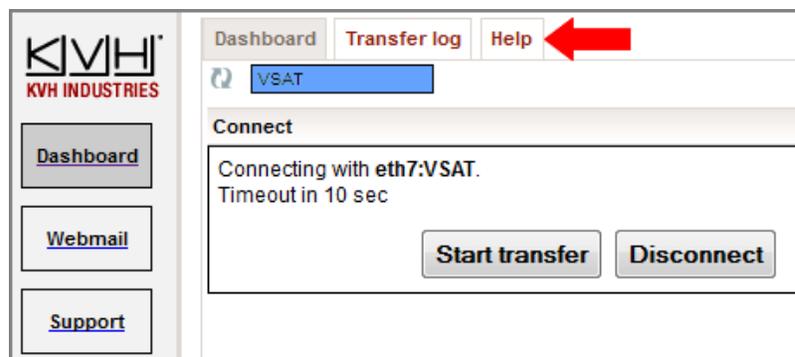

Reset to Factory Configuration

If the system's network becomes corrupted such that you can no longer access the TracPhone V7-IP web interface, and KVH Technical Support is unable to access the system remotely, you can reset the system to its original factory settings.

Important!

Perform a factory reset only if directed by KVH Technical Support. This function should only be used as a last resort when all other options fail.

The following settings are included in the reset:


- Reverts to Standard (DHCP) physical Ethernet port configuration
- Deletes any custom CommBox configurations
- Clears any configured no-transmit zones
- Sets the ICM's LCD brightness to High

To reset the system to its factory settings, follow these steps:

1. At the ICM's front panel, press **MENUS** until the display shows "DIAGNOSTIC TOOLS."
2. Press **ACCEPT**.
3. At "KVH SUPPORT IP," press **NEXT**.
4. At "CALIBRATE GYROS," press **NEXT**.
5. At "FACTORY RESET," press **ACCEPT**.
6. At "PROCEED WITH RESET?," press **ACCEPT**.

The system reverts to its original factory settings. Do not power off the system while this reset is in progress.

Figure 6-21 Factory Reset

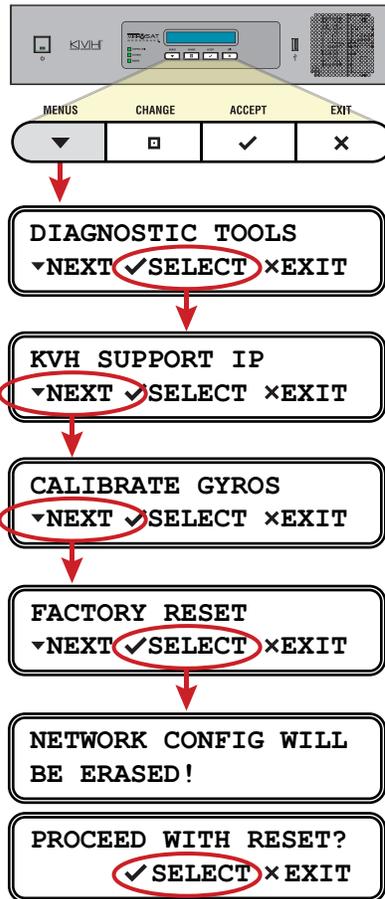

Press **MENUS** until
DIAGNOSTIC TOOLS
is displayed.



7. Data Connections

This section explains how to connect to the Internet via the mini-VSAT Broadband service. It also provides a number of suggestions for minimizing the amount of data that's transferred over the network.

Contents

Internet Access Overview	83
Tips for Minimizing Data Usage.....	84
CommBox Features	89





Internet Access Overview

While the TracPhone system is online with the mini-VSAT Broadband service, you can perform all of the same Internet tasks you perform at home:

- E-mail
- Web browsing
- Weather and chart updates
- Instant messages
- Corporate network access (VPN)
- Data transfers

Important!

High-bandwidth applications, such as peer-to-peer file sharing, web cameras, streaming media, and high-speed gaming, are not supported by fixed rate plans. For details, be sure to read all of the service terms and conditions in the End User Agreement, which can be found at www.kvh.com/mvbcustomercenter.

Connecting to the Internet

To connect to the Internet, follow these steps:

1. Make sure the TracPhone system is online.
2. Open a web browser window on any computer connected to the network.
3. If you're unable to connect, make sure your computer is configured for DHCP addressing. Refer to "[Configuring Computers for DHCP](#)" on page 63.

Tips for Minimizing Data Usage

The configurations of operating systems, web browsers, and applications generally assume an unlimited, always-on broadband connection. As such, they will often try to connect to the Internet on their own to download updates and transfer files. They will also operate without any regard to the amount of traffic they generate to perform routine tasks.

While high data usage is not much of a concern with a broadband connection on shore, avoiding excessive data usage is worthwhile when using the mini-VSAT Broadband service at sea, especially if you are charged by the megabyte on a metered rate plan.

NOTE: Installing network monitoring software on your computer(s) will allow you to keep track of how much data is downloaded to and uploaded from your computer(s). For the ultimate suite of network management tools, look no further than KVH's CommBox software – see [“CommBox Features” on page 89](#) for details!

Consider the guidelines in this section to eliminate unnecessary background Internet activity and minimize the amount of data you consume. Adopting these guidelines will help ensure you use the service in the most efficient and cost-effective manner.

Important!

You are responsible for **all** data transferred to/from your network devices, including inadvertent downloads by applications running in the background.

Preventing Automatic Updates

The default configuration of many applications allow them to download updates from the Internet automatically, without any user interaction. KVH recommends that, while the device is being used at sea, you set up these applications either to not check for updates or to notify you before downloading them. These applications include:

- Anti-virus software
- Spyware protection software
- Web browser
- Mobile apps
- Adobe Acrobat[®] Reader
- Apple iTunes[®]
- Windows Update or Mac Software Update

NOTE: Android devices offer a “Restrict Background Data” setting, which will prevent background updates from all installed apps.

Any malicious applications hidden on your device may also use your Internet connection without your knowledge. Therefore, prior to using your device onboard the vessel, run a full system scan with an up-to-date anti-virus and spyware detection/removal utility.

Disabling Automatic File Backup and Synchronization

The default configuration of many cloud-based file sharing and syncing tools allow them to upload files (including photos, videos, and other media) and synchronize mobile devices without any user interaction. KVH recommends that, like preventing automatic updates, you set up these services for manual backup and synchronization only. These cloud storage services include:

- Apple iCloud[®]
- Google Drive[™]
- Microsoft SkyDrive[®]
- Dropbox[™]
- Box

Firewall Protection

A firewall can prevent most applications from accessing the Internet without your knowledge, as well as protect your devices from outside intrusion. KVH recommends that you enable the firewall on your router or individual network devices.

Web Browser Settings

All popular web browsers, such as Internet Explorer, Mozilla Firefox, Google Chrome, and Apple Safari, offer various tools that allow you to minimize the amount of data they consume. Consider these options:

Limit Multimedia Downloads

Set up your browser to disable multimedia content embedded in websites from playing automatically.

Enable Pop-Up Blocker

Many consumer websites overlay small pop-up windows over the main page to launch ads. Turn on your web browser's pop-up blocker to prevent these from running and consuming data. Your web browser might also offer tools to block websites or types of content that you specify, or allow access to only certain websites that you trust.

Maximize Caching of Web Pages

By default, web browsers automatically refresh the content they have stored in their cache. If the browser finds a new version of a website is available, it will delete the version it has stored locally and download the new one. KVH recommends you set up your browser to download new versions of web pages only when you visit them, and also increase the size of the cache to the maximum level permitted for your browser.

Disable Preloading of Web Pages

The mobile version of Google Chrome (the default browser on Android devices) speeds up web browsing by preloading the destination web pages of links shown on the currently viewed page. This feature consumes an enormous amount of data and should be disabled.

Avoid Multiple Browsing Tabs

KVH recommends that you browse the web using a single open browser tab. Any tabs left open in the background may continue to consume data.

Data-Intensive Applications

The following applications can consume a great deal of data whenever they are active or running in the background:

- Skype (*uses 40 MB per month just to maintain your status, in addition to the data used for actual calls and chats*)
- RSS feeds and widgets presenting real-time information (*e.g., news, weather, stocks ticker, sports scores, etc.*)
- Social media (*e.g., YouTube and Facebook*)
- Peer-to-peer (P2P) file sharing (*e.g., BitTorrent, Gnutella, etc.*)

If you are charged by the megabyte on a metered rate plan, use caution when running these types of applications to help prevent unpleasant surprises on your airtime bill.

Important!

Some high-bandwidth applications, such as peer-to-peer file sharing, web cameras, streaming media, and high-speed gaming, are not supported by fixed rate plans. For details, be sure to read all of the service terms and conditions in the End User Agreement, which can be found at www.kvh.com/mvbcustomercenter.

Mobile Websites

Many organizations now offer alternative versions of their websites optimized for mobile devices. Although designed for smartphone users on a cellular connection, you can access these mobile websites on a desktop or laptop as well. KVH recommends you visit mobile websites instead of full sites whenever possible to minimize the amount of data used.

To view the mobile version of a website, simply replace the “www” in the address with an “m”. For example, to view the mobile version of CNN’s website, you would enter “m.cnn.com” in your web browser.

Disabling Wi-Fi Access on Mobile Devices

If you don’t intend to use your mobile device to access the Internet over the mini-VSAT Broadband service, disable the mobile device’s automatic Wi-Fi connection to the ICM’s wireless network.

E-mail Best Practices

There are several ways to reduce the amount of data your e-mail application uses. Consider the following e-mail best practices:

- Use an IMAP (Interactive Mail Access Protocol) server instead of traditional POP3 (Post Office Protocol 3).
- Disable automatic sending/receiving of new mail.
- Send messages in plain text rather than HTML format.
- Compress all attachments.
- Disable automatic signatures and read receipts.

CommBox Features

The optional CommBox software extends the network capabilities of the ICM to improve crew morale, streamline operations, improve efficiency, and reduce costs. Two options are available:

- **CommBox Standard Bundle** (KVH part no. 35-0010): Provides least cost routing, onboard firewall, web caching, web image compression, ad removal, and URL and content filtering
- **CommBox Enterprise Bundle** (KVH part no. 35-0011): Provides everything included in the Standard bundle, plus automated file transfers, differential synchronization, mail relay server, web mail client, anti-spam and anti-virus filters, roaming crew accounts, and prepaid Internet and e-mail services

NOTE: The CommBox Enterprise Bundle requires integration with a CommBox hub.

Purchasing a CommBox Bundle

To learn more about CommBox's powerful suite of network management features, go to the TracPhone V7-IP web interface and click the **CommBox** tab. Then contact KVH Network Services at networkservices@kvh.com for a consultation. KVH will coordinate with you to select, install, and configure the appropriate bundle to meet your needs.

Accessing the CommBox Web Interface

If a CommBox software bundle is enabled on the ICM, follow these steps to access the CommBox web interface:

1. At the TracPhone V7-IP web interface, click the **CommBox** tab.

Figure 7-1 CommBox Tab




2. Click **Log in to CommBox Control**.
3. Log into the CommBox web interface with your CommBox user name and password.

NOTE: The CommBox user name and password differs from the ICM's Administrator password.

For more details about how to use the CommBox, refer to the CommBox manual available on the **Help** tab of the CommBox web interface.

Figure 7-2 CommBox Help Tab

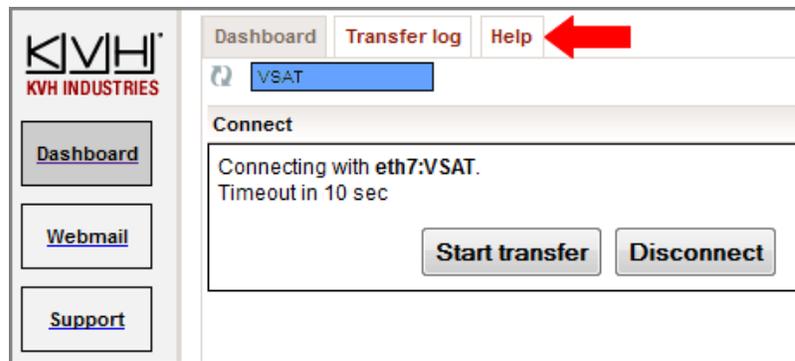




8. Troubleshooting

This section identifies some basic problems along with their possible causes and solutions. It also explains what the error messages, status messages, and LED conditions indicate, how to view and export the system logs, and how to get technical support.

Contents

Initial Steps for Any Problem	93
Troubleshooting a Voice Problem	95
Troubleshooting a Data Problem	97
Error Messages	99
Status Information	103
LED Indicators	113
System Logs	115
Equipment ID Numbers.....	117
Software Versions	118
Technical Support.....	119

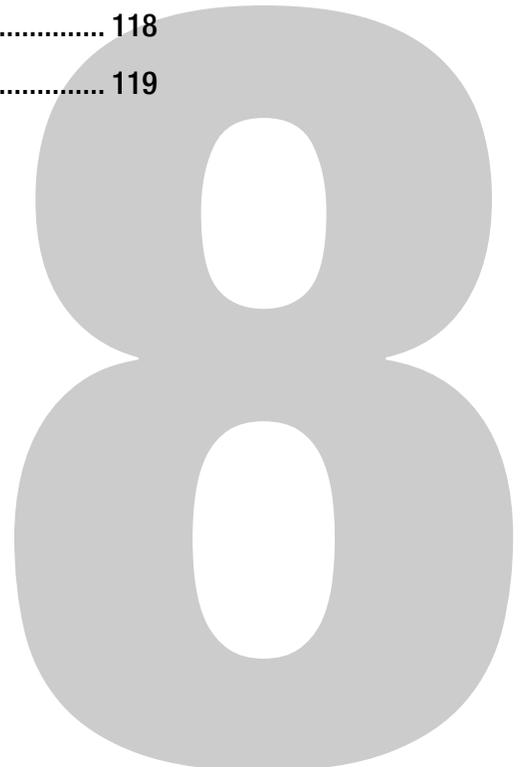

Initial Steps for Any Problem

If you are experiencing a problem with your TracPhone system, first follow these basic steps:

Step 1a: Check System Status Information on the Web Interface

Open a web browser window on any computer on the network and enter <http://minivsat.kvh> to access the TracPhone V7-IP web interface.

NOTE: This web address may not work on all platforms and browsers. It also will not work in certain network configurations. If the web interface does not appear, enter the ICM's IP address instead (default is 192.168.5.1). You can find this address on the ICM front panel LCD (go to Settings > Network Settings > IP Assignments).

The Home page provides system status information. Check the following:

- **Connection Status:** "Online" indicates the system is connected to the mini-VSAT Broadband service.
- **Antenna State:** "Tracking" indicates the antenna is tracking the satellite.
- **My Phone:** "Online & Ready" indicates the ICM's built-in MTA is connected to the enhanced voice service.

If a status message differs from the normal indications listed above, refer to ["Status Information" on page 103](#). If an error message is displayed, refer to ["Error Messages" on page 99](#).

Step 1b: Check System Status Information on the ICM Front Panel

If you are unable to connect to the web interface, you can find similar status information on the front of the ICM. Check the following:

- **ICM LCD:** "Online Tracking" indicates the system is connected to the mini-VSAT Broadband service and the antenna is tracking the satellite.
- **LEDs:** All LEDs should be lit green.

If a status message differs from the normal indication listed above, refer to ["Status Information" on page 103](#). If an error message is displayed, refer to ["Error Messages" on page 99](#). If an LED is not lit green, refer to ["LED Indicators" on page 113](#).

Step 2: Check for Blockage

If the antenna is continuously searching for the satellite, check the area around the antenna for blockage. The antenna needs an unobstructed view of the sky to receive satellite signals. Common causes of blockage include other onboard masts or structures, severe weather, and nearby buildings, bridges, trees, or other vessels.

NOTE: You can determine which direction the antenna is pointing by viewing the Home page on the web interface or the "CURRENT AZ/EL" status message on the ICM front panel LCD (go to Status > Antenna/ACU Status > Current Az/El).

If there is no blockage, you might be located outside of the mini-VSAT Broadband service coverage area (for a coverage map, visit www.kvh.com/minivsatmap).

Step 3: Try Accessing the KVH Test Page

Try accessing the KVH test page at <http://208.83.165.11/mbbtest>. If the KVH test page appears in your browser, but you still can't access any other web page, there might be an account or hub issue – contact KVH Technical Support (see "Technical Support" on page 119).

Step 4: Check Power and Cables

Make sure power is applied to all system components. Also make sure all cables are connected tightly.

Step 5: Restart the System

Try restarting the system at the TracPhone V7-IP web interface (see "Hardware Restart" on page 137). If you cannot access the web interface, turn off the ICM at the front panel, then turn it back on.

Troubleshooting a Voice Problem

If you are unable to make a voice call, follow these steps:

Step 1: Check the Basics

Complete the initial steps described in [“Initial Steps for Any Problem” on page 93](#).

Step 2: Make Sure You Are Dialing the Number Properly

As explained in [“Making a Ship-to-Shore Call” on page 44](#), if you are dialing a number outside the country assigned to Line 1, you need to dial the appropriate international prefix and country code, in addition to the area/city code and local phone number. For example, if your Line 1 is assigned a United States phone number and you are calling a number outside of the U.S., you need to dial 011 + Country Code + Area Code + Local Phone Number.

Step 3: Check the My Phone Status on the Web Interface

At the TracPhone V7-IP web interface, go to the Home page and check the My Phone status information. If it shows “Unable to Register Voice Service,” there is an account or activation issue - contact KVH Technical Support (see [“Technical Support” on page 119](#)). The My Phone status also shows the status of the phone lines.

Step 4: Restart the MTA

The MTA built into the ICM might need to download an updated configuration file from the network. Try restarting the MTA at the TracPhone V7-IP web interface (see [“Hardware Restart” on page 137](#)).

Step 5: Verify the MTA Obtained an IP Address

The MTA built into the ICM must receive an IP address from the ICM in order to provide a voice connection. Pick up the handset on any phone connected to the ICM and press ***1 on the keypad. If you hear “0.0.0.0” in the handset, the MTA did not receive a valid IP address. Contact KVH Technical Support for assistance (see [“Technical Support” on page 119](#)).

Step 6: Try a Different Phone

Disconnect the phone from the ICM and connect another phone in its place (use a phone that you know is working properly). If you are then able to place a call with the new phone, the phone you were using is faulty.

Step 7: Verify the Phone Is Connected Properly

Make sure your phone is connected to one of the RJ11 "Voice Line" jacks on the ICM ("Voice Line 1" is the primary jack). If you are not receiving calls as expected via a virtual number, make sure your phone is connected to the "Voice Line" jack that is assigned that virtual number.

Troubleshooting a Data Problem

If you are unable to access the Internet, follow these steps:

Step 1: Check the Basics

Complete the initial steps described in [“Initial Steps for Any Problem” on page 93](#).

Step 2: Check Your Computer's DHCP Configuration

Unless you have set up a static IP address, your computer's TCP/IP settings need to be configured for DHCP addressing, which allows the ICM to assign it an IP address. Refer to [“Configuring Computers for DHCP” on page 63](#) for details.

Step 3: Try a Direct Wired Connection

Connect your computer directly to the “User Ethernet 1” port on the back of the ICM using an Ethernet cable. Then restart your computer. If you are now able to access the Internet, there is a problem with your vessel's network.

Step 4: Ping the Network Connections

The Ping command sends a test packet to any IP address you choose and reports how long it takes to receive a response.

To send a Ping on a Windows PC:

Open a Command Prompt window (*press Windows Logo key + R, then type cmd*). Then, at the command prompt, type **ping <IP address>**.


To send a Ping on a Mac:

Open the Network Utility (*go to Finder > Utilities > Network Utility*). Then, in the Ping tab, type the IP address then click **Ping**.

Ping the IP address of the ICM. You can find the IP address on the front panel LCD (*go to Settings > Network Settings > IP Assignments*). The default IP address is **192.168.5.1**. All packets sent should be received. If packets are lost, your computer is not connected properly to the ICM.

Ping **4.2.2.1** to check your connection to the Internet. All packets sent should be received within 580-900 ms. If the ping fails, contact KVH Technical Support (see [“Technical Support” on page 119](#)).

Figure 8-1 Pinging the Network Connections

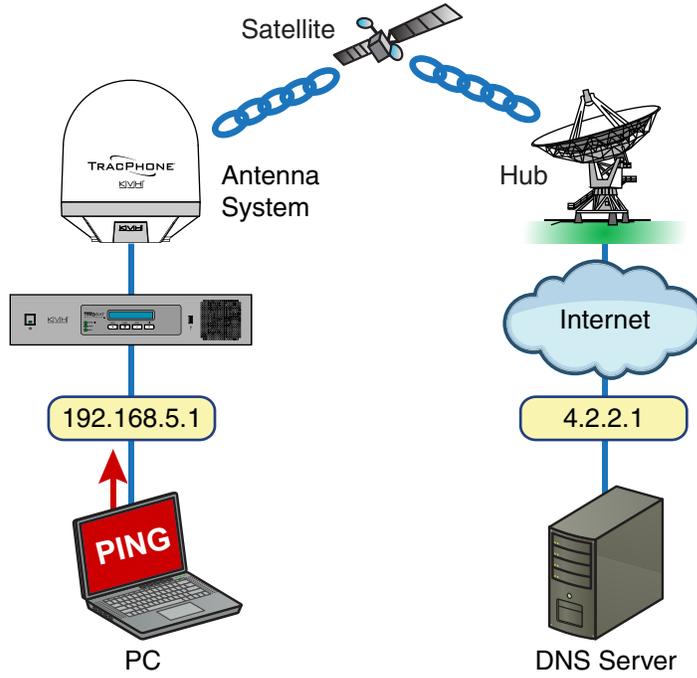

Error Messages

This section lists the error message codes that might appear on the TracPhone V7-IP web interface and front panel LCD to indicate a system problem. Many of these faults should only be repaired by a KVH-certified technician; contact KVH Technical Support for assistance (see [“Technical Support”](#) on page 119).

Error	Description
100	There is an open circuit in the antenna power/data cable. Check the cable.
101	There is a short circuit in the antenna power/data cable. Check the cable.
102	The ICM is not providing the proper DC power to the antenna. Check the wires on the back of the ICM.
103	A software update file was not found on the USB device. Try these steps: <ul style="list-style-type: none">• Remove the USB device from the ICM, wait 10 seconds, then reinsert it.• Verify that a valid TracPhone V7-IP update file (ending in “.kvh”) is present on the USB device.• Replace the update file on the USB device with a new file.• Use a different USB device.
104	The software update file you selected is corrupt. Try a new update file.
105	The ICM is unable to read from or write to its internal memory (EEPROM). Contact KVH.
106	The ICM has lost communications with the antenna. Try these steps: <ul style="list-style-type: none">• Check the wiring on the back of the ICM.• Check the antenna power/data cable.• Try turning the system off, then back on.
107	The ICM's internal temperature exceeds acceptable limits. Try these steps: <ul style="list-style-type: none">• Listen for the cooling fan inside the ICM. If you don't hear the fan, contact KVH.• If you hear the cooling fan, turn off the system and allow it to cool down. Then vacuum the ICM's vents (see “Preventive Maintenance” on page 123).• If the problem persists, you might need to relocate the unit to an area that provides better ventilation.

Error	Description
111	The ICM is unable to initialize its built-in wireless access point (WAP). Contact KVH.
112	There is an internal fault in the ICM. Contact KVH.
117	There is an open circuit in the BUC power cable (ICM jumper cable between C1 and C2) or the transmit (TX) RF cable. Check the cables. If the cables are OK, the BUC might be faulty – contact KVH.
118	There is a short circuit in the BUC power cable (ICM jumper cable between C1 and C2) or the transmit (TX) RF cable. Check the cables. If the cables are OK, the BUC might be faulty – contact KVH.
120	<p>The internal temperature of the ICM's built-in modem exceeds acceptable limits. Try these steps:</p> <ul style="list-style-type: none"> • Listen for the cooling fan inside the ICM. If you don't hear the fan, contact KVH. • If you hear the cooling fan, turn off the system and allow it to cool down. Then vacuum the ICM's vents (see "Preventive Maintenance" on page 123). • If the problem persists, you might need to relocate the unit to an area that provides better ventilation.
121	<p>The ICM is not receiving satellite signal strength (RSSI) data from its built-in modem. Try these steps:</p> <ul style="list-style-type: none"> • Turn the ICM off, then back on. • Check the serial data jumper cable on the back of the ICM connecting between A1 and A2.
122	<p>The ICM's built-in modem is not communicating. Try these steps:</p> <ul style="list-style-type: none"> • Check the ICM jumper cables. • Try turning the ICM off, then back on. • If the error persists, contact KVH.
123	The ICM's built-in modem is not responding to status queries. Contact KVH.
124	The software update file you selected is not valid for the TracPhone V7-IP. Try a new update file.
125	The ICM has lost communications with the GPRS modem (remote service & support module) inside the antenna. Check the power/data cable and the wires on the back of the ICM.
127	The antenna is not accepting the no-transmit zones setup from the ICM. Contact KVH.

Error	Description
128	The software update failed. Retry updating the software. If it fails again, check the power/data cable and the wires on the back of the ICM.
200	The antenna is not receiving adequate DC power from the ICM. Check the power/data cable and the wires on the back of the ICM.
204	The antenna's main board has lost RF communications. Try updating the software (see "Software Updates" on page 124).
206	The antenna's azimuth motor or limit switch failed. Contact KVH.
208	The antenna's elevation motor or limit switch failed. Contact KVH.
216	The antenna's cross-azimuth motor or limit switch failed. Contact KVH.
218	The antenna's skew motor or limit switch failed. Contact KVH.
219	One of the antenna's gyros is out of calibration. Try recalibrating the gyros (see "Gyro Calibration" on page 135). If a gyro fails to calibrate, contact KVH.
220	One of the antenna's gyros failed. Contact KVH.
221	The system is not receiving any data from the GPS. Contact KVH.
222	The antenna's internal temperature exceeds acceptable limits. Turn off the system and allow it to cool. If the problem persists, contact KVH.
234	<p>The antenna is not receiving satellite signal strength (RSSI) data from the ICM. Try these steps:</p> <ul style="list-style-type: none"> • Turn the ICM off, then back on. • Check the wires on the back of the ICM. • Check the power/data cable.
235	The antenna has lost RF communications. Contact KVH.
240	The antenna's LNB is not receiving the proper power from the ICM's receive (RX) RF cable. Check the RX RF cable.

Error	Description
241	The antenna's main board detects a power failure. Contact KVH.
265	The GPS is unable to acquire a fix. Check for blockage or RF interference around the antenna.

Status Information

You can find system status information on the TracPhone V7-IP web interface and front panel LCD. Similar information is available in both places. See the following for details:

- “[Status Information on the Web Interface](#)”
- “[Status Information on the ICM Front Panel LCD](#)” on page 109

Status Information on the Web Interface


On the TracPhone V7-IP web interface, you can view status information on the following pages:

- Home page (see “[Home Page of the Web Interface](#)”)
- Support page (see “[Support Page of the Web Interface](#)” on page 106).

Home Page of the Web Interface

The Home page provides basic system status information.

Figure 8-2 Home Page

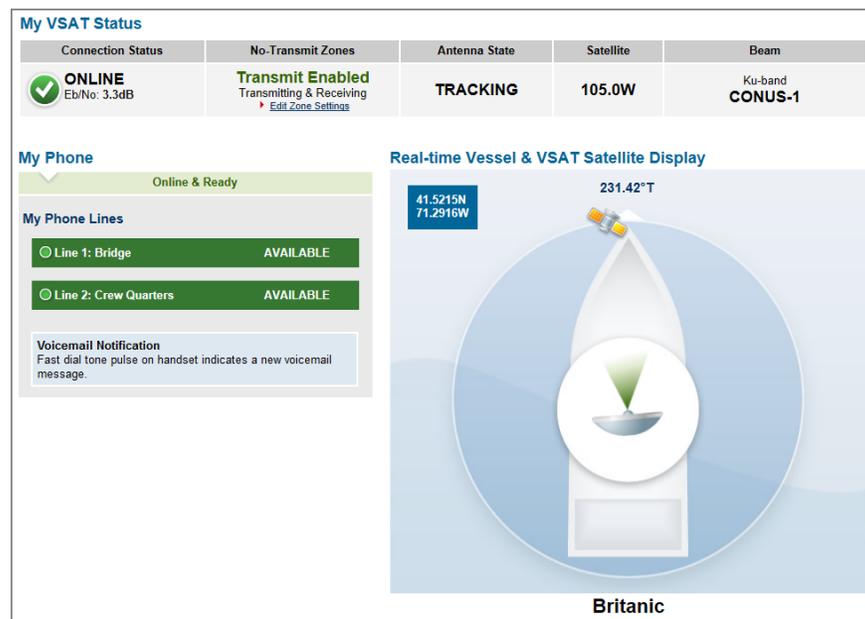

The tables below summarize the status information that is available on the Home page.

My VSAT Status

Message	Description
Connection Status	<p>General status of the ICM's built-in modem:</p> <ul style="list-style-type: none"> • Online – Modem is connected to the mini-VSAT Broadband service; the system is ready for use • Initializing • Waiting for Hub Comm – Modem is waiting for the antenna to lock onto the satellite • Attempting Login – Modem is attempting to log into the mini-VSAT Broadband service • Offline – Modem is not connected to mini-VSAT Broadband • Updating – Modem is downloading new software or satellite configuration files <p>Eb/No: Quality of the received satellite signal; Eb/No = Energy per bit/noise power per Hertz</p>
No-Transmit Zones <i>(if zones are set up)</i>	<p>Status of the no-transmit zones:</p> <ul style="list-style-type: none"> • Transmit Enabled (green) – Antenna is not pointing within a no-transmit zone • Transmit Disabled (orange) – Antenna is pointing within a no-transmit zone; zones are being enforced • Transmit Enabled (red) – No-transmit zones are being ignored; antenna can transmit without restriction
Antenna State	<p>General status of the antenna:</p> <ul style="list-style-type: none"> • Tracking • Initializing • Searching • Cable Unwrap – Unwrapping the internal cable; the cable can wrap up to 710° • Waiting for Modem • Idle • Error
Satellite	Satellite that the modem has currently selected for tracking
Beam	Beam of the satellite currently selected for tracking

My Phone

Message	Description
My Phone	General status of the system's connection to the enhanced voice service: <ul style="list-style-type: none">• Online & Ready – the voice service is ready for use• Offline• Logging In...• Unable to Connect to Voice Service – Caused by an account or activation error; also displayed during system startup
Line 1/Line 2	General status of the phone lines: <ul style="list-style-type: none">• Available (green) – the phone line is ready for use• Dialing (green)• Off Hook (green)• Ringing (green)• In Use (orange) – Phone call in progress• Unavailable (gray)

For details on the Real-time Vessel & VSAT Satellite Display, refer to [“Understanding the Home Page”](#) on page 19.

Support Page of the Web Interface

The Support page provides more detailed system status information, as reported by the ICM's built-in modem.

Figure 8-3 Support Page

The screenshot displays the Support Page interface with the following sections:

- Support Help:** Includes buttons for Restart Hardware, Help, and System Logs.
- Remote Help Controls:** Shows "No Session in Progress" and provides instructions for contacting KVVH Technical Support.
- My VSAT Status:**
 - Connection Status:** ONLINE. EIRP: 3.8dB, Az: 338.3°, Skew: -0.0°, El: 31.0°.
 - No-Transmit Zones:** Transmitting & Receiving.
 - Antenna State:** TRACKING.
 - Satellite:** 105.0W.
 - Beam:** Ku-band CONUS-1.
- Event History:** Lists alerts such as "ANTENNA TRACKING" and "ANTENNA SEARCHING FOR SATELLITE" with timestamps.
- System Details:**
 - Software Versions:** Operating System 102, ICM/Antenna 8207, Modem 3614, MTA 9.15.28, CommBox 1.5.2d.
 - Hardware Information:** Antenna S/N 130100383, ICM S/N 130101379, Modem S/N 24.68, MTA MAC Address 00:10:99:12:0d:12.
- KVVH Technical Support:** Provides contact information for different regions (U.S.A., North/South America, Europe, etc.).
- General Statistics:**
 - Modem IP: 10.61.24.68
 - KVVH Support IP: 10.224.0.2
 - Latitude: 41.5214N
 - Longitude: 71.2918W
 - Login State: ONLINE
 - Successful Logins: 2
 - BB Messages RX: 11235
 - Last Login: 2013-02-28T13:13:57Z
 - Attempted Logins: 0
- RX Statistics:** FL State: LOCKED, FLR Packets RX: 351435, Dropped (CRC): 0.
- TX Statistics:** Attenuation: 17.40, Data Rate: 128000 bps, IP Packets TX: 22074, TX State: Enabled, Antenna State: ONLINE, TxInhibit: inactive.

The “My VSAT Status” provides the same basic status information as the Home page, with the addition of antenna pointing information: Azimuth (Az), Elevation (El), and Skew. More detailed status information is provided at the bottom of the page.

The tables below summarize the detailed status information that is available on the Support page.

General Statistics

Message	Description
Modem IP	The built-in modem's external satellite IP address: 10.61.xxx.xxx; its identity on the mini-VSAT Broadband network
KVH Support IP	The IP address assigned to the system for remote diagnostics by KVH Technical Support
Latitude	Vessel latitude reported by the GPS
Longitude	Vessel longitude reported by the GPS
Login State	Status of the network login: <ul style="list-style-type: none"> • Online – Logged into the network • Offline – Logged out of the network; no user traffic will pass • Waiting – Attempting to log in; waiting for hub reply
Successful Logins	Number of times the built-in modem has logged into the network since the last restart
BB Messages RX	Number of bulletin board messages received from the hub since the last restart; should continuously increment while logged in
Last Login	Date/time of the last successful login to the network
Attempted Logins	Number of times the built-in modem has attempted to log into the network since the last restart

RX Statistics

Message	Description
FL State	State of the forward link; should be "Locked" while the modem is logged in
FLR Packets RX	Number of data packets received; should continuously increment while logged in
Dropped (CRC)	Dropped data packets due to errors; should not increment in large numbers

TX Statistics

Message	Description
Attenuation	Set by the hub; the lower the number, the higher your antenna's transmission power; typically between 5-31 dB
Data Rate	Rate at which the built-in modem is capable of transmitting data; does not indicate the actual data rate supported by your service plan
IP Packets TX	Number of data packets transmitted by the modem
TX State	Should be "Enabled" while tracking the satellite, "Disabled" when pointing within a configured no-transmit zone
Antenna State	Status of the antenna: <ul style="list-style-type: none"> • OFFLINE, TxInhibit active – Antenna is not communicating with the ICM's built-in modem • SIGNAL ACQUISITION, TxInhibit active – Antenna is searching for the satellite • ONLINE, TxInhibit active – Antenna is tracking the satellite, but inhibited from transmitting due to either a no-transmit zone or location in a restricted area • ONLINE, TxInhibit inactive – Antenna is tracking the satellite and allowed to transmit

You can view additional information on the modem's web page. Click the **Click here for more details** link to access it.


Status Information on the ICM Front Panel LCD

On the front panel of the ICM, you can view much of the same status information that's available on the web interface.

To view the status information, follow these steps:

1. Press **MENUS** on the ICM's front panel to bring up the Status menu.
2. Press **ACCEPT** to access the status menu. Then use the **MENUS** and **ACCEPT** buttons to scroll through the submenus.

Figure 8-4 Status Menu on ICM Front Panel

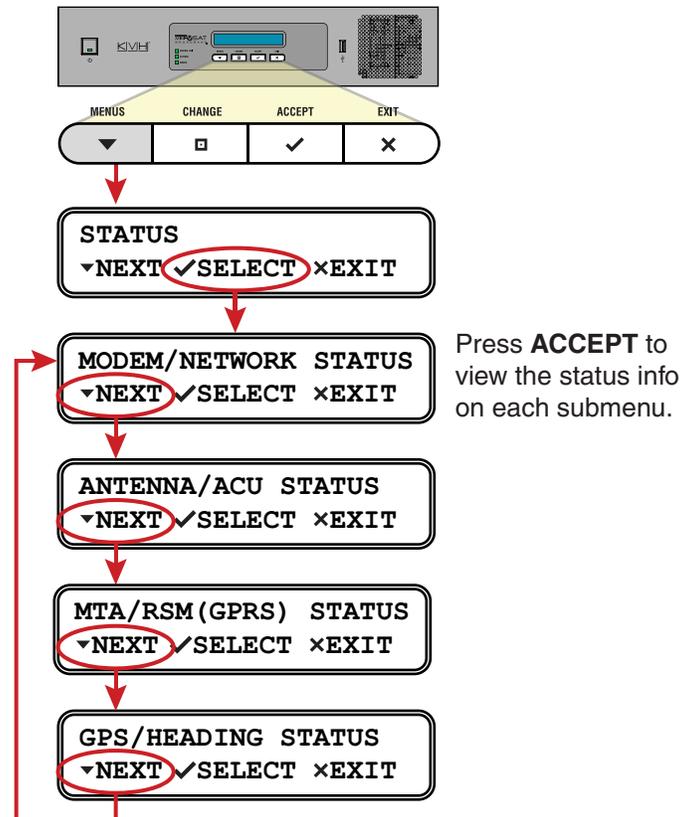

Modem/Network Status

Message	Description
MODEM SATELLITE IP	External IP address of the ICM's built-in modem; identity of the modem on the mini-VSAT Broadband network (10.61.xxx.xxx)
MODEM STATE	General status of the modem; "Online" indicates the modem is connected to the mini-VSAT Broadband service
LAN PORT STATUS	Status of the Ethernet local area network (LAN); "Link Up" indicates a good connection
EB/NO	Quality of the received signal; Eb/No = Energy per bit/noise power per Hertz
SATELLITE	Satellite currently selected for mini-VSAT Broadband service
BEAM	Beam of the satellite currently selected for mini-VSAT Broadband service
DOWNLINK FREQUENCY	Frequency of the satellite downlink
SKEW TO SATELLITE	Skew angle of the antenna's LNB that is required to receive signals from the current satellite

Antenna/ACU Status

Message	Description
ANTENNA STATE	General status of the antenna; must be "Tracking" to connect to mini-VSAT Broadband
ANTENNA DC INPUT	DC voltage measured at the antenna's circuit board; should be between 38 VDC and 44 VDC
BUC POWER STATUS	Status of the antenna's BUC (transmit power); should be between 22 VDC and 26 VDC
CURRENT AZ/EL	Azimuth and elevation at which the antenna is currently pointing; azimuth is relative to vessel heading if heading data is available, or the antenna's "Forward" arrow (bow) if heading data is not available
CURRENT SKEW	Current skew angle of the antenna's LNB
IPACU DC INPUT	DC voltage measured at the ICM's power input; should be between 23 VDC and 25 VDC
IPACU ENET MODEM PORT STATE	Status of the ICM's Ethernet connection to its built-in modem; "Link" indicates the jumper cable is connected between B1 and B2 on the ICM's rear panel

MTA/RSM(GPRS) Status

Message	Description
MTA STATUS	Status of the ICM's built-in MTA; "Registered" indicates the MTA is connected to the voice service
RSM (GPRS) STATUS	Status of the antenna's built-in remote service and support module (GPRS modem); "Registered" indicates a good GPRS cellular connection


GPS/Heading Status

Message	Description
CURRENT GPS SOURCE	Source of the GPS data used by the system
SYSTEM GPS STATUS	Status of the antenna's GPS; displays vessel latitude/longitude if GPS has a valid fix
NMEA TRUE HEADING	True heading reported by the vessel's NMEA 0183 talker; "No Compass Input" indicates the system is not receiving a compatible heading message from a NMEA 0183 talker

LED Indicators

Status lights on the front of the ICM indicate the current status of the system and can help you identify problems quickly.

Figure 8-5 Status Lights

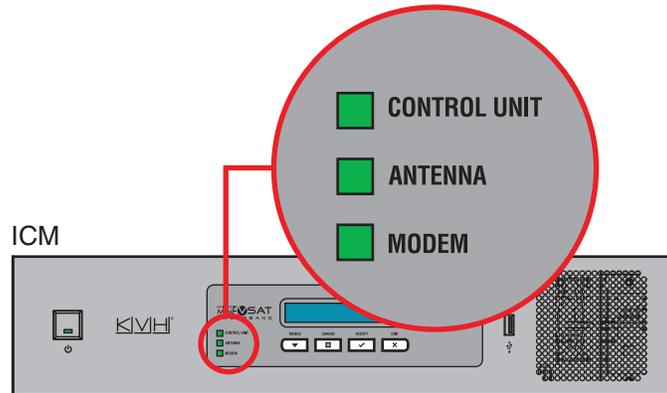

During normal operation, all status lights should be lit green. The following tables explain what the different light conditions indicate.

CONTROL UNIT Light

The table below explains what the CONTROL UNIT light indicates.

Light is...	Indicates	Description
Off	Off	ICM is powered off or no power input
Green	OK	Good input power; ICM is operational
Green, flashing	No comms	Communication error inside the ICM
Orange	Bad power	Bad power supply circuit inside the ICM
Red	Fault	Error detected during ICM self test; try turning the ICM off, then back on

ANTENNA Light

The table below explains what the ANTENNA light indicates.

Light is...	Indicates	Description
Off	Off	No power input to the antenna
Green	Tracking	Antenna is tracking a satellite
Green, flashing	Searching	Antenna is searching for a satellite, or the ICM's built-in modem is initializing
Red	Fault	Error detected; see error message on display

MODEM Light

The table below explains what the MODEM light indicates.

Light is...	Indicates	Description
Off	Off	The ICM's built-in modem is powered off or initializing
Green	Online	Modem is online and logged into the mini-VSAT Broadband service
Green, flashing	Comms OK	Modem is communicating with the antenna, but it is not yet online
Orange	Fault	Error detected; see error message on display
Red	No comms	ICM lost communications with its built-in modem; check jumper cables on ICM rear panel
Red, flashing	No internal comms	Modem is not communicating with the ICM, but wiring is OK

System Logs

The ICM offers two logs to capture historical antenna system data:

- Operational Log (see “Operational Log”)
- Event Log (see “Event Log” on page 116)

These logs are excellent diagnostic tools, so a technician or KVH Technical Support may refer to them when troubleshooting a system problem.

Operational Log

The Operational Log, when initiated, records all messages that the antenna system generates.

To start a new log or view the current log, follow these steps:

1. At the TracPhone V7-IP web interface, click the **Support** tab.
2. On the **System Logs** menu, click **Operational Log**.


Figure 8-6 Viewing the Operational Log



3. Click the button for your desired option:
 - **View/Save Operational Log:** This option simply opens the current Operational Log. You can save this log as a text file to send to a technician or KVH Technical Support.
 - **Start New Log:** This option deletes the current Operational Log and begins recording a new one.

- **Restart System, Start New Log:** This option deletes the current Operational Log, restarts the antenna, and begins recording a new Operational Log. This log will begin with the system's startup messages, which include the results of various self-test routines.

Figure 8-7 Operational Log Options

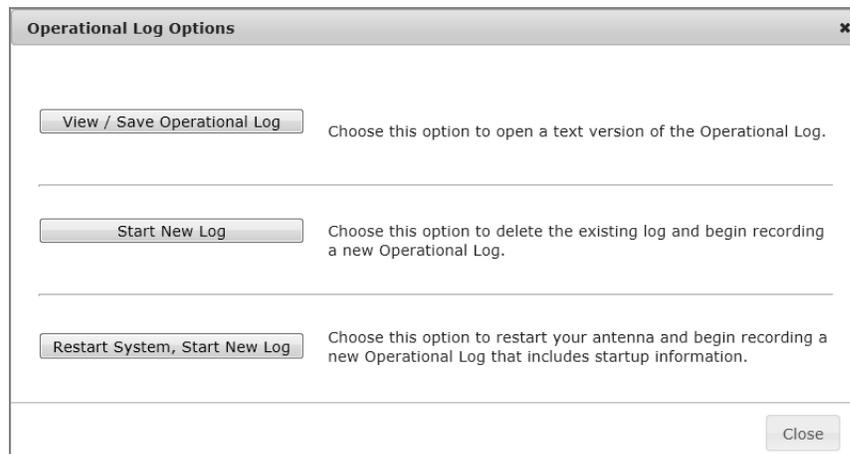


Event Log

The Event Log keeps a historical record of the error messages the antenna system generates. The most recent entries in this log are displayed on the Support page of the TracPhone V7-IP web interface.

To view the complete Event Log, follow these steps:

1. At the TracPhone V7-IP web interface, click the **Support** tab.
2. On the **System Logs** menu, click **Event Log**.

Figure 8-8 Viewing the Event Log

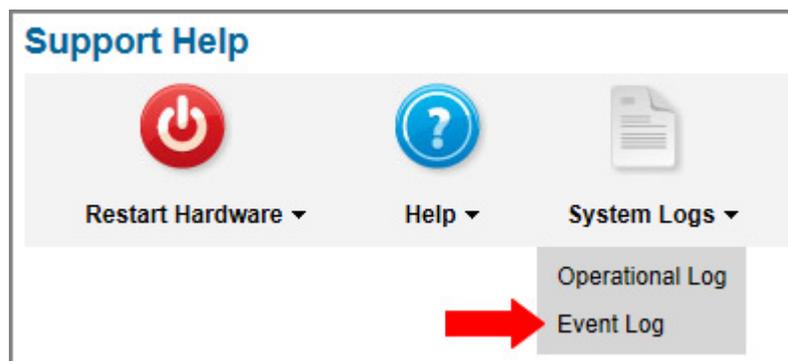


Equipment ID Numbers

On the Support page of the TracPhone V7-IP web interface, you can find the following important equipment identification numbers:

- Antenna serial number
- ICM serial number
- Modem serial number
- MTA MAC address

NOTE: The modem and MTA are built into the ICM.

Figure 8-9 Viewing Equipment Identification Numbers

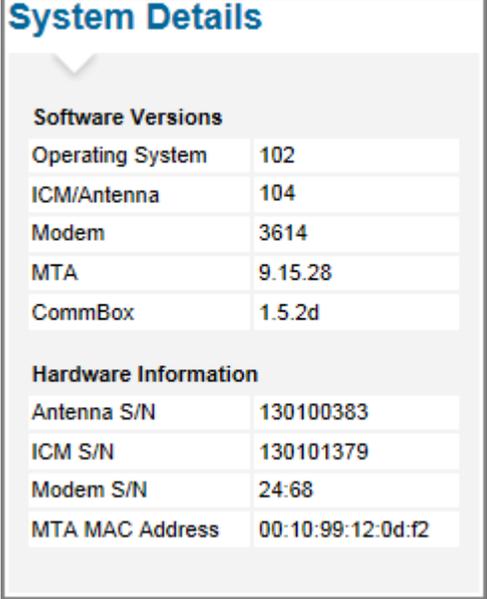

The screenshot shows a 'System Details' page with two sections: 'Software Versions' and 'Hardware Information'. Each section contains a table with two columns: the component name and its corresponding value.

Software Versions	
Operating System	102
ICM/Antenna	104
Modem	3614
MTA	9.15.28
CommBox	1.5.2d

Hardware Information	
Antenna S/N	130100383
ICM S/N	130101379
Modem S/N	24:68
MTA MAC Address	00:10:99:12:0d:f2

NOTE: You can also view these equipment ID numbers on the front panel LCD (go to System Info > Hardware Information).


You will need the antenna and ICM serial numbers when activating the system and whenever you contact KVH Technical Support. You will also need the modem's IP address, which is displayed on the Support page under General Statistics (see ["Support Page of the Web Interface"](#) on page 106).

Software Versions

On the Support page of the TracPhone V7-IP web interface, you can view the currently installed versions of the following software:

- Operating system (resides on ICM)
- ICM/ Antenna – *you can update this software through the ICM (see “Software Updates” on page 124)*
- Modem
- MTA
- CommBox

Figure 8-10 Viewing the Software Versions

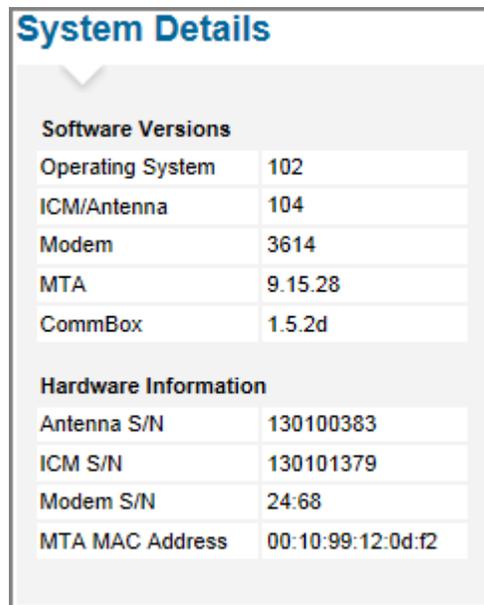

The screenshot shows a web interface titled "System Details" with a dropdown arrow. It contains two sections: "Software Versions" and "Hardware Information".

Software Versions	
Operating System	102
ICM/Antenna	104
Modem	3614
MTA	9.15.28
CommBox	1.5.2d

Hardware Information	
Antenna S/N	130100383
ICM S/N	130101379
Modem S/N	24:68
MTA MAC Address	00:10:99:12:0d:f2

NOTE: You can also view these software versions on the ICM's front panel LCD (go to System Info > Software Versions).

Technical Support

The TracPhone V7-IP system is a sophisticated electronic device; only specially trained KVH-certified technicians have the tools and expertise necessary to diagnose and repair a system fault. Therefore, if you experience an operating problem or require technical assistance, please contact KVH Technical Support (24/7):

Within the Continental U.S.A.:

Phone: 1 866 701-7103

E-mail: mvbsupport@kvh.com

North/South America, Australia:

Phone: +1 401 851-3806

E-mail: mvbsupport@kvh.com

Europe, Middle East, Asia, Africa:

Phone: +45 45 160 180

E-mail: mvbsupport@kvh.com

Please have your system serial numbers and software versions handy before you call (see [“Equipment ID Numbers”](#) on page 117 and [“Software Versions”](#) on page 118).


Remote Diagnostics

If your vessel is located within a GPRS cellular coverage area, KVH Technical Support may be able to “dial in” to your TracPhone system through the antenna’s remote service and support module (RSM). With direct access to your system’s built-in diagnostic tools, KVH can often find the problem quickly to get you back up and running.

NOTE: Standard airtime rates will apply.

NOTE: You can view the IP address used for remote diagnostics on the front panel LCD (go to Diagnostic Tools > KVH Support IP).

Figure 8-11 Remote Diagnostics

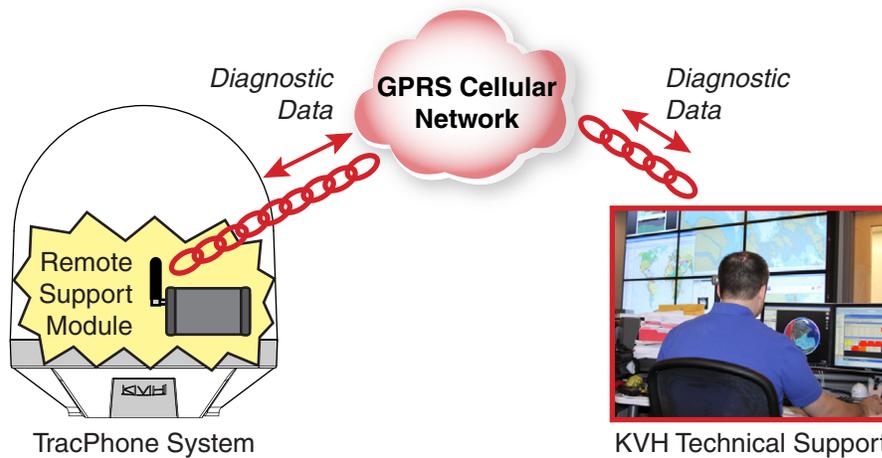

The Support page of the TracPhone V7-IP web interface indicates when a KVH technician is connected to the system. Do not modify any system settings during this diagnostics session.

Figure 8-12 Remote Help Status Message

Remote Help Controls

Connected! Active Remote Help Session in Progress

A KVH Technical Support technician is now connected to your system. Unless directed, Please DO NOT modify settings while this session is active. You will be notified when the session ends.

Note: Standard airtime rates apply



9. Maintenance

This section explains how to perform preventive maintenance to keep the system in tip-top shape. It also explains how to update the software and the modem's satellite configuration files, calibrate the gyros, and restart system components.

Contents

Preventive Maintenance	123
Software Updates	124
Modem Configuration Updates	129
Corrective Maintenance.....	134
Gyro Calibration	135
Hardware Restart	137




Preventive Maintenance

The following tasks should be performed periodically to help maintain peak performance:

- Vacuum the vents on the ICM. Air needs to flow through these vents to cool the electronic components and prevent overheating.

Figure 9-1 Vents on ICM

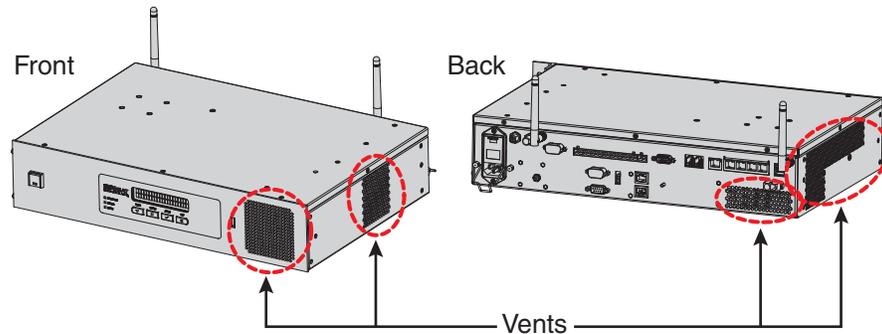

- Clean the outside of the antenna with fresh water to remove grime. Dirt buildup can affect communications. You may use mild detergent, but avoid abrasive cleansers and high-pressure water.
- Inspect cable connections at the ICM for any wear and tear. Repair any damaged cables.
- Ensure the latest software version is installed. Refer to [“Software Updates”](#) on page 124 for details.

Software Updates

KVH periodically releases new versions of software to enhance the performance and capabilities of the system. You can update your system to this latest software at any time by downloading the file from KVH's Update server and uploading it to the ICM. When you update the software, the new version simply overwrites the previously installed version.

A single software package includes updates to all system components in the antenna and ICM, with the exception of the modem. Modem updates are downloaded automatically via the satellite connection. When a modem update is in progress, the TracPhone V7-IP web interface shows "Updating" under Connection Status, and the ICM front panel display shows "Do not power down - Updating" for 30 minutes.

There are several methods to choose from to update the software:

- ["Using the ICM to Update Software" on page 125](#)
- ["Using Your Computer to Update Software" on page 126](#)
- ["Using an iPhone/iPod touch to Update Software" on page 127](#)
- ["Using a USB Flash Drive to Update Software" on page 128](#)


Using the ICM to Update Software

NOTE: This method requires Internet access; airtime charges may apply.

To update the software using the ICM and your mini-VSAT Broadband connection, follow these steps:

1. At the TracPhone V7-IP web interface, click the **Updates** tab.
2. Under Software Update Status, click **Check Now**.
3. If the ICM is able to connect to KVH's Updates server, it notifies you whether a new version is available for download. If there is, click **Download and Install** to download the update file and install it in your system.

Figure 9-2 Updating Software Using the ICM

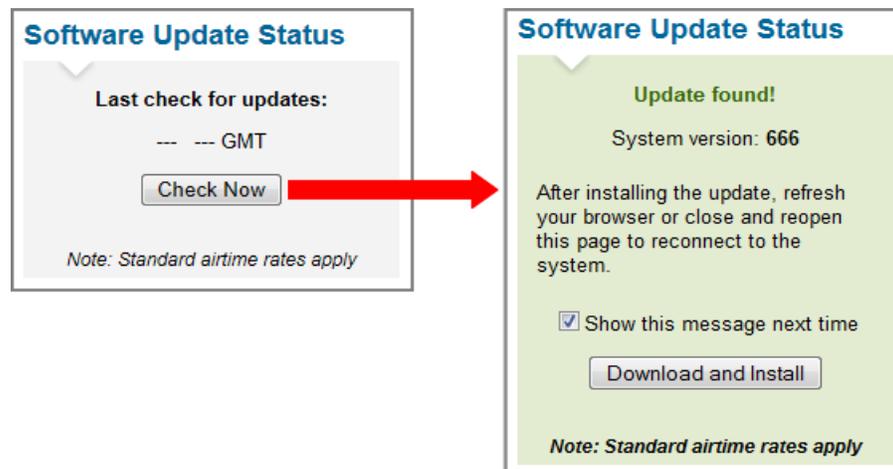


Using Your Computer to Update Software

To update the software using your local computer, follow these steps:

1. First, you need to save the latest software update file to your computer. KVH-certified technicians can download this file from the KVH Partner Portal. Customers can get this file from KVH Technical Support (see “[Technical Support](#)” on page 119).
2. Connect your computer to the ICM’s network.
3. At the TracPhone V7-IP web interface, click the **Updates** tab.
4. If a Choose File button appears under Update Using this Computer, click **Choose File** then log in with the Administrator password.
5. Under Update Using this Computer, click **Browse**.
6. Navigate to and select the update file (it has a .kvh extension) saved on your computer.
7. Click **Check File**.
8. At the confirmation message, click **Update**.

Figure 9-3 Updating Software Using Your Computer

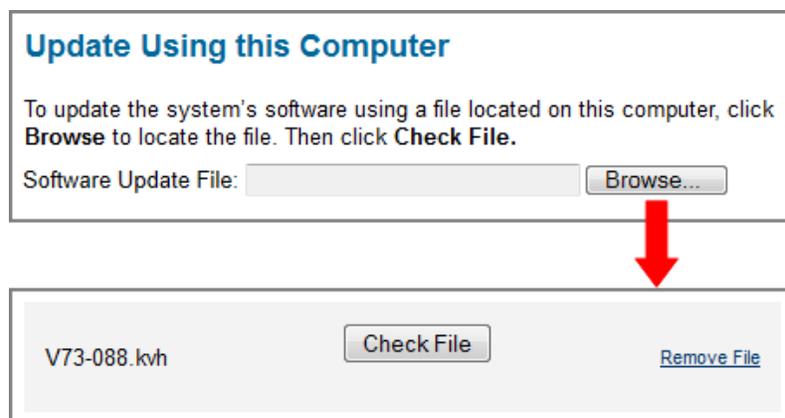

Using an iPhone/iPod touch to Update Software

To update the software using an iPhone/iPod touch, follow these steps:

1. If you haven't already done so, download the mini-VSAT app from the Apple iTunes® App Store.
2. Use the iPhone/iPod touch app to download the latest software version to your iPhone/iPod touch at any time.
3. Make sure the TracPhone system is turned on and initialized (the ICM front panel LCD shows "Searching" or "Tracking").
4. Connect your iPhone/iPod touch to the TracPhone system via its wireless connection, then use the app to install the software.

Figure 9-4 Updating Software Using the iPhone/iPod touch App




Using a USB Flash Drive to Update Software

To update the software using a USB flash drive, follow these steps:

1. First, you need to save the latest software update file to the root directory of your USB flash drive. KVH-certified technicians can download this file from the KVH Partner Portal. Customers can get this file from KVH Technical Support (see [“Technical Support”](#) on page 119).
2. Make sure the TracPhone system is turned on and initialized (the ICM front panel LCD shows “Searching” or “Tracking”).
3. Connect your USB flash drive to the USB port on the front of the ICM.
4. The ICM display shows the currently installed software version (“CUR”) and the software version found on the USB flash drive (“NEW”). Make sure the “NEW” version is a higher number than the “CUR” version.
5. At “PROCEED WITH UPDATE?,” press **ACCEPT**.

Figure 9-5 Software Update Process on ICM Front Panel

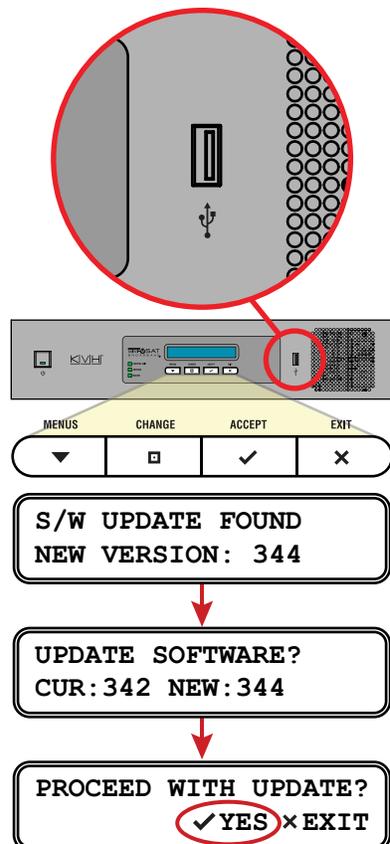


Modem Configuration Updates

The SSCF and SED configuration files stored in the ICM's built-in modem contain all of the satellite parameters the TracPhone system needs to find and track the mini-VSAT Broadband satellites. These configuration files need to be updated whenever changes are made to the satellite network. In most cases, the modem will download the latest files automatically via the satellite link. When a download is in progress, the TracPhone V7-IP web interface shows "Updating" under Connection Status, and the ICM front panel display shows "Do not power down - Updating" for 30 minutes.

However, if your system does not operate within the mini-VSAT Broadband coverage area during the download period (several weeks), your modem might miss the update. In such cases, the modem needs to be updated manually (see ["Manually Updating the Modem Configuration Files"](#) on page 130).

Figure 9-6 Modem Update Options

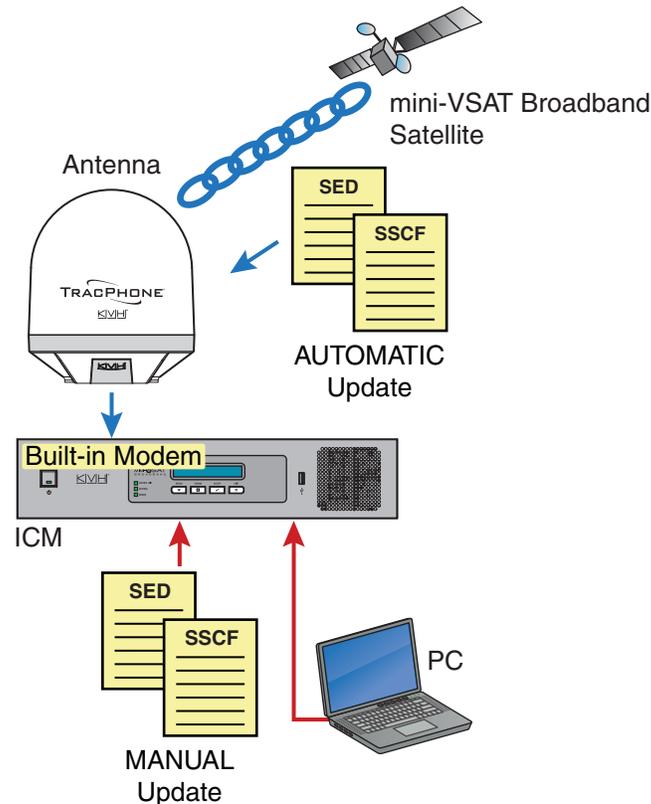

Manually Updating the Modem Configuration Files

If your ICM's modem misses an update, you can manually update its configuration files.


Important!

Update the modem configuration files only if directed by KVH Technical Support. Many modems have unique coverage needs that require custom configuration files.

To manually update the modem's configuration files, follow these steps:

1. First, you need to save the latest SED and SSCF modem configuration files to your computer. KVH-certified technicians can download these files from the KVH Partner Portal. Customers can get these files from KVH Technical Support (see ["Technical Support" on page 119](#)).
2. Connect your computer to the ICM's network.
3. At the TracPhone V7-IP web interface, click the **Support** tab. Then click **Click here for more details** to access the modem's web page.

Figure 9-7 Link to Modem Web Page

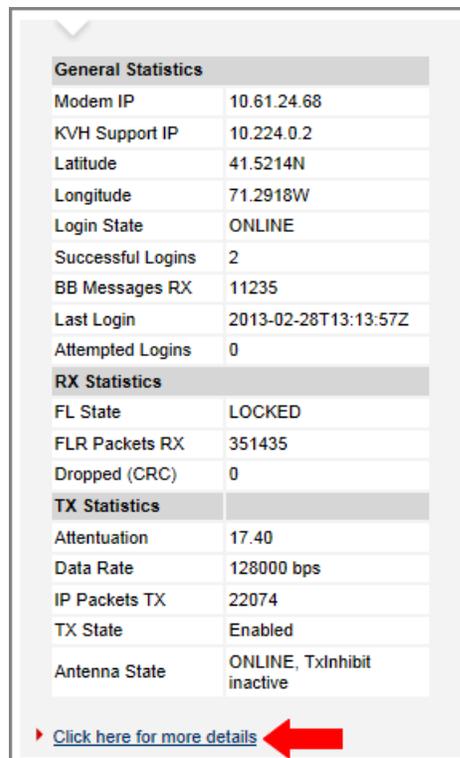

General Statistics	
Modem IP	10.61.24.68
KVH Support IP	10.224.0.2
Latitude	41.5214N
Longitude	71.2918W
Login State	ONLINE
Successful Logins	2
BB Messages RX	11235
Last Login	2013-02-28T13:13:57Z
Attempted Logins	0
RX Statistics	
FL State	LOCKED
FLR Packets RX	351435
Dropped (CRC)	0
TX Statistics	
Attenuation	17.40
Data Rate	128000 bps
IP Packets TX	22074
TX State	Enabled
Antenna State	ONLINE, TxInhibit inactive

▶ [Click here for more details](#) ←

4. At the modem's web page, click the **Configuration** tab.


Figure 9-8 Modem Web Page Configuration Tab



5. In the sidebar, click **Satellite** (if necessary).
6. At the User Login page, enter the following user name and password:

User: **admin**
Password: **arlight**
7. At the Satellite Configuration page, click **Browse** next to "SED file".

Figure 9-9 Uploading New Files

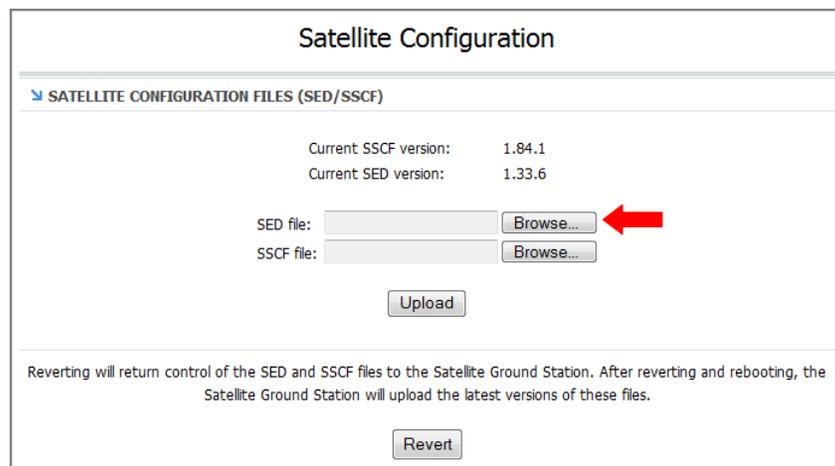

8. Browse to and select the new SED (sed.csv.agt) file on your computer.
9. Click **Browse** next to "SSCF file".
10. Browse to and select the new SSCF (sscf.csv.agt) file on your computer.

11. Click **Upload**. Make sure the new versions appear under the old versions.

12. Click **Save files**.

Figure 9-10 Saving the New Files to the Modem

The screenshot shows a web interface titled "Satellite Configuration". Under the heading "SATELLITE CONFIGURATION FILES (SED/SSCF)", there is a table of version information:

Current SSCF version:	1.84.1
Current SED version:	1.33.6
New SSCF version:	1.86.1
New SED version:	1.34.6

Below the table is a "Save files" button, which is highlighted with a red arrow. Underneath this button is the text "OR, upload again...".

There are two file selection fields: "SED file:" and "SSCF file:". Each field has a "Browse..." button next to it. Below these fields is an "Upload" button.

At the bottom of the interface, there is a paragraph of text: "Reverting will return control of the SED and SSCF files to the Satellite Ground Station. After reverting and rebooting, the Satellite Ground Station will upload the latest versions of these files." Below this text is a "Revert" button.

13. When the "Files saved" message appears, click **Revert**.

Important!

Be sure to revert control of SSCF and SED files to the Satellite Ground Station, allowing the modem to receive future automatic updates via the satellite link.

Figure 9-11 Restoring Automatic Updates

Satellite Configuration

▶ SATELLITE CONFIGURATION FILES (SED/SSCF)

Current SSCF version:	1.84.1
Current SED version:	1.33.6
New SSCF version:	1.86.1
New SED version:	1.34.6

Files saved.

SED file:

SSCF file:

Reverting will return control of the SED and SSCF files to the Satellite Ground Station. After reverting and rebooting, the Satellite Ground Station will upload the latest versions of these files.

14. When the “Revert complete” message appears, click **Reboot** to restart the modem. It will now use the new configuration files.

Figure 9-12 Rebooting the Modem

Satellite Configuration

▶ SATELLITE CONFIGURATION FILES (SED/SSCF)

Current SSCF version:	1.84.1
Current SED version:	1.33.6
New SSCF version:	1.86.1
New SED version:	1.34.6

Files saved.

SED file:

SSCF file:

Reverting will return control of the SED and SSCF files to the Satellite Ground Station. After reverting and rebooting, the Satellite Ground Station will upload the latest versions of these files.

Revert complete.

Corrective Maintenance

If a system component fails, it will need to be replaced by a KVH-certified technician. Instructions are provided with the replacement part.

Important!

Field replaceable units should only be replaced by a trained, KVH-certified technician. To find a technician near you, visit www.kvh.com/wheretogetservice or contact KVH Technical Support (see "Technical Support" on page 119).

Gyro Calibration

The TracPhone antenna's gyros continuously measure the rate of vessel motion in three axes and send this data to the antenna's motor control circuitry to keep the antenna pointed at the satellite. At the factory, each gyro is precisely calibrated to work with the antenna's main board. Therefore, if you ever have a gyro or main board replaced, you will need to recalibrate.


Important!

Calibrate the gyros only if directed by KVH Technical Support, and only while the vessel is stationary in calm seas. A poor gyro calibration can reduce the performance of the antenna.

To calibrate the gyros, follow these steps:

1. At the ICM's front panel, press **MENUS** until the display shows "DIAGNOSTIC TOOLS."
2. Press **ACCEPT**.
3. At "KVH SUPPORT IP," press **NEXT**.
4. At "CALIBRATE GYROS," press **ACCEPT**.
5. At "PROCEED WITH CAL?," press **ACCEPT**.
6. Verify that the azimuth (AZ), elevation (EL), and skew gyros all pass. If a gyro fails, recalibrate. If it continues to fail, contact KVH Technical Support (see "[Technical Support](#)" on page 119).
7. Once the gyros are calibrated, the antenna restarts.

Figure 9-13 Calibrating the Gyros

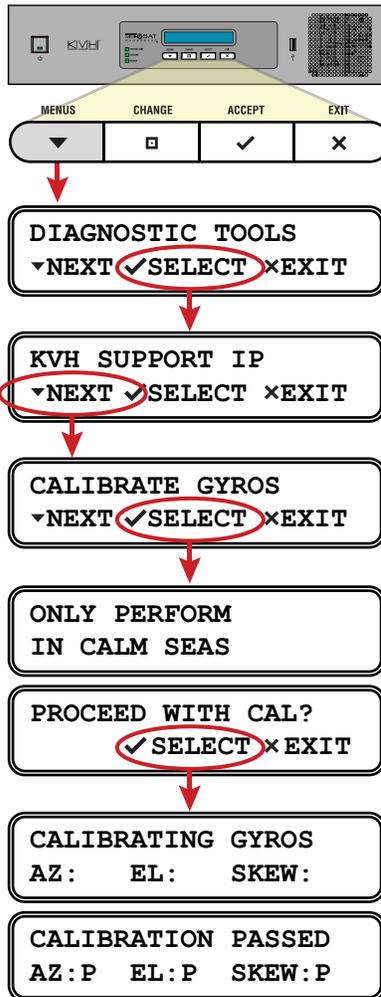

Press **MENUS** until
DIAGNOSTIC TOOLS
is displayed.

Hardware Restart

If you experience a problem with the system, you may need to restart the hardware. You can restart the following system components from the TracPhone V7-IP web interface:


- **Restart Antenna** – Restarts the TracPhone V7-IP antenna. Choose this option whenever the antenna is unable to find the satellite.
- **Restart MTA** – Restarts the MTA (multimedia terminal adapter), which is built into the ICM. Choose this option whenever voice calls are not working properly while the system is online.
- **Restart All** – Restarts the entire system, with the exception of the built-in modem. Choose this option if the problem cannot be isolated to an antenna or MTA issue.

NOTE: You cannot restart the built-in modem from the web interface. If you suspect the modem is locked up, try turning off the ICM at the front panel, then turning it back on.

To restart a system component, follow these steps:

1. At the TracPhone V7-IP web interface, click the **Support** tab.
2. On the **Restart Hardware** menu, click the desired option.

Figure 9-14 Restart Hardware Menu

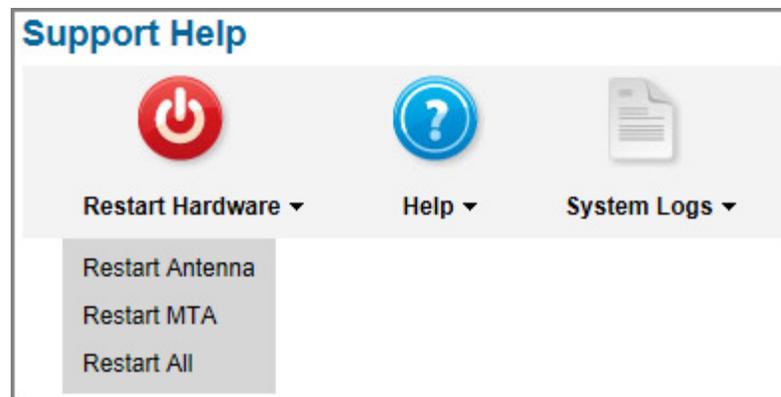

3. At the confirmation message, click **Restart Antenna**, **Restart MTA**, or **Restart ALL**.



Appendix

A. Wiring Diagram

This section provides a system wiring diagram. For detailed installation instructions, refer to the Installation Guide.


Contents

Wiring Diagram.....	141
---------------------	-----



Wiring Diagram

The wiring diagram below shows the basic system connections. For detailed installation instructions, refer to the Installation Guide.

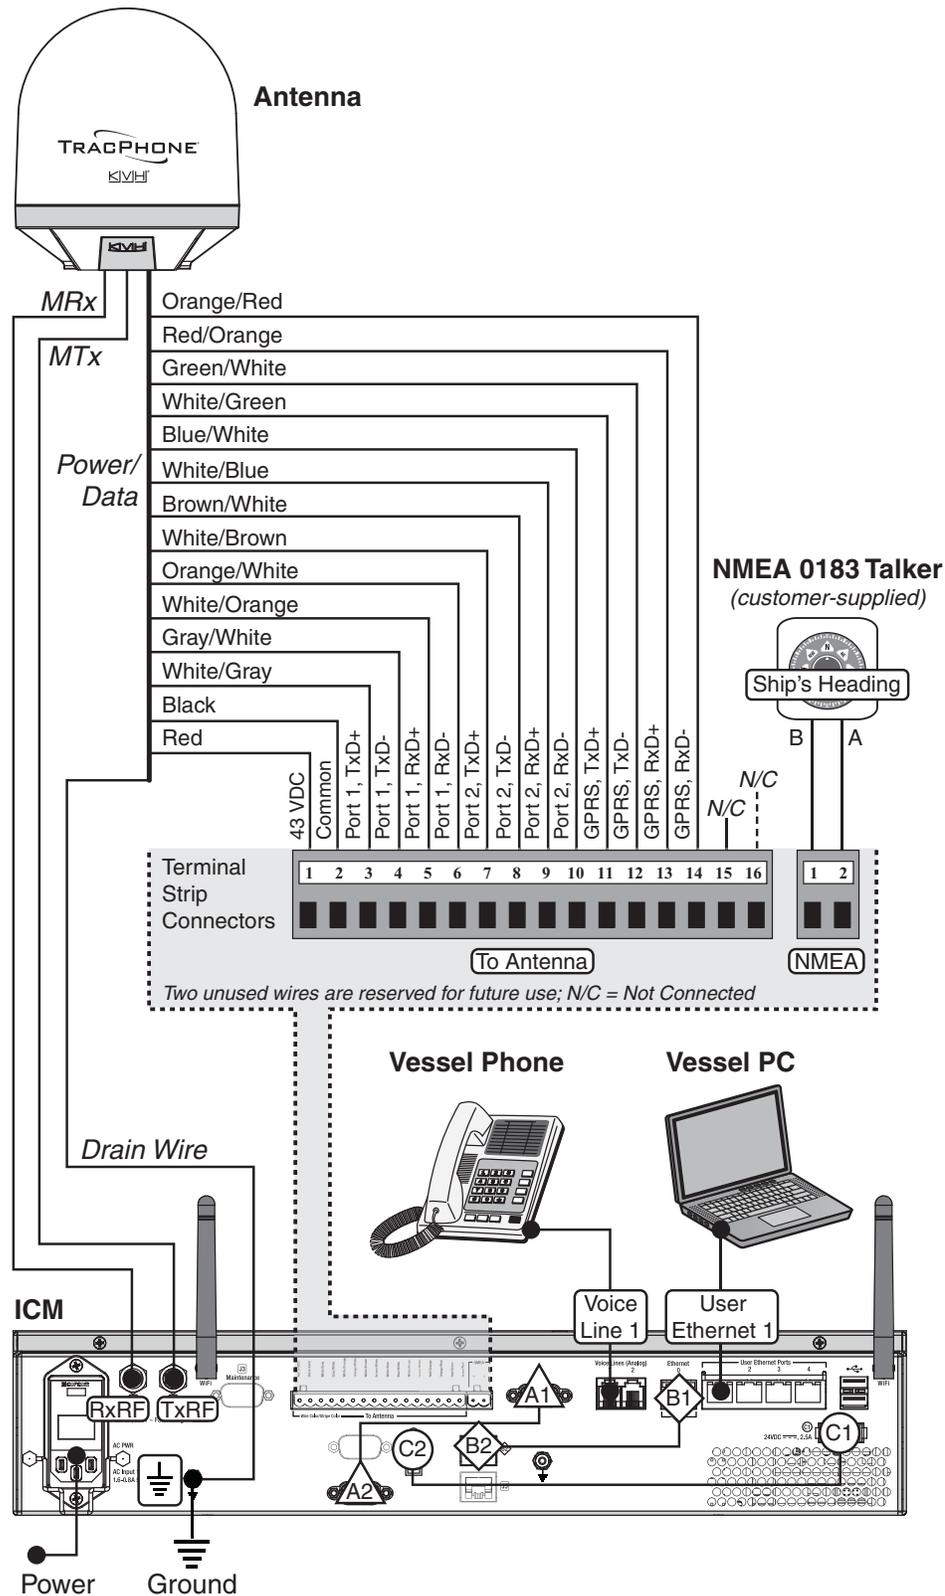



Appendix

B. LCD Menus

This section provides a quick reference guide to the LCD menus on the ICM's front panel.


Contents

LCD Menu Quick Reference Guide 145



LCD Menu Quick Reference Guide

The chart below shows the menu structure of the ICM front panel LCD interface.

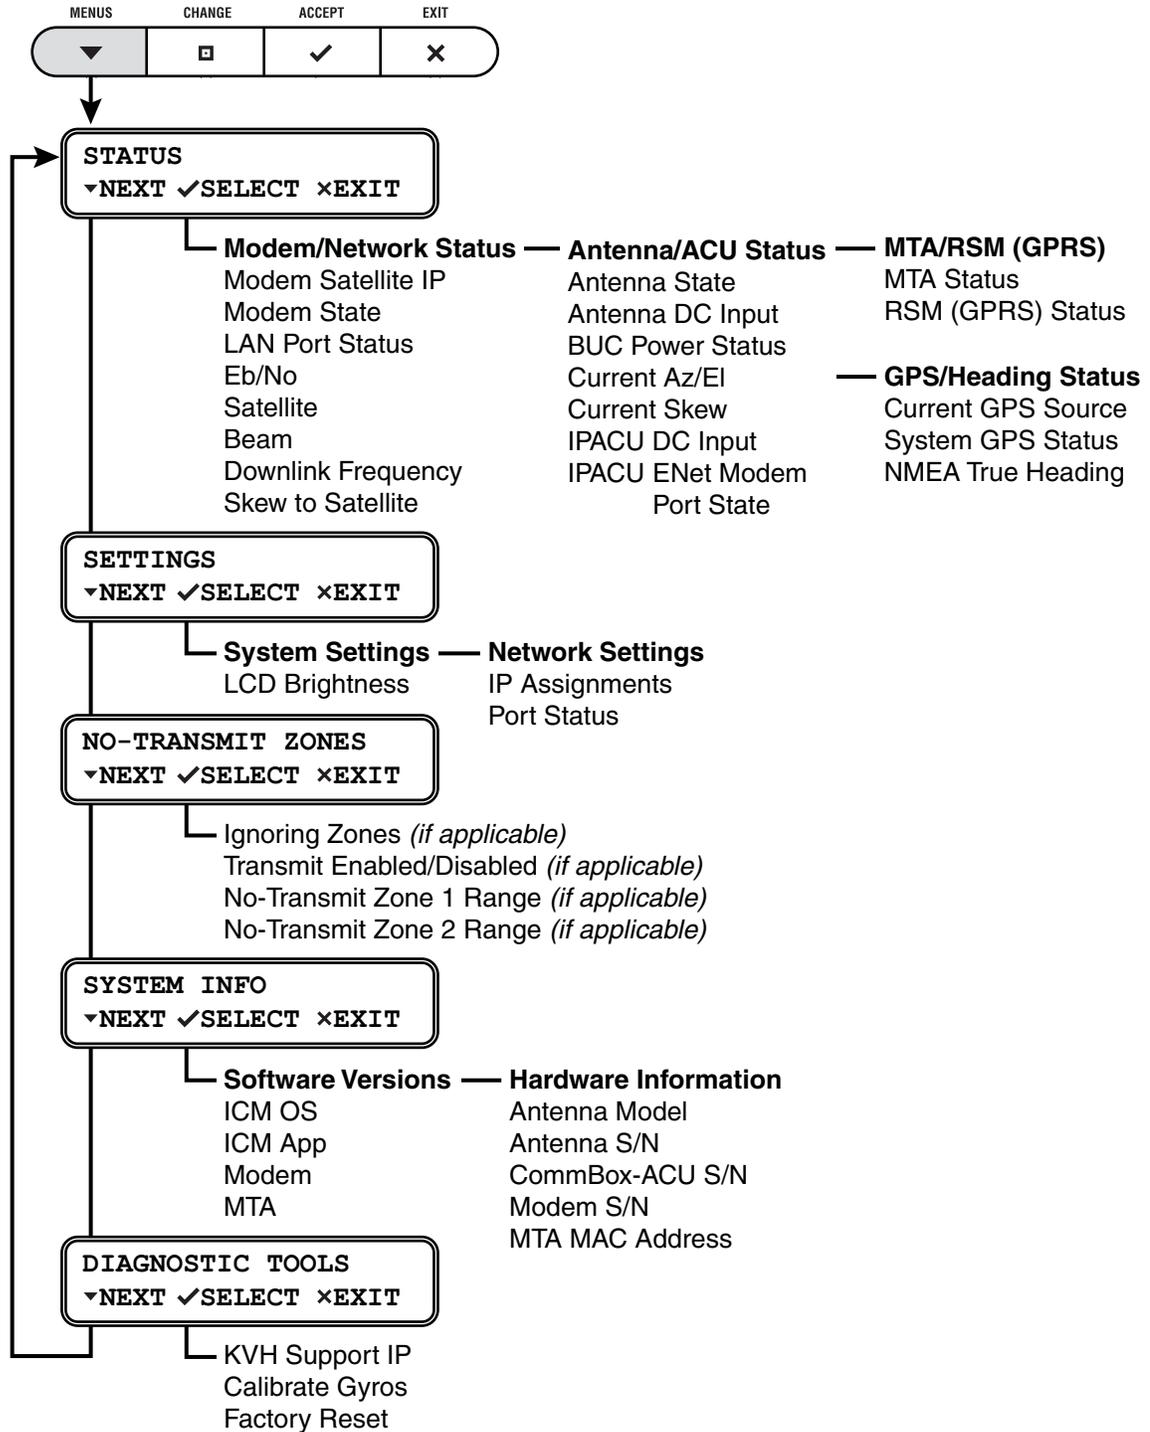




Appendix

C. Specifications

This section provides the technical specifications of the TracPhone system's components.

Contents

System Specifications	149
-----------------------------	-----

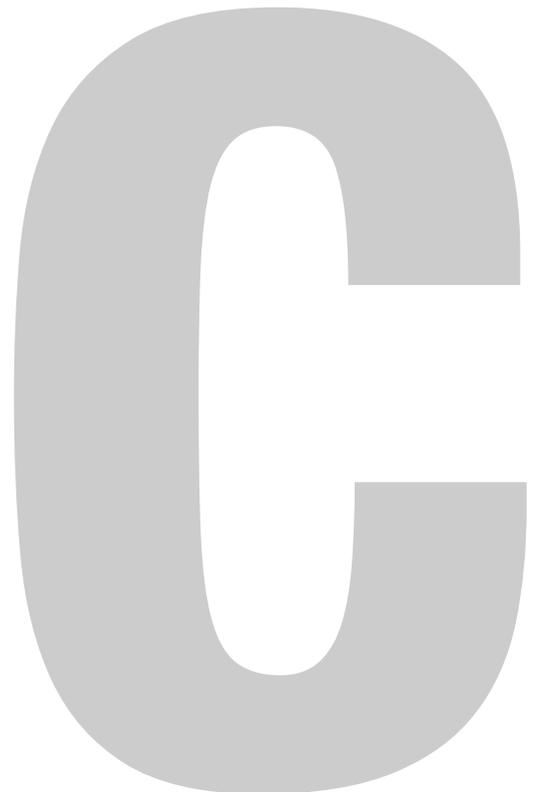

System Specifications

Antenna Specifications

Attribute	Rating
Meets Inmarsat operational, survival, and shock specifications	
RX receive/TX transmit frequency band	11.7-12.75 GHz/14.0-14.5 GHz
Antenna gain	35.6 dBi (RX-band, min)
Transmit power (BUC)	4 W max
Elevation range	-24° to +119° (<i>with heading input</i>)
Azimuth range	710° rotation
Satellite coverage	See www.kvh.com/minivsatmap
Temperature	Operational: -22° F to +131° F (-30° C to +55° C) Survival: -31° F to +158° F (-35° C to +70° C)
Humidity	IEC 60945; 104° F (40° C), 95% humidity (non-condensing)
Rain	Precipitation rate of 100L/min, with wind speeds up to 100 knots
Vibration	IEC 60945
Outside dimensions	26.2" (66.6 cm) OD x 31.2" (79.2 cm) H
Weight	57.6 lbs (26.1 kg)

* Specifications are subject to change without notice.

ICM Specifications

Attribute	Rating
Heading input	NMEA 0183, 4800 baud, accurate within 2°, compatible sentences: \$--HDG, \$--HDM, \$--HDT, \$--OSD, \$--THS, \$--VHW
Input power	100-240 VAC, 50-60 Hz, 160 W max
Temperature	Operational: 5° F to 131° F (-15° C to 55° C) Survival: 5° F to 158° F (-15° C to +70° C)
Humidity	IEC 60945; 104° F (40° C), 95% humidity (non-condensing)
Interfaces	User Ethernet: RJ45, IEEE 802.3, 10BASE-T/100BASE-TX, 100 Mbps Wireless access point: 802.11b, 802.11g, 802.11n USB (Front Panel): USB 2.0 (for software updates only) USB (Rear Panel): Not Used Voice lines: RJ11 (2-wire) analog
Dimensions	16.75" (42.55 cm) W x 11.17" (28.37 cm) D without strain-relief bracket, 16.31" (41.43 cm) D with strain-relief bracket x 3.49" (8.85 cm) H (2U)
Weight	11.25 lbs (5.1 kg)

* Specifications are subject to change without notice.



Appendix

D. Glossary

This section provides a glossary of technical terms used throughout the documentation.

Contents

Glossary.....	153
---------------	-----



Glossary

10BaseT

Ethernet standard using twisted pair cabling (such as CAT5). Supports a maximum data rate of 10 Mbps.

100BaseT

Fast Ethernet standard using twisted pair cabling (such as CAT5). Supports a maximum data rate of 100 Mbps.

802.11

Wireless network communications standard commonly used in LANs.

ACU

Antenna Control Unit.

AGC

Automatic Gain Control. Function that automatically boosts the gain of a received signal, as required, to maintain a constant output level. Indicates RF level.

Analog Phone

Standard telephone, also referred to as POTS (Plain Old Telephone Service). Voice signals are converted into electrical pulses by modulating a carrier signal.

AZ

Azimuth angle. Horizontal direction in which the antenna points.

bps

Bits per second.

BUC

Block Up-Converter. Device that converts the intermediate frequency signal from the modem to a Ku-band frequency and amplifies it for transmission.

Bulletin Board

Communications from the hub to all terminals within its network.

Cache

A web browser's local storage of visited web pages and other Internet files, allowing that information to be accessed more quickly on subsequent visits.

CAT5

Category of twisted pair cable with a maximum data rate of 1,000 Mbps.

Channel

Frequency (between 2.4-2.5 GHz) used for Wi-Fi communications. To communicate via a wireless connection, both router and host must be set to the same channel. There are 11 channels to choose from, allowing users to prevent interference between multiple wireless networks.

Chassis

The outside enclosure of an electronic device.

Client

A computer application that accesses resources held by a server.

Cloud

"The cloud" refers to the accessibility of software applications and data storage services through a web browser.

CRMA

Code Reuse Multiple Access (CRMA) protocol is a variant of CDMA, which is widely used in cellular communications. Using this protocol, multiple vessels share bandwidth for ship-to-shore transmissions to the satellite. Unlike TDMA, vessels don't need to wait their turn to transmit. They can immediately transmit in bursts at the same time as other vessels and at the fastest data rate available, significantly reducing delays.

Crossover Cable

Cable in which the pins are reversed from one end to the other. Used for connecting two computers back-to-back without using an Ethernet hub.

Data Rate

Speed at which a communications path can transfer information, normally measured in bits per second (bps).

dB

Decibel. Ratio of one power level to another.

DHCP

Dynamic Host Configuration Protocol. IP protocol that allows a server to automatically assign IP addressing information to a computer or device on the network.

DNS

Domain Name Service. IP service that translates domain names (such as "www.kvh.com") into IP addresses (such as "63.105.58.10").

Downlink

Communication path from the satellite to the antenna.

DVB

Digital Video Broadcasting project. Global standard of digital broadcasts.

Eb/No

Ratio of Energy-per-bit to Noise power spectral density, indicating the general quality of a received signal.

EIRP

Effective Isotropic Radiated Power, measured in dBW.

EL

Elevation angle. Vertical direction in which the antenna points.

Encryption

As it applies to Wi-Fi, encoding of a wireless signal to protect it from unauthorized reception.

Ethernet

Network communications standard adopted by most LANs. Communicates via twisted pair cable at one of three maximum data rates: (1) Standard - 10 Mbps, (2) Fast - 100 Mbps, and (3) Gigabit - 1 Gbps (1,000 Mbps).

Firewall

Security mechanism that protects a network from unauthorized access.

Floating Ground

Dangerous condition in which the chassis ground of an electrical device differs from ship's ground. This difference can measure well over 100 volts, risking damage to the equipment and electric shock, potentially resulting in death. A floating ground can be prevented by ensuring proper grounding of the device to ship's ground.

Footprint

Coverage area of a satellite.

Forward Link

Communication path from the satellite hub to the user terminal. Another term for "Downlink."

Frequency

Number of cycles per second of a radio wave, measured in Hertz (Hz).

GPRS

General Packet Radio Service. High-speed wireless data communications standard.

GPS

Global Positioning System. Network of satellites that allow anyone with a GPS device to accurately fix their position on Earth.

Gyro

A device that precisely senses and measures motion in a single axis, such as elevation or azimuth.

Host

Any computer connected to a network.

HTTP

HyperText Transfer Protocol. The primary protocol for the World Wide Web.

Hub

Earth station that links the satellite network to the terrestrial network.

ICM

Integrated CommBox Modem.

IF

Intermediate Frequency. As it applies to TracPhone V7-IP, L-band output of an LNB, or input to a BUC.

IMAP

Internet Message Access Protocol. E-mail protocol by which a client retrieves user-selected messages that are stored on a remote mail server. Messages are saved on the server until the user deletes them.

Internet

Global network connecting a vast number of networks and computers.

IP Address

Unique network identifier assigned to a single computer or device on a network. Consists of four eight-bit numbers, each between 0 and 255 (for example, "195.172.7.2").

Kbps

Kilobits (1,000 bits) per second.

Ku-band

Range of frequencies from 10.7 GHz to 18 GHz.

LAN

Local Area Network. A relatively small group of computers and devices linked together within close proximity to each other and usually on the same IP network.

L-band

Range of frequencies from 950 MHz to 2150 MHz.

LNB

Low Noise Block down-converter. Device that converts and amplifies a Ku-band satellite signal into an intermediate frequency (IF) L-band signal.

MAC Address

Media Access Control Address. Unique six-byte hardware identifier assigned to every network interface card (NIC). Used in most LAN configurations to ensure the correct addressing of data to specific hosts.

Mbps

Megabits (1,000,000 bits) per second.

Modem

Modulator-demodulator. Translates digital signals into analog signals and vice-versa.

MTA

Multimedia Terminal Adapter. Device that converts analog telephone signals into digital Voice over IP (VoIP) signals.

Network

A group of computers and devices (such as printers) linked together.

Network Operations Center (NOC)

Station that maintains and manages a telecommunications network.

NIC

Network Interface Card. Expansion or built-in circuit card that provides a computer with network communication capabilities.

NMEA 0183 Talker

Marine electronic device, such as a gyrocompass, that transmits data messages that comply with the NMEA 0183 standard. Data is transmitted serially at 4800 baud over a pair of wires (A and B).

Packet

Part of a data message transmitted over a network. Also contains the address of the destination for routing purposes. (Data messages are divided into packets, sent over a network, then reassembled in the correct order at the destination.)

PCI

Peripheral Component Interconnect. Bus standard that supports high-speed connections between computers and peripheral devices.

PCMCIA

Personal Computer Memory Card International Association. Organization that establishes standards for PC cards, credit card-sized memory or input/output devices, primarily used in laptops.

Ping

Software utility used to check a network connection. Sends a test packet to the designated address and reports how long it takes to receive a response.

Polarization

Orientation of a satellite signal. Circular polarization, which has a "corkscrew" propagation path, consists of left-hand (LHCP) and right-hand (RHCP) signals. Linear polarization consists of vertical and horizontal signals offset by 90 degrees.

POP3

Post Office Protocol. E-mail protocol by which a client retrieves all available messages from a remote mail server and saves them locally. Messages are normally deleted from the server upon download.

Protocol

Standard that establishes strict rules for how data is communicated over a network.

Proxy

A server that controls client access to another server.

PSTN

Public Switched Telephone Network. Worldwide telephone network carrying analog voice signals.

Return Link

Communication path from the antenna to the satellite. Another term for "Uplink."

RF

Radio Frequency.

RJ45

Registered Jack 45. Eight-wire network cable connector for LANs. Similar to a telephone jack.

Router

Device that connects multiple IP networks. For each data packet it receives that is destined for another IP network, determines the best path to reach its destination.

RSSI

Receive Signal Strength Indicator. Indicates the strength of the received satellite signal.

RX

Receive.

SIP

Session Initiation Protocol. Protocol for routing VoIP calls.

Skew

Adjustment angle to orient an LNB with a linearly polarized satellite signal.

Spread Spectrum

A type of communication method by which the information signal energy is spread over a frequency band much wider than the minimum bandwidth required for transmitting the information. The resulting low power level across the full bandwidth does not interfere with neighboring satellites, so the width of the transmitted beam is not as critical as it is with traditional VSAT antennas.

SSID

Service Set Identifier. Unique identifier shared by all computers and devices on a single wireless network.

Straight-through Cable

Cable in which the pins at one end match the pins at the other end.

Subnet

Subdivision of a network based on IP address. For example, with a subnet mask of "255.255.255.0," all computers and devices assigned an IP address starting with "195.172.8" belong to one subnet (there are 255 possible). An IP address starting with "195.172.9" designates a different subnet.

Subnet Mask

Divides the latter portion of an IP address into subnet and host designations. For example, in a regular class B network, the first two numbers in an IP address define the network ID while the last two numbers define the host ID (the individual computer or device on that network). A subnet mask changes the format of these last two numbers by designating the third number as the subnet ID and designating the last number as the host ID (the computer or device within that subnet).

SW

Software.

Switch

Device that connects two segments of a LAN. Routes data from one segment to another based on the MAC address of the destination.

TCP/IP

Transmission Control Protocol/Internet Protocol. Two communications protocols for the Internet. IP handles the delivery of data packets over the Internet; TCP ensures that all data packets are successfully delivered and assembled in the proper order.

Transponder

Component of a satellite that receives radio transmissions from Earth, amplifies them, and retransmits them back to Earth on a different frequency.

Twisted Pair

Cable type consisting of multiple pairs of cable in which two wires are spiraled together to reduce electromagnetic noise. Can be either shielded (STP) or unshielded (UTP). Used extensively in LANs and telephone networks.

TX

Transmit.

URL

Uniform Resource Locator. Address of a web page or file on the World Wide Web. Consists of three parts: (1) protocol (such as "http"), (2) IP address or domain name (such as "www.kvh.com"), and (3) name of the web page or file to be retrieved from that address (such as "index.html").

USB

Universal Serial Bus. Bus standard for connecting peripheral devices to a computer. Supports a data rate of 12 Mbps.

UTP

Unshielded Twisted Pair. Cable consisting of four twisted pairs (8 wires), usually terminated by RJ45 connectors. Commonly used in LANs.

VoIP

Voice over Internet Protocol. Allows telephone conversations to be routed via the Internet.

VSAT

Very Small Aperture (< 3 m) Terminal. Communications system in which multiple users connect via satellite to a single land-based hub, which handles the routing of all network traffic.

WAN

Wide Area Network. A group of computers, devices, and possibly LANs, linked together over a large geographic area.

WAP

Wireless Access Point. Device that links computers wirelessly to a LAN. To communicate with the WAP, each computer needs a properly configured wireless network card.

WEP

Wired Equivalent Privacy. Security mechanism for wireless networks. Encrypts data to protect it from unauthorized interception.

Wi-Fi

Wireless Fidelity. Refers to an 802.11 wireless network.

WINS Resolution

Windows Internet Naming Service Resolution. Organizes the names of all Windows computers in a network with their respective IP addresses. Similar function to DNS.

Wireless Network Card

PCI or PCMCIA card that provides a computer with wireless access to a LAN via a WAP.

WPA2

Wi-Fi Protected Access. Security mechanism for wireless networks. Encrypts data to protect it from unauthorized interception. More secure than WEP.

XAZ

Cross-azimuth angle. Angle at which the antenna's RF feed assembly rotates to maintain the proper skew angle while tracking the satellite.




Appendix

E. Index

This section is an index to allow you to find information quickly.

Contents

Index.....	167
------------	-----

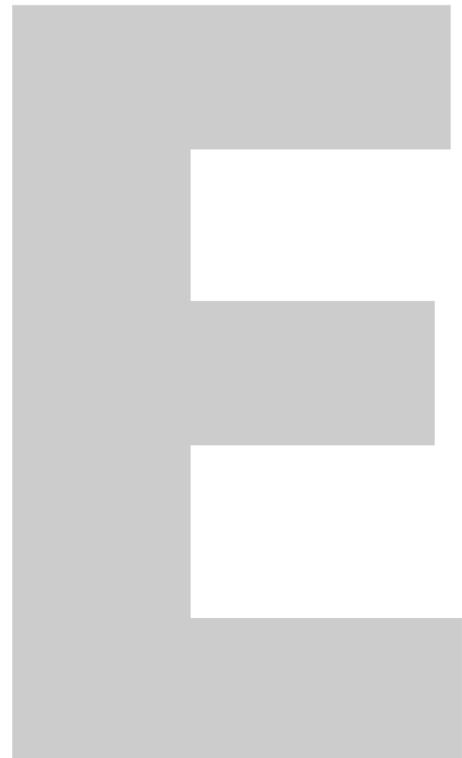

Index

A

- activation 15, 117
- administrator password 25
- antenna
 - description 8
 - forward arrow 33
 - pointing direction 19, 106
 - restart 137
 - serial number 117
 - software version 118
 - specifications 149
 - status 104, 108, 111
- anti-virus software 85
- applications, data-intensive 83, 87
- attenuation 108
- automatic backup and sync, disabling 85
- automatic updates, preventing 85
- azimuth 106, 111, 149
- azimuth range, no-transmit zones 33

B

- beam, satellite 104, 110
- BitTorrent 87
- blockage, satellite 10, 94
- brightness 28
- bulletin board messages 107

C

- cache settings 73
- cache, web browser 21, 86
- calibration 135
- calling cards, prepaid 49
- calls
 - ship-to-shore 44
 - shore-to-ship 46
- channel, wireless 61
- cleaning 123
- clear cache 21

- cloud services, disabling 85
- CommBox software
 - description 89
 - Help 78
 - network settings 61, 71, 73, 78
 - purchasing 89
 - version 118
 - web interface 89
- Condensed Help 20
- configuration, physical Ethernet ports 74
- corrective maintenance 134
- coverage map 9
- crew calling 49
- CRMA 7
- cumulative view, no-transmit zones 37

D

- data rate 108
- data usage, reducing 84
- delay, voice call 44
- DHCP
 - Mac OS X 67
 - Windows 7 64
 - Windows 8 63
 - Windows Vista 63, 64
 - Windows XP 65
- dial tone, fast 51
- dialing sequence 44
- dual dome 76

E

- Eb/No 110
- electric shock 5
- elevation 106, 111, 149
- elevation range, no-transmit zones 34
- e-mail, best practices 88
- emergency call 43
- End User Agreement 83, 87
- equipment ID numbers 15, 117
- error messages 99
- Ethernet connection 59
- event log 116
- Extended Help 20

F

- fax 53
- fax server 54
- field replaceable units 134
- firewall 86
- floating ground 5
- footprint, satellite 9
- frequency 110, 149
- front panel menus 145
- FRUs 134

G

- gain, antenna 149
- Gnutella 87
- GPRS modem
 - description 120
 - status 111
- GPS
 - position 17, 19
 - source 112
 - status 112
- gyro calibration 135
- gyro stabilization 8

H

- hazard, radiation 6, 16
- heading 19, 112, 150
- Help 20
- Help, CommBox 78
- Home page 19, 103

I

- ICM
 - description 8
 - LEDs 113
 - serial number 117
 - software version 118
 - specifications 150
 - status 111
- IMAP 88
- incoming calls 46
- in-country call 44

- international call 44
- Internet access 83
- IP address
 - ICM 71, 74
 - KVH support 107, 120
 - modem 107, 110
 - MTA 95
 - public static 70
 - static 68
- IP packet counters 108
- iPhone/iPod touch app 127

L

- LAN settings 71
- latitude 107
- LCD brightness 28
- LCD menus 145
- LEDs 113
- legacy configuration 77
- lights, front panel 113
- log
 - event 116
 - operational 115
- login
 - CommBox software 89
 - modem web page 131
 - voice account 55
- login counters 107
- longitude 107

M

- maintenance
 - corrective 134
 - preventive 123
- map, coverage 9
- menus, LCD 145
- mini-VSAT Broadband 7, 15
- mobile websites 87

modem
configuration update 129
description 8
initialization 17
IP address 107, 110
login 131
restart 137
satellite selection 11
serial number 117
software update 124
software version 118
status 107, 110
web page 108

MTA
additional 48
IP address 95
MAC address 117
restart 95, 137
software version 118
status 105

multimedia, disable 86

N

network
reset to factory 79
settings 71
status 110
wired DHCP 59
wireless DHCP 60
network monitoring software 84
Network Operations Center 7
NMEA 0183 19, 112, 150
no-transmit zones
clear 39
cumulative view 37
description 31
disable 38
range 17, 33, 34
setup 33
status 32, 104

O

online 17
operational log 115
outgoing calls 44

P

- passphrase, WEP 61
- password
 - administrator 25
 - WPA2 61
- peer-to-peer file sharing 87
- phone line names 27
- phone lines, additional 47
- physical Ethernet port configuration 74
- ping 97
- pointing direction 19
- pointing direction, antenna 106
- POP3 88
- pop-up blocker 86
- power
 - antenna 111
 - BUC 111
 - ICM 111
 - input 150
 - transmission (BUC) 149
- power on system 16
- preloading web pages, disabling 86
- preventive maintenance 123
- priority, voice traffic 43, 47
- Product Activation department 15
- PSTN 43

R

- radiation hazard 6, 16
- Real-time Vessel & VSAT Satellite Display 19
- remote diagnostics 120
- remote monitoring 69
- remote service and support module
 - description 120
 - status 111
- reset, factory settings 79
- restart hardware 137
- RSS feeds 87

S

- safety 5
- satellite 7, 104, 110
- Satellite Airtime department 15
- satellite switching 11
- secondary system 76
- secure VPN 69
- security, wireless 61
- SED 129
- serial numbers 15, 117, 119
- SIP 43
- skew 106, 110, 111
- Skype 87
- social media 87
- software update
 - description 124
 - via iPhone/iPod touch 127
 - via local computer 126
 - via satellite 125
 - via USB flash drive 128
- software versions 118
- specifications 149
- spread spectrum 7, 8
- spyware 85
- SSCF 129
- SSID 61
- startup sequence 17
- static IP
 - description 68
 - Ethernet port 69
 - request 69
 - setup 70, 75
- status information 103
- switch satellites 11

T

- technical support 119
- test web page 94
- troubleshooting
 - basic 93
 - data problem 97
 - voice problem 95
- turn on system 16

U

UCH-250 54
USB flash drive 128

V

vessel name 26
virtual numbers 50
voice service
 account access 55
 crew calling 49
 delays 44
 description 43
 fax 53
 fees 45
 phone lines 47
 priority 43, 47
 ship-to-shore calls 44
 shore-to-ship calls 46
 status 105
 virtual numbers 50
 voicemail 51
voicemail 51
VoIP 43
VPN, secure 69

W

WAP 8, 60
warnings 5
web browser settings 86
web interface access 18
widgets 87
Wi-Fi access, mobile devices 87
Wi-Fi connection 60
wired DHCP 59
wireless
 description 60
 security 61
 settings 61
wiring 141



www.kvh.com



KVH Industries A/S
EMEA Headquarters
Kokkedal, Denmark
Tel: +45 45 160 180 Fax: +45 45 160 181
E-mail: info@emea.kvh.com

KVH Industries, Inc.
World Headquarters
Middletown, RI U.S.A.
Tel: +1 401 847 3327 Fax: +1 401 849 0045
E-mail: info@kvh.com

KVH Industries Pte Ltd.
Asia-Pacific Headquarters
Singapore
Tel: +65 6513 0290 Fax: +65 6472 3469
E-mail: info@apac.kvh.com