



FTS-B062-5

S175 version2000

SINGLE-FIBER FUSION SPLICER

User's Manual

- Please read entire manual prior to usage.
- This manual must be kept with the S175 Fusion Splicer.

Issue 5.

April 2000

 **THE FURUKAWA ELECTRIC CO., LTD.**

Contents

1. Safety Information and Instructions	1
1.1. Safety Information	1
1.2. Safety Messages	1
1.3. WARNINGS and CAUTIONS	2
1.4. Power Requirements	5
1.5. Fuses	5
1.6. Line Power Cord	5
1.7. Toxic Hazards	5
1.7.1. Incineration	5
1.7.2. Acidic or caustic compounds	6
1.7.3. Physical damage	6
2. General Information	7
3. Operating Specifications and Components	11
3.1. Specifications	11
3.2. Components	12
3.3. Optional Accessories	13
3.4. Recommended Consumable	13
4. External Description	14
4.1. Operating Keys and Status LEDs	14
4.2. Side Panel	15
4.2.1. Right side panel	15
4.2.2. Left side panel	15
4.3. Main Body	16
5. Getting Started	17
5.1. Unpacking and Initial Inspection	17
5.2. Setup	17
5.3. Installing the splice programs	18
5.4. Selecting the Operating Language	20
5.5. Arc check	21
6. Operating Instructions	23
6.1. Ready Screen	23
6.2. Fusion Splicing	23
6.2.1. Preparing the Fiber	23
6.2.2. Loading the Fiber	24
6.2.3. Fusion Splicing	25
6.2.4. Splicing Defects	27
6.2.5. Removing the Spliced	27
6.2.6. Reinforcing the Fusion Splice	28
6.2.7. Changing the Fusion Program	29
6.2.8. Changing the Heater Program	30
6.2.9. Performing an Attenuation Splice (Optional)	31
7. Maintenance and Handling Instructions	32
7.1. Error Messages	32
7.2. Maintenance	35
7.2.1. Arc Check	35
7.2.2. Electrode Maintenance	35
7.2.3. Cleaning the objective lens	36

Contents

7.2.4.	Cleaning the Mirrors	37
7.2.5.	Cleaning the V-grooves	37
7.2.6.	Cleaning the V-groove Fiber Clamps	37
7.3.	Storing and Shipping	38
7.4.	Claims and Repackaging	38
7.5.	Return Shipments to The Furukawa Electric Co.	38
8.	Programming Guide	39
8.1.	Programming Functions and Menu	39
8.2.	Modifying a Fiber Program	41
8.3.	Modifying a Heater Program	45
8.4.	Splice Data	48
8.4.1.	Viewing the data	48
8.4.2.	Adding a Comment	49
8.4.3.	Printing the Data	49
8.4.4.	Clearing the data	51
8.5.	Arc Check History	52
8.6.	Configuration	52
8.6.1.	Language	52
8.6.2.	Arc Counter	52
8.6.3.	Total Arc Counter	53
8.6.4.	Sleep Time LCD	53
8.6.5.	Data Output	53
8.6.6.	Low Temp. Motor Rate	53
8.6.7.	Low Temperature	54
8.6.8.	TENSION TEST	54
8.6.9.	Estimation Loss	54
8.6.10.	Arc Count Reset	54
8.7.	Environment Monitor	56
8.8.	Manual Operation	56
8.9.	Rust Check	57
8.10.	Motor Limit Test	57
8.11.	Fiber Dimension	58
8.12.	Program Management	61
8.12.1.	Program Store/ Default	61
8.12.2.	PROGRAM COPY	63
8.12.3.	PROGRAM DELETE	64
8.13.	Adjust Date/Time	64

1. Safety Information and Instructions

This manual contains complete operating and maintenance instructions for THE S175 FUSION SPLICER. Please review this manual carefully before operating.

1.1. Safety Information

The following safety instructions must be observed whenever the S175 fusion splicer is operated, serviced or repaired. Failure to comply with any of these instructions or with any precaution or warning contained in the User's Manual is in direct violation of the standards of design, manufacture and intended use of the instrument. The Furukawa Electric Co., Ltd. assumes no liability for the customer's failure to comply with these safety requirements.

1.2. Safety Messages

	Refer to the User's Manual for instructions on handling and operating the instrument safely.
WARNING	The procedure can result in serious injury or loss of life if not carried out in proper compliance with all safety instructions. Ensure that all conditions necessary for safe handling and operation are met before proceeding.
CAUTION	The procedure can result in serious damage to or destruction of the instrument if not carried out in compliance with all instructions for proper use. Ensure that all conditions necessary for safe handling and operation are met before proceeding.

- Please contact The Furukawa Electric Co., Ltd. or your local representative with any questions relating to any subjects described within this manual.
- In no case will The Furukawa Electric Co., Ltd. be liable to the buyer, or to any third parties, for any consequential or indirect damage which is caused by product failure, malfunction, or any other problem.

1.3. WARNINGS and CAUTIONS



WARNING

- This is a Class A product of EN 55022(1994). In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.
- The power cord supplied with this equipment must be connected to a power socket, which provides a reliable protective earth. Or, ground it with the Ground terminal on the fusion splicer.
- Use only the cords attached to the fusion splicer. Connecting inappropriate cords or extending the cords may cause them to heat up abnormally and may cause fire.
- This product contains a Lithium Cell. The device is identified by a warning label. Do not dispose of in fire. Disposal of this device must be carried out by qualified personnel.
- Never touch the electrodes when the fusion splicer is powered on. Doing so may cause electrical shock.
- Do not operate the fusion splicer without electrodes.
- Do not disassemble the instrument except as described in the maintenance section of this manual. The fusion splicer contains no user serviceable parts. Warranty on this product will be invalidated if any of the potted nuts are disturbed.
- Avoid soaking the fusion splicer with water. Doing so may cause fire, electrical shock or malfunction.
- Do not use inappropriate input voltage. Doing so may cause fire, electrical shock or malfunction.
- Do not insert or drop any metal or any flammable material into the main body through any aperture. Doing so may cause fire, electrical shock or malfunction.
- Avoid direct skin contact with the heating portion. This may cause burn or injury.
- Do not remove the panels of the fusion splicer. Some parts generate high voltage. Removing the panels may cause electrical shock.
- If abnormal sounds or extra high temperatures are observed, turn *off* the power, disconnect the power cord and contact The Furukawa Electric Co., Ltd. or your local representative. Continuing to operate under these conditions may cause fire or electrical shock.
- Do not use a damaged power cord where the inner cable is exposed or severed. Doing so may cause fire or electrical shock.



WARNING

- If water is spilled into the fusion splicer, turn off the power switch, disconnect the power cord and contact The Furukawa Electric Co., Ltd. or your local representative. Continuing to operate under these conditions may cause fire or electrical shock.
- If smoke or strange smells are observed, turn off the power switch, disconnect the power cord and contact The Furukawa Electric Co., Ltd. or your local representative. Continuing to operate under these conditions may cause fire, electrical shock or malfunction.
- If the fusion splicer is dropped and damaged, turn off the power switch, disconnect the power cable and contact The Furukawa Electric Co., Ltd. or your local representative. Continuing to operate may cause fire or electrical shock.



CAUTION

- Do not place the fusion splicer on an unstable or inclined surface. There is a possibility that the fusion splicer will fall and cause injury.
- Disconnect all cords when moving the fusion splicer. Failure to do so may damage the cords which may cause fire or electrical shock.
- Do not place the cords around any heating instrument. Doing so may damage the cords which cause fire or electrical shock.
- Do not connect or disconnect cords with wet hands. Doing so may cause fire or electrical shock.
- Do not pull the cord to disconnect. Doing so may damage the cords which may cause fire or electrical shock. Hold the plug portion and disconnect the cord.
- Do not put heavy items on the cords. Doing so may damage the cords which may cause fire or electrical shock.
- Do not modify the cords and do not over-bend, over-twist, or over-stretch the cords. Doing so may cause fire or electrical shock.
- Ensure that the cords are disconnected when storing the fusion splicer.
- Never use aerosol dust cleaners or alcohol-based solvents to clean the electrodes.
- Non oil-based solvents should be used to clean the optical lenses.
- Store the fusion splicer in a cool dry place.

1.4. Power Requirements

The S175 fusion splicer can operate from any single-phase AC power source that supplies between 100-120 V and 200-240 V at a frequency of 50 Hz to 60 Hz , or from DC 10-16V.

1.5. Fuses

Use only the correct size of 250 VAC fuse as specified in this manual.

1.6. Line Power Cord

The S175 uses a three-wire power cord equipped with a protective earth contact. Do not connect an extension cord that does not have this feature.

When connected to an appropriate AC power source, the power cord grounds the instrument chassis.

 <p>A WARNING</p>	<p>To avoid the risk of injury or death, ALWAYS observe the following precautions before initializing the S175 fusion splicer.</p> <ul style="list-style-type: none">• Do not connect both AC and DC power sources at the same time. Connect one source or the other.• If using a voltage-reducing auto-transformer to power the S175 fusion splicer, ensure that the common terminal connects to the earthed pole of the power source.• Use only the type of power cord supplied with the S175 fusion splicer.• Connect the power cord only to a power outlet equipped with a protective earth contact. Never connect to an extension cord that is not equipped with this feature.• Willfully interrupting the protective earth connection is prohibited.
--	---

1.7. Toxic Hazards

Under normal conditions of use, storage, and handling the S175 fusion splicer presents no toxic hazards. However, under the following conditions, certain precautions are necessary.

1.7.1. Incineration

Some of the electronic components included in the assembly are constructed with resins and other chemicals that produce toxic fumes during incineration.

1.7.2. Acidic or caustic compounds

Some of the electronic components included in the assembly, particularly electrolytic capacitors, contain acidic or caustic compounds. In the event that a damaged component comes in contact with the skin, wash the affected area immediately with cold water. In the event of eye contamination, irrigate thoroughly with a recognized eye-wash and seek medical assistance.

1.7.3. Physical damage

Some of the components used in the assembly may contain very small quantities of toxic materials. There is a remote possibility that physically damaged electronic components may present a toxic hazard. **As** a general precaution, avoid unnecessary contact with damaged electronic components, and arrange for disposal in accordance with local regulations.


2. General Information

Fusion splicing is used to physically join together two optical fiber ends; the process may vary, depending on the type of fusion splicer used. The S175 Single-Fiber Fusion Splicer has an active core aligning mechanism to align the fiber ends and a controllable electric arc to melt the glass and butt the ends together. This results in a strong joint, with very low loss and very low back-reflection.


To achieve good splicing results, it is essential to know both the proper use of a fusion splicer and the characteristics of optical fiber. Because not all fibers are identical, they can melt or fuse at different temperatures. Therefore, to minimize splice loss, it is important that the arc power and the duration of the fusion arc be properly adjusted. The S175 fusion splicer features an inspection of arc function to help the user adjust these parameters.

Other intrinsic factors that contribute to the increase in splice loss are core diameter mismatch, cladding diameter mismatch, numerical aperture mismatch, core concentricity and noncircularity.

Core Diameter Mismatch

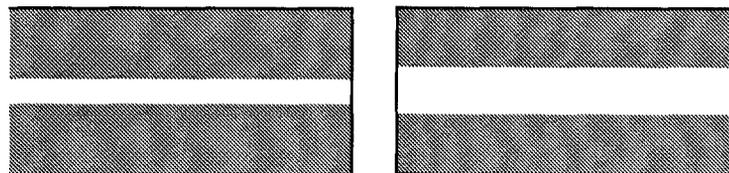


Cladding Diameter Mismatch

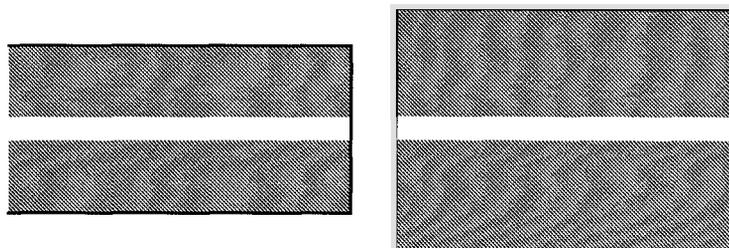


Numerical Aperture Mismatch


Different fibers have different numerical apertures. The aperture dictates the acceptance angle of light.

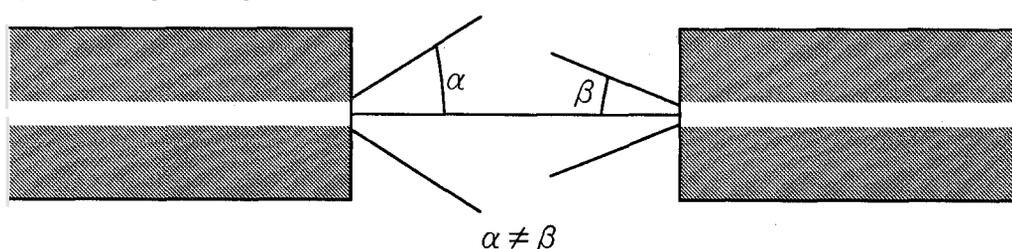

Core Concentricity

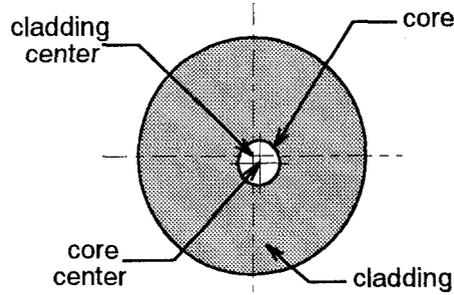

Core Noncircularity

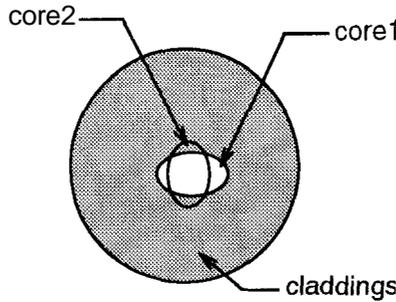

Optical fiber is basically classified as either single-mode (SM) or multi-mode (MM). Single-mode fiber, which includes dispersion-shifted fiber types, will transmit a single-mode (path) of data at wavelengths greater than the cut-off wavelength (1170 nm). Approximately 80% of the light is transmitted within the core, and 20% is transmitted in the surrounding cladding. Therefore, the transmission path is more accurately referred to as the mode field and not as the core. With a core diameter of typically 8 μm and a mode field diameter of approximately 10 μm, single-mode fiber can transmit more data than multi-mode fiber and with less attenuation.

In multi-mode fiber, the optical signal is transmitted entirely within the core. These fibers have a core size of 50 μm to 100 μm (50 μm or 62.5 μm, typically) and are commonly used in local area networks (LANs), short distance links and closed circuit television (CCTV).


Physical Characteristics of Optical Fiber for Fusion Splicing

Coating standard diameter material	250 μm, 900 μm acrylic resin, nylon	
Cladding standard diameter material	125 μm silica, Fluoro doped silica, Titan-coated silica	
Core standard diameter material	8 μm – 10 μm (SM) 50 μm – 62.5 μm (MM) Germanium doped silica, silica	

	Dispersion-shifted	Single-mode	Multimode
Transmitting capacity	superior	high	low
Splice loss	high	middle	very low
Splicing ease	difficult	middle	easy


Physical Characteristics of Single-mode and Multimode Fiber

50/125 Multimode

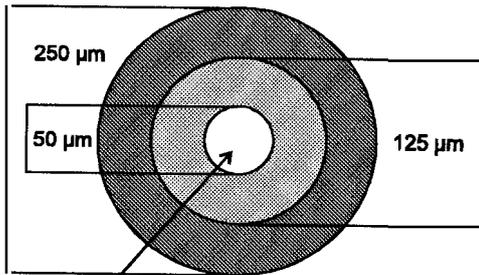


core transmits light

62.5/125 Multimode

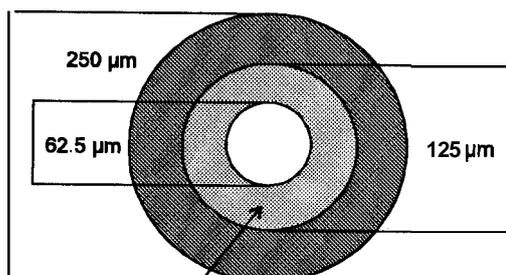



cladding keeps optical signal within core

Singlemode

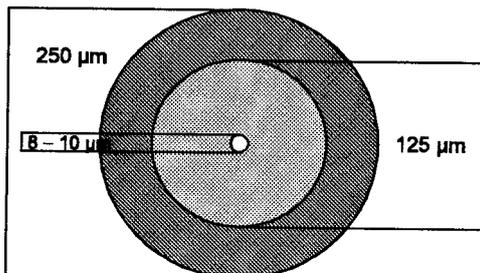


coating protects glass from abrasion and ensures high strength

100/140 Multimode

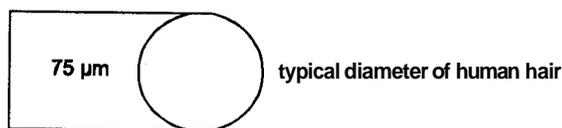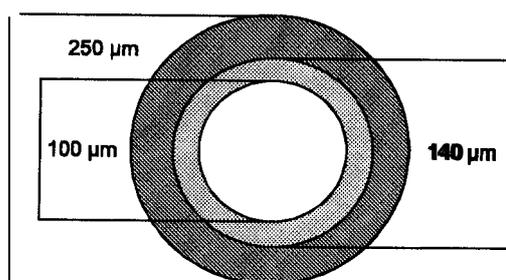

Core Diameter/Axis offset

Because the optical signal is transmitted through the core of the fiber, it is important to understand how the cores of the two fibers being spliced together compare. The following general formula can be used to show the effects of core offset on the splice loss. The formula is only theoretical and does not take into account other extrinsic factors such as cleave quality and dust contamination, and intrinsic factors such as core noncircularity and numerical aperture.

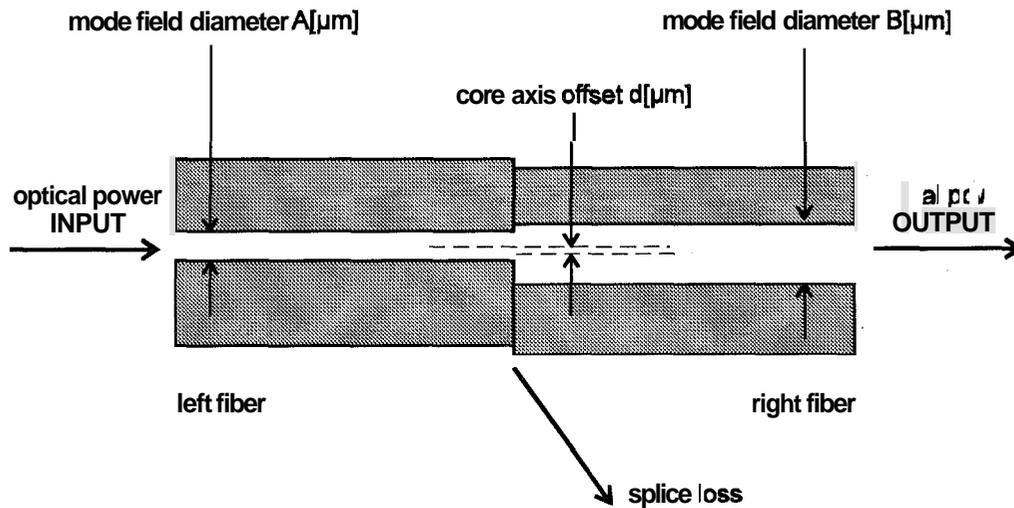

$$\text{splice loss} = 10 \times \log_{10} \left(\frac{\text{OUTPUT}}{\text{INPUT}} \right) = 10 \times \log_{10} \left[\left(\frac{2AB}{A^2 + B^2} \right)^2 \exp \left(- \frac{2d^2}{A^2 + B^2} \right) \right]$$

- ◆ A difference between A and B will cause a splice loss, even if d is zero. If using single-mode fiber, the manufacturer of the fiber may be able to provide mode field diameter specifications.

It is impossible to have perfectly centered cores, because fiber manufacturing limitations often result in small offsets. Today's optical fibers are well manufactured and have core eccentricity of less than 0.5 μm. However, older fiber exhibits core eccentricity near 1.0 μm.

The S175 fusion splicer, which has an active core alignment function by observing the core position with microscope and image processor, aligns the cores of both fibers to minimize the axis offset described above.

3. Operating Specifications and Components

3.1. Specifications

Description	Minimum	Typical	Maximum	Units
Fiber cladding diameter	100		150	μm
Coated fiber range		250,900		μm
Fiber strip length (10mm is optional for 900 μm coating)	10	16		mm
Average splice loss (Identical fibers)				
Single-mode		0.02		dB
Multi-mode		0.01		dB
Dispersion shifted		0.04		dB
Environmental				
Operating temperature	-10		50	°C
Storage temperature	-40		60	°C
Humidity (Non condensing)			95	%R.H.
Electrical				
Input terminals from AC supply		100-120 200-240		VAC
Input terminals from DC supply	10	12	16	VDC
Power consumption		27	70	Watt
Dimensions				
Splicer		181W x 285D x 181H		mm
Carrying case		470W x 291D x 420H		mm
Weight				
Splicer		6.3		kg
Carrying case		4.8		kg
Data storage				
Splice Data		400		splices
Arc Check History		100		checks
Program storage				
Fusion Program		32		–
Heater Program		8		–
Typical Splice time		19 (Accurate Estimation Mode) 17 (High Speed Mode)		see
Typical Reinforcing time		75 (with S922) / 90 (with S921)		sec

3.2. Components

Part	Part Number	Quantity
Standard Components		
Main body	S175X-01	1
Top cover	S175X-02	1
Work table	S175X-03	1
AC Power cord	S175X-04	1
Spare electrode	S175X-05	1 pair
Spare fuse	S175X-06	1 pair
Carrying case	S175X-07	1
DC Connector	S175X-08	1
User's manual		1
Optional Components		
DC power cord	S175X-A01	1
RS-232C cord	S175X-A02	1
Battery	S175X-A04	1

3.3. Optional Accessories

Contact The Furukawa Electric Co., Ltd. or your local representative for a more detailed specification.

- S210 stripper
- S321 precision cleaver
- S322TR precision cleaver for Titan fiber
- S323 precision cleaver
- S423 Tool kit (including S210 and S321)
- S901 high-capacity battery
- S902 printer
- S921 60mm length splice protection sleeves
- S922 40mm length splice protection sleeves


3.4. Recommended Consumable

Keep a supply of the following items with the S175 fusion splicer at all times.

- Spare electrodes (Part No. S175 X-05)
- Fuse (Part No. S175X-06)
- Tweezers
- Protective eye glasses
- Electrode cleaning block
- Denatured alcohol
- Lint-free tissues or swabs
- Container for disposal of scrap fiber

4. External Description

4.1. Operating Keys and Status LEDs

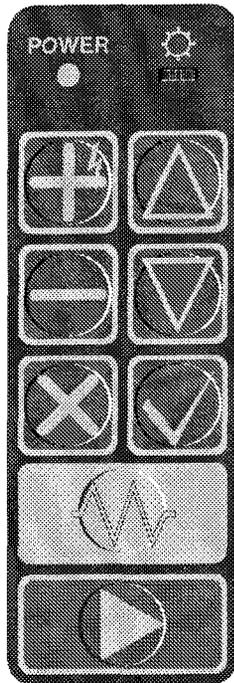


Keys	Function
	Initiates, pauses and resumes the fusion splicing cycle.
	Initiates and stops the heating operation.
	Confirms a selection.
	Escapes an operation, and returns to the previous menu.
	Scroll up.
	Scroll down.
	Changes the parameter value. Initiates an arc for fusion splicing and an additional arc.
	Changes the parameter value.
POWER (LED)	Indicates power condition. (See below)
 (Volume)	Brightness control for LCD Monitor.

◆ *POWER LED indicates the power conditions as below.*

LED color	Power condition with DC input	Power condition with AC input
Red	Inappropriate voltage ($<10V$ or $17.5V<$)	Inappropriate voltage ($<85V$ or $265V<$)
Orange	Lower voltage ($10-11V$)	-
Green	Appropriate voltage	Appropriate voltage


4.2. Side Panel

4.2.1. Right side panel

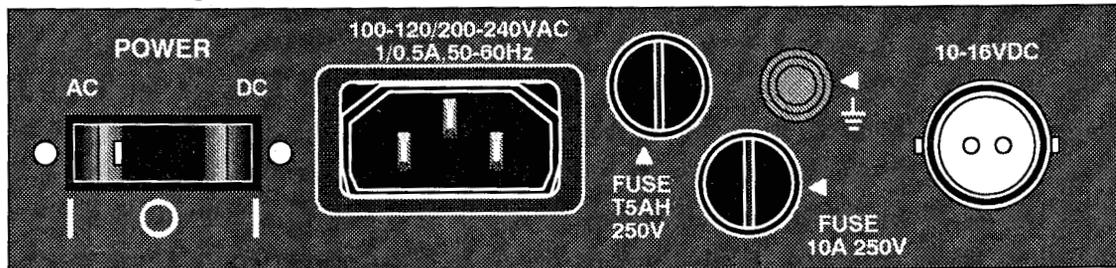



Label	Description
POWER AC/OFF/DC	Three position power switch: Power On from DC source (right), Power Off (middle), and Power On from AC source (left).
FUSE 10A 250V	Fuse for DC power source (250VAC, 10A)
FUSE T5AH 250V	Fuse for AC power source (250VAC, T5AH)
10-16VDC	DC power source input
	Frame ground terminal
100-120/200-240VAC 1/0.5A,50-60Hz	AC power source input

4.2.2. Left side panel

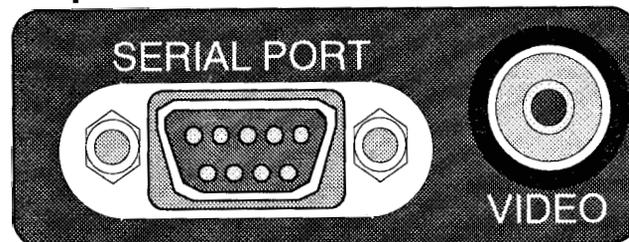

Label	Description
SERIAL PORT	RS-232C interface for data communication
VIDEO	PIN connector for video output

4.3. Main Body

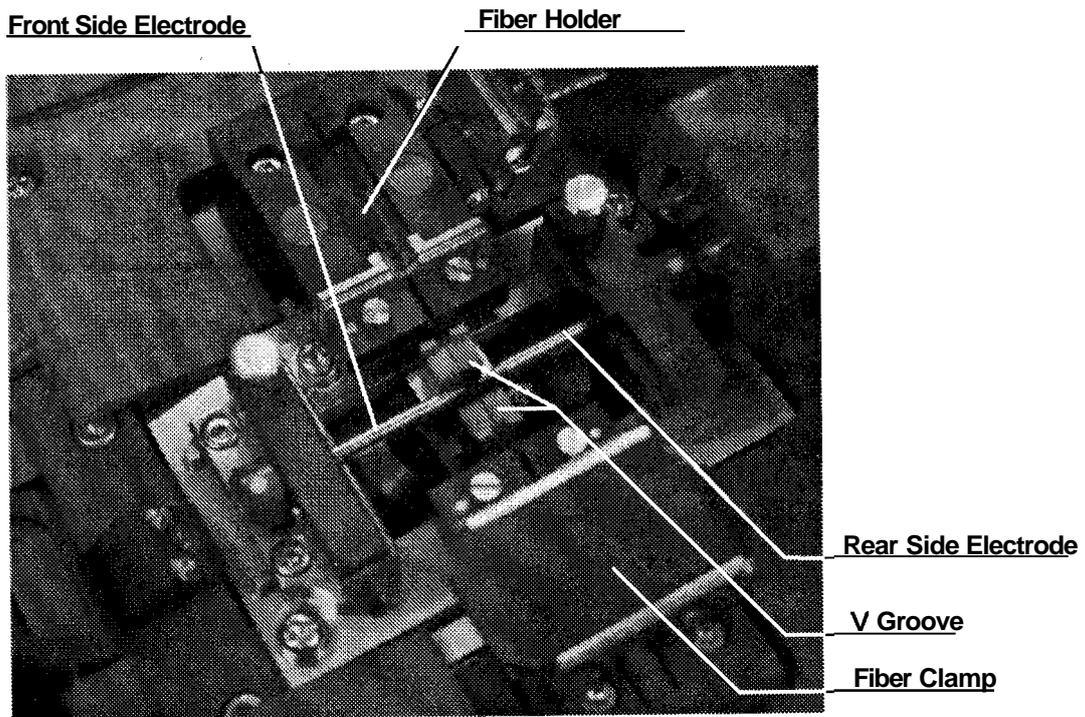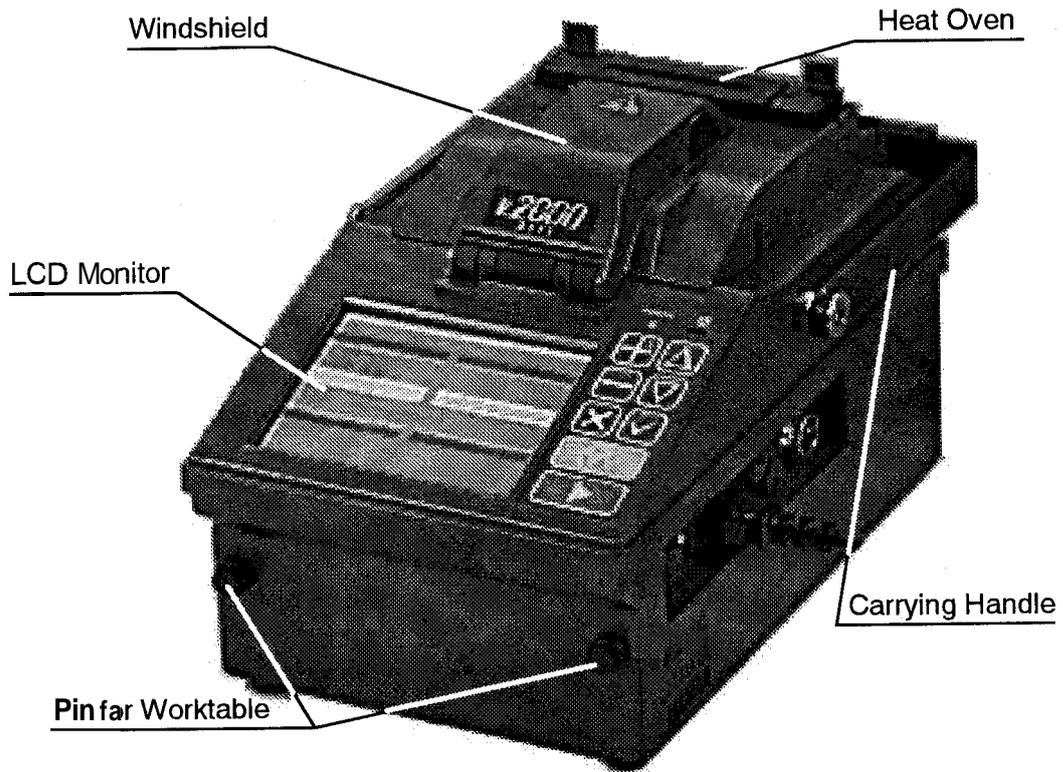

5. Getting Started

5.1. Unpacking and Initial Inspection

1. Inspect the shipping container for any indication of excessive shock to the contents.
2. Remove the S175 carrying case from the shipping container, and open the case. Ensure that the carrying case is right side up before opening.
3. Inspect the contents to ensure that the shipment is complete.
4. Lift the S175 fusion splicer out of the carrying case by its carrying handle, and place the instrument on a flat, smooth surface.
5. Visually inspect the S175 fusion splicer and all accompanying components for structural damage that may have occurred during shipping.

Immediately inform The Furukawa Electric and, if necessary the carrier, if the contents of the shipment are incomplete, if any of the S175 fusion splicer components are damaged or defective, or if the S175 fusion splicer does not pass the initial inspection.

 WARNING	To avoid electrical shock, do not initialize or operate the S175 fusion splicer if it bears any sign of damage to any portion of its exterior surface, such as the outer cover or panels.
---	--


5.2. Setup

1. Lift the S175 fusion splicer out of the carrying case by its carrying handle, and place the instrument on a flat, smooth surface.
2. If necessary, insert the holes of the work table onto the pins at the front side of the splicer, then lower the work table to lock it.
3. Make sure that the power switch of the S175 is turned off and connect the power cord properly to the power source.
4. Set the power switch to **AC** or DC in accordance with the power source connected, and the "FITEL" logo is displayed.

5.3. Installing the splice programs

Install the splice programs with the "Install Program" screen, which appears after the "FITEL" logo.

1. Press **A** or **V** to scroll to the Fusion Programs and press **+** or **-** to the Heater Programs.
2. Press **▶** or **✓** to decide the selection.
3. "SYSTEM RESET" is displayed on the LCD monitor and the machine returns to the initial condition for starting operation.
4. "READY" is displayed on the LCD monitor with a beep when the reset operation is complete.

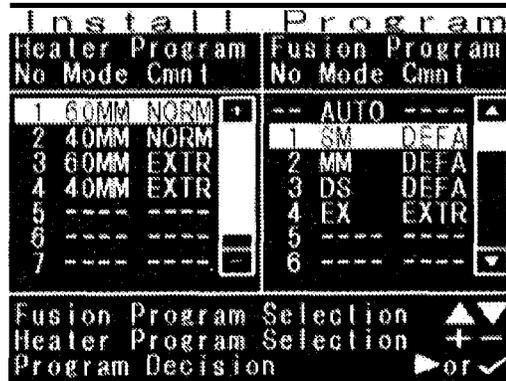

The S175 fusion splicer is shipped with the following factory-set programs. Those factory-set programs are as followings.


Fusion programs	
AUTO	The S175 fusion splicer automatically installs an appropriate fusion program from the following three programs by analyzing the fiber.
SM	Fusion program for splicing standard Single-mode fibers.
MM	Fusion program for splicing standard Multi-mode fibers.
DS	Fusion program for splicing standard Dispersion-shifted fiber s.
Ex	Fusion program for other fibers.
TW	Fusion program for splicing Lucent Truwave fibers.
LF	Fusion program for splicing Corning Leaf fibers.
SMDS	Fusion program for splicing standard Single-mode fiber and standard Dispersion-shifted fiber.
SMTW	Fusion program for splicing standard Single-mode fiber and Lucent Truwave fiber.
SMLF	Fusion program for splicing standard Single-mode fiber and Corning Leaf fiber.
Heater programs	
60MM NORM	Heater program for 60mm-length protection sleeve (S921).
40MM NORM	Heater program for 40mm-length protection sleeve (S922).
60MM EXTR	Heater program for 60mm-length protection sleeve for slower shrink.
40MM EXTR	Heater program for 40mm-length protection sleeve for slower shrink.

Getting Started


5.4. Selecting the Operating Language

The S175 fusion splicer can be set to provide operating prompts in English, French, German, Portuguese, Spanish, Japanese, Chinese, Italian, Dutch and other languages. The default operating language is English.

1. From the READY screen, press **✓** to access to the “Base Menu” screen.
2. Press **▲** or **▼** to scroll to < Other >, and press **✓** to display the <Other> menu screen.
3. Press **▲** or **▼** to scroll to <Configuration>, and press **✓**. The <Configuration> screen is displayed.
4. Press **▲** or **▼** to scroll to the Language.
5. Press **+** or **-** to select the language and press **✕**.

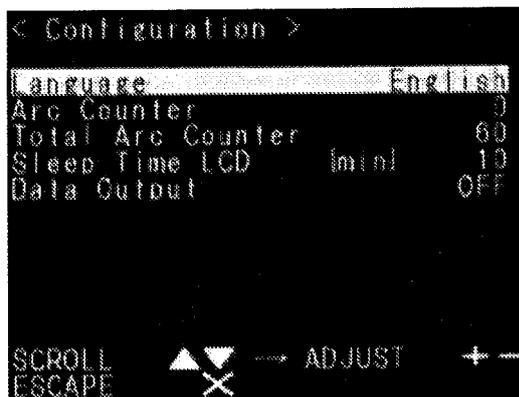

6. The screen changes to the right to confirm the change. Press **▲** or **▼** to scroll to the items and press **✓**. “Quit without changes” returns to the <Other> screen without changing the language and “Store Changes” changes language.
7. Press **✕** to return to the previous screen and return to the “READY” screen.

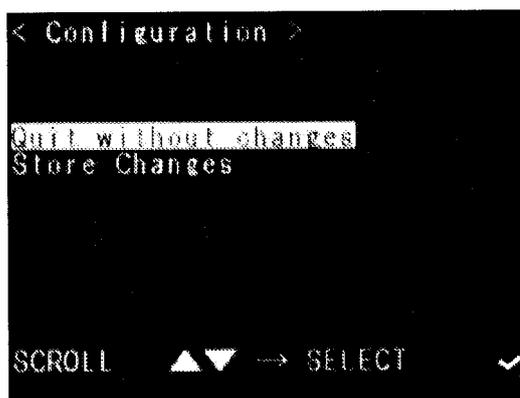


5.5. Arc check

Because fibers melt or fuse at different temperatures, it is necessary to adjust the arc power in order to ensure optimum splicing results. Electrode wear can also affect the splicing results. Therefore, an Arc Check should be performed everyday prior to initial use, when the fiber type is changed, or when high splice losses are obtained.


The S175 fusion splicer prompts to perform the arc check when the "READY" is displayed after power on. Follow the procedures below. If the arc check is not necessary, press **▶** and the fusion splice starts.

1. Load the fibers. Ensure that the fibers are properly stripped, cleaned and cleaved.
2. Press **✓** at the "READY" screen. "Base Menu" is displayed and the <Arc Check> is highlighted. Press **✓** again to initiate the Arc check.
3. The S175 fusion splicer automatically feeds the fibers and discharges an arc.

- During the arc discharge, the fiber feeding motors of the S175 fusion splicer remain idle, preventing the fiber ends from butting. As a result, the fiber ends melt back. The arc check function inspects how far the fibers melt back and the centered position of the fiber. If the arc check results are good, the message "RESULT: OK" is displayed.

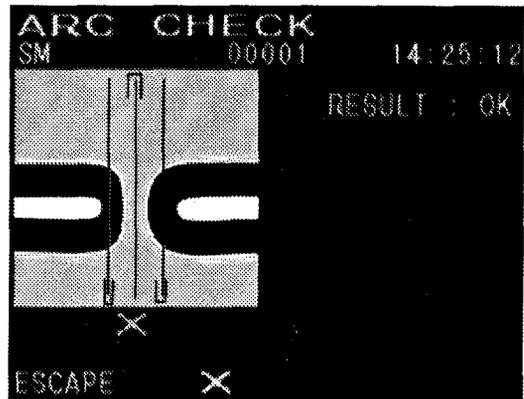

- If the results of the arc check fails, "RESULT: NG" is displayed.
- CENTER is the center position (pixel) of the gap set between the fibers. When the center position of the melt back moves less than 10 pixels from the center before the melt back, the result is OK, When it moves more than 10 pixels, the result is NG and the CENTER is automatically adjusted to the center pixel of the melt back by pressing **✓**.

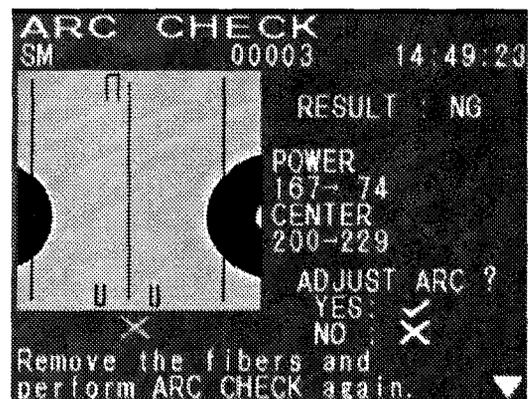


- POWER regulates the arc power. The volume can be set between 0 and 255. If the value requires adjustment the machine automatically recommends the new value for the next arc check.

5. When OK is displayed, press ✖ to complete the arc check and return to the READY screen.
 6. If either the CENTER or the POWER is out of the appropriate range, "RESULT: N G" is displayed. The splicer will recommend the value to which the arc power should be set. Press ✓ to automatically change to the recommended value, or press ✖ to leave the value unchanged.
 7. Repeat the arc check to determine that the new values are acceptable. It is necessary to remove the fibers and prepare them again with a new cleave. If unsatisfactory results are obtained after four (4) arc check attempts, inspect the electrodes for wear or damage, and replace them if necessary.
- ◆ *A visual arc check can be made by viewing the arc on the monitor by pressing ⚡ key. Electrode discharge should produce a straight and steady arc. Swaying in the arc indicates that the electrodes require either cleaning or replacing.*

6. Operating Instructions

6.1. Ready Screen

Once the S175 fusion splicer is powered up and the arc check program is concluded, the READY screen is displayed.

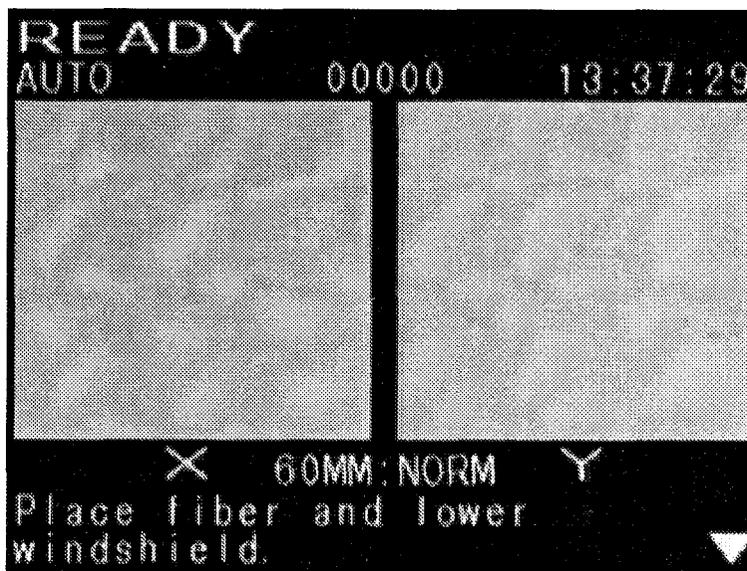

AUTO	Indicates the installed Fusion Program.
00000	Indicates the number of splices performed. Incremented with every splice.
13:37:29	Indicates the time.
X / Y	Indicates the fiber view.
60MM; NORM	Indicates the installed Heater Program
*	Asterisk mark appears at the left side bottom corner when the accurate estimation mode is selected.


6.2. Fusion Splicing

Once the arc check function is performed and correct programs are selected, the complete fusion splicing cycle can be initiated from the READY screen.

6.2.1. Preparing the Fiber

Splice loss is directly affected by the quality of the fiber preparation. For best results, ensure that the V-grooves are clean and that the fiber ends are properly cleaned and cleaved.

1. Slide a splice protection sleeve onto either the right or the left fiber.
 2. Strip *off* a portion of fiber coating from each fiber end to expose approximately 35 mm of bare fiber.
 3. Wipe the bare fiber with a lint-free tissue soaked with denatured alcohol.
 4. Cleave the fiber so that 10mm (both for 250 μ m and 900 μ m coating diameter) or 16mm (only for 250 μ m coating diameter) of bare fiber extends past the fiber coating.
- ◆ *Do not clean the bare fiber after it has been cleaved, and do not let it come in contact with any surfaces.*

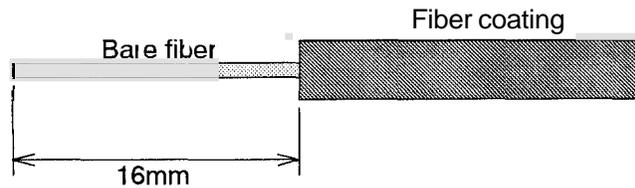


6.2.2. Loading the Fiber


1. Raise the windshield and the fiber clamps.
 2. Open the fiber holder and place a fiber in each fiber holder, with the stripped portion in the V-groove.
- ◆ *Do not slide the tips of the fiber ends through the V-groove tracks.*
- ◆ *Both 10mm cleave length (both for 250 μ m and 900 μ m coating diameter) and 16mm (for 250 μ m coating diameter only) cleave length can be applied. For converting the cleave length, loosen the Screws fixing the End Plate and retighten them after changing the End Plate position as shown below.*

Operating Instructions

Cleave length:16mm

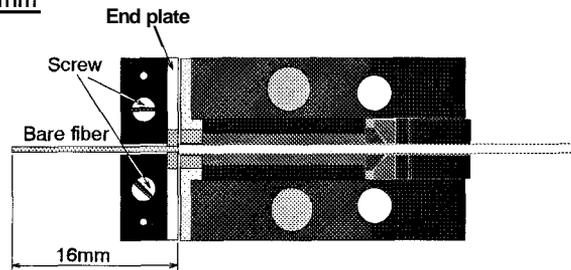

Cleave length:10mm

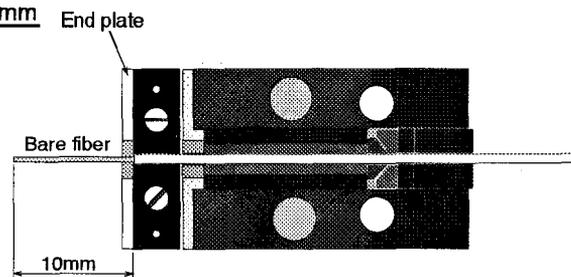

3. Ensure that the fibers are properly aligned in the V-grooves, and close the fiber holders.
4. Lower the windshield to return to the "READY" screen.

6.2.3. Fusion Splicing

1. Ensure that the "READY" screen is displayed on the monitor.
2. Press  to initiate the fusion splicing cycle.
3. The S175 fusion splicer performs the following functions automatically. To pause the S175 fusion splicer during any of these functions, press . The message PAUSE will be displayed on the monitor. To restart the operation, press  again.
 - The right and left fiber ends appear on the LCD monitor. (High speed fiber feeding)
 - A cleaning arc is discharged to clean the fiber ends.
 - The fibers are set with a gap of about 20 μm between the ends. (Middle speed fiber feeding)
 - X and Y screens are zoomed up.
 - The fibers are inspected for axis offset and cleave condition. When AUTO is selected for the Fusion Program, the fiber type is analyzed and the "AUTO" changes to the analyzed fiber type in the screen.
 - The cores of the fibers are aligned on the X and Y view screens.
 - The electrodes discharge.
 - The splice is inspected.

- The splice loss is estimated and displayed on the LCD monitor.

- ◆ *If an abnormality was detected in the process, the estimated loss is displayed with ">" instead of "=", to indicate the error occurrence in the cycle. (Example: LOSS > 0.04dB)*
- ◆ *To discharge an additional arc, press ; splice inspection and loss estimation are repeated.*
- ◆ *If the fibers fail the inspections for cleave condition, the fusion cycle is paused and an appropriate error message is displayed. Open the windshield, remove the fibers after READY is displayed and retry the splice by repeating the entire procedure, starting from the fiber preparation process. To ignore the error and continue the cycle, press  again.*

6.2.4. Splicing Defects

Defect	Possible Causes	Action
Bubbling	Wrong fiber type selected	Select the correct Fusion Program, and repeat fusion splicing.
	Faulty cleave	Repeat fiber preparation and fusion splicing.
	Dirty fiber end	Repeat fiber preparation and fusion splicing.
	Degradation of electrodes	Replace the electrodes.
Not spliced or Neck-down	Wrong Fusion Program selected	Select the correct Fusion Program, and repeat fusion splicing.
	Faulty cleave	Repeat fiber preparation and fusion splicing.
	Excessive arc current	Perform an arc check, and adjust arc power.
	Insufficient fiber feed	Adjust the fiber feed amount.
	Degradation of electrodes	Replace the electrodes.
Thickening	Wrong Fusion Program selected	Select the correct Fusion Program, and repeat fusion splicing.
	Excessive fiber feed	Adjust the fiber feed amount.
	Degradation of electrodes	Replace electrodes.
	Excessive arc current	Perform an arc check, and adjust arc power.
Streak	Wrong Fusion Program selected	Select the correct Fusion Program, and repeat fusion splicing.
	Degradation of electrodes	Replace the electrodes.
	Weak arc	Perform an arc check and adjust arc power, or apply an additional arc.


6.2.5. Removing the Spliced

1. Raise both heater clamps before removing the fiber.
 2. Raise the windshield. A tension test (200 g) is performed on the fibers. "TENSION TEST" is displayed on the screen during the test.
 3. Wait until the tension test is completed and "REMOVE FIBER" is displayed before removing the spliced fibers. The "REMOVE FIBER" display changes to "LOAD FIBER" after 5 seconds. Meanwhile, the S175 fusion splicer automatically resets the motors for next splice.
 4. Remove the spliced fiber, pulling slightly so that the fiber is taut.
- ◆ *Handle the spliced fiber carefully. Do not twist the fiber.*



 CAUTION	<p>Do not attempt to load fibers while the S175 fusion splicer is resetting. Load the fibers only after the reset operation is complete and the READY screen or LOAD FIBERS screen is displayed.</p>
---	--

6.2.6. Reinforcing the Fusion Splice

1. Slide the splice protection sleeve over the splice.
2. Place the spliced fiber in the heater – left-side first – to force the left heater clamp to lower.
3. Ensure that the splice protection sleeve rests in the middle section of the heater and that the stainless steel rod in the sleeve faces down.

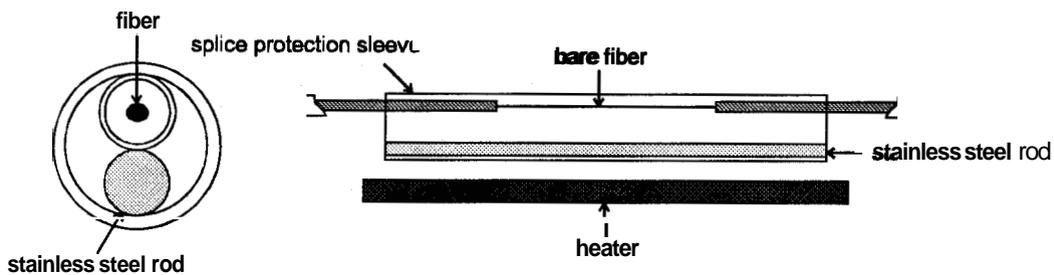


4. Keeping the fiber taut with the right hand, lower the spliced fiber to force the right heater clamp to lower.
5. Close heater cover.
6. Press  to activate the heater. The heating process is displayed in the LCD monitor at the Heater Program display as below. When the heating and cooling operations are completed, a beep sound is heard.

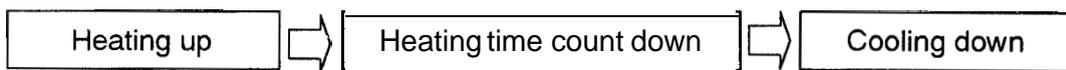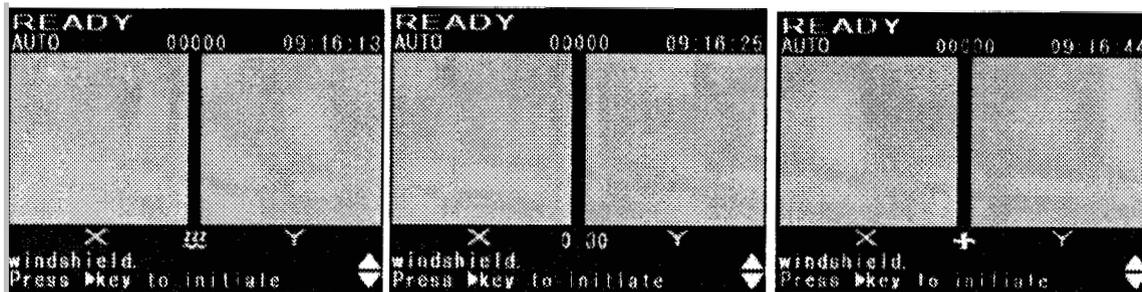

- ◆ To stop the heating operation (the HEAT LED is lit), press . The heating stops and the cooling starts immediately. The cooling fan also stops by pressing  again.


6. Remove the fiber from the heater, and inspect the splice protection sleeve for heating results.

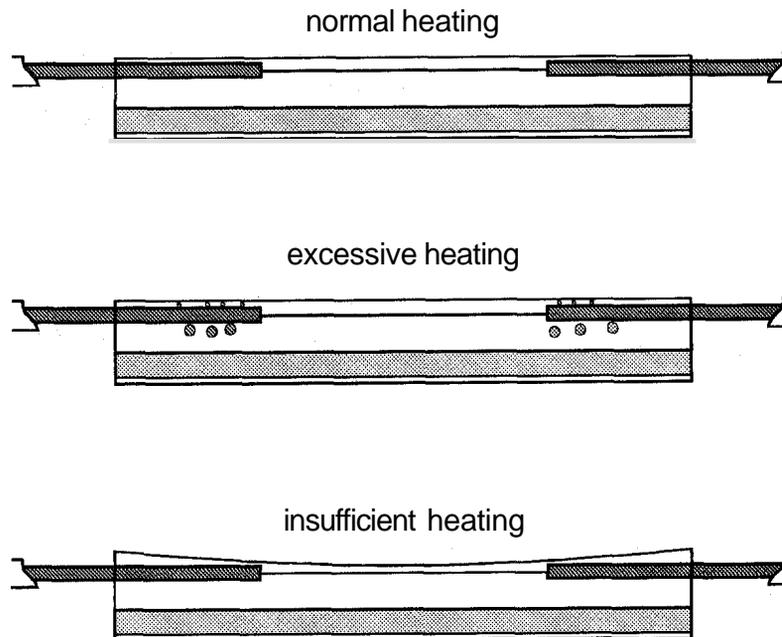

6.2.7. Changing the Fusion Program

Follow the operation below to change the Fusion Program when the fiber type is changed,


1. From the READY screen, press ✓ to access to the Base menu screen.
2. Press ▲ or ▼ to scroll to <Select Program>, and press ✓ to access to the <Select Program> menu screen.
3. Press ▲ or ▼ to scroll to the <Fusion Program>, and press ✓.
4. Press ▲ or ▼ to scroll to select <Auto Selection or <Manual Selection>, and press ✓.
5. The <Auto Selection is to automatically install an appropriate fusion program from SM, MM and DS by analyzing the fiber. When the <Auto Selection> is selected, the screen right appears. Press ✕ to return to the previous screen. Repeat pressing ✕ to return to the "READY" screen.

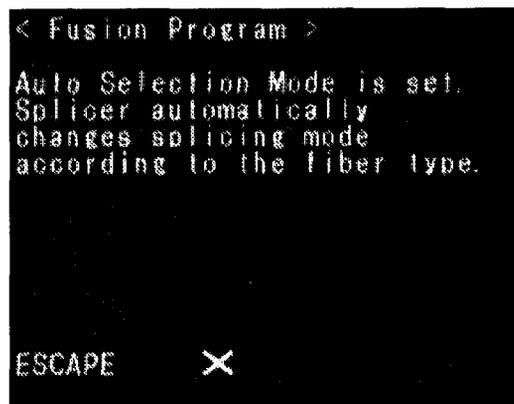

- ◆ *In case the type of the fiber is not clear, select the <Auto Selection>. Fusion*


splicer selects suitable program automatically.

6. When the <Manual Selection> is selected, the <Fusion Program> menu screen appears. "Current Program" in the screen shows the fusion program now installed.
7. Press **A** or **V** to select the program number, and press **✓**.
8. The screen instructs to press **✓** again to confirm the selection. Press **✓**, or press **✗** to cancel the selection.
9. The screen returns to the previous screen. Press **✗** until the screen returns to the "READY".

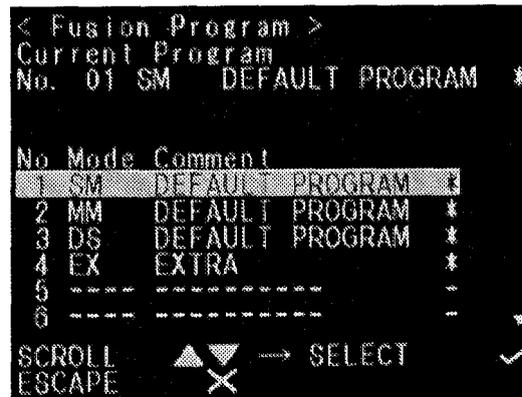

6.2.8. Changing the Heater Program

1. From the READY screen, press **✓** to access to the Base menu screen.
2. Press **A** or **V** to scroll to <Select Program>, and press **✓** to access to the <Select Program> menu screen.
3. Press **A** or **V** to scroll to the <Heater Program>, and press **✓**. <Heater Program> menu screen appears. "Current Program" in the screen shows the Heater program now installed.
4. Press **A** or **V** to select the program number, and press **✓**.
5. The screen instructs to press **✓** again to confirm the selection. Press **✓**, or press **✗** to cancel the selection.
6. The screen returns to the previous screen. Press **✗** until the screen returns to the "READY".

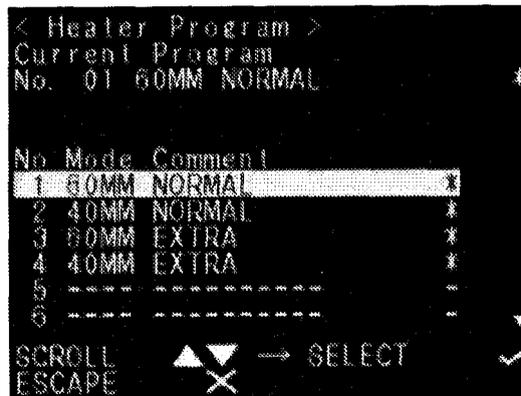


- ◆ *Select NORMAL program for FURUKA WA S921 or S922 protection sleeve. If the air bubble remains inside of sleeve using other supplier's sleeve, then select EXTRA program and try.*

6.2.9. Performing an Attenuation Splice (Optional)

The attenuation splice is to splice fibers with a certain splice loss.

1. Install the "SM" Fusion Program. Refer to the "Changing the Fusion Program, Operating Instructions".
2. Modify the parameter "Attenuation" in the Fusion Program for the required attenuation, store the modified program at a new location of BACKUP RAM and install the program for the Fusion Program. Refer to "Modifying a Fiber Program, Programming Guide". The maximum value for the attenuation is 10.0dB.
3. Load the fibers and perform the splice as normal.
The screen right is displayed while the fiber offset is set for the attenuation.

- ◆ *Ensure to perform an Arc Check before the splice to obtain more accurate attenuation.*
- ◆ *This function is not available on usual software program.*

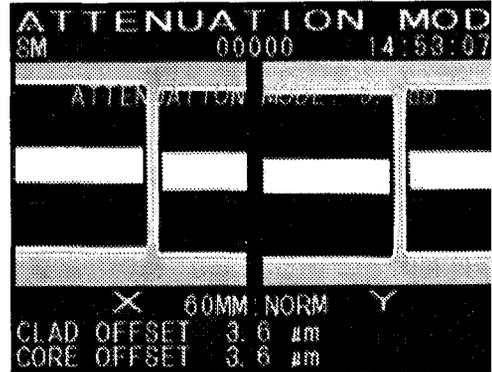

7. Maintenance and Handling Instructions

7.1. Error Messages

The following is a list of error messages that can be observed. Refer to the following table for trouble-shooting.

Error Messages	Error Description	Cause of the error	Action
CUT ERROR (with side of the failed fiber)	Cleaving error is found in left fiber, right fiber, or both left and right fibers.	Exceeding the inspection criteria for cleave quality	Prepare the fiber again and retry .
		Incorrect parameter setting for cleave quality.	Check and correct the parameters.
SPLICE DEFECTS	See "Splicing Defects, Fusion Splicing".		
FEEDING ERROR (with name of the failed motor)	The motor does not stop after the time limited from the start.	Defect in the motor driving system.	Contact service center.
OVER-RUN (with name of the failed motor)	The motor detected the overrun limit when running forward.	Fiber is not loaded or not in the proper position.	Load the fiber at the proper position.
		Inappropriate fiber program is selected.	Check and correct the program.
		Bad cleaving quality.	Prepare the fiber again and retry .
		Defect in the image processing system.	Contact service center.
		Defect in the motor driving system.	Contact service center.
		V-groove is dirty	Clean the V-groove.
HEAT TIME OUT	The temperature does not reach the set value within the time limit from heating start up.	Incorrect parameter is set for heating.	Check and correct the parameters.
		Defect in the heating system.	Contact service center.

Error Messages	Error Description	Cause of the error	Action
COOL TIME OUT	The temperature does not decrease to the set value within the time limit from cooling start.	Incorrect parameter is set for cooling.	Check and correct the parameters.
		Defect in the heating system.	Contact service center.
OVER TEMP.	The temperature exceeds the set value while heating.	Defect in the heating system.	Contact service center.
VISUAL ERROR	The image process cannot focus on the fiber, find the clad line, or find the core line while inspecting.	Fiber is dirty.	Retry the splice from preparation. Make sure to clean the bare portion of the fiber.
		Inappropriate fiber program is selected.	Check and correct the program. Change to AUTO splice mode
		Incorrect parameter setting for FOCUS.	Check and correct the parameters.
		Defect in the image processing system.	Contact service center.
		Defect in the screening system.	Contact service center.
		Optics is dirty.	See Maintenance chapter.
FOCUSING ERROR	Unable to focus on the fiber.	Fiber is dirty.	Retry the splice from preparation. Make sure to clean the bare portion of the fiber.
		Inappropriate fiber program is selected.	Check and correct the program.
		Incorrect parameter setting for FOCUS and FIELD.	Check and correct the parameters.
		Defect in the image processing system.	Contact service center.
		Optics is dirty.	See Maintenance chapter.

Maintenance and Handling Instructions

Error Messages	Error Description	Cause of the error	Action
OUT OF SPEC	The fiber is out of applicable range.	Inappropriate fiber program is selected.	Check and correct the program. Change to AUTO fiber selection.
		Cladding diameter is out of applicable range.	Can not splice with S175.

7.2. Maintenance

7.2.1. Arc Check

Perform an arc check whenever high splice losses are obtained (see Performing an Arc Check, *Getting Started*).

7.2.2. Electrode Maintenance

Inspect the electrodes for dirt, wear and damage before using the fusion splicer. Dust and other particles can be cleaned off by removing the electrodes from the splicing mechanism and carefully running a sharp blade along the surface of each electrode.


Replace the electrodes if any of the following conditions exist:

- an electrode is bent
- an electrode end has become extremely rounded
- abnormal noise occurs during fusion splicing


When the number of Arc Counter exceeds 1,000, the S175 automatically displays a message to prompt replacing the electrodes at power on. Turn off the switch and replace the electrodes. S175 asks if the electrodes are replaced after prompting the replacement. Select “Yes” if replaced and “No” if not. When “Yes” is selected, the Arc Counter is reset to 0 and the message will not appear at power on. When “No” is selected, the prompting message will be displayed again when power is turned on.

- ◆ *Always replace both electrodes, even if only one electrode is damaged.*
- ◆ *Be sure to turn off the Power switch before starting maintenance. Never touch the electrode while the Power is on.*

1. Loosen the screws of the Holding Plates, and raise the plates. The Electrode is raised together with the holding plate. Ensure not to drop the Electrodes into the machine.
2. Carefully pull and remove the Electrodes from the Holding Plates by grasping the Electrode Knob. Make sure not to touch the tips of Electrodes with some other things.
3. Clean or discard the Electrodes as necessary.

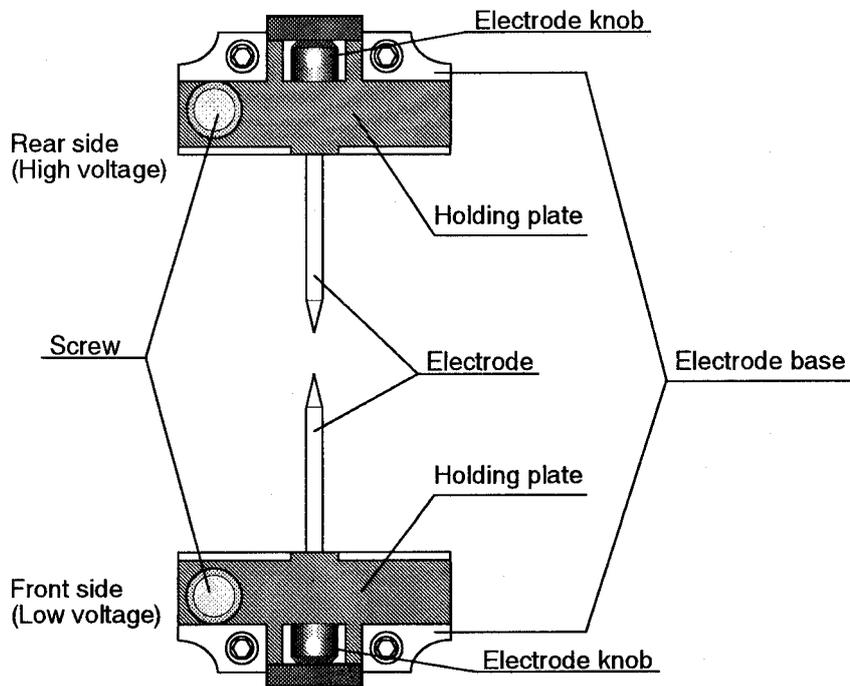

- ◆ *When cleaning an electrode, grasp the electrode at its center to prevent it from bending and polish the tip with a knife sharpening block.*

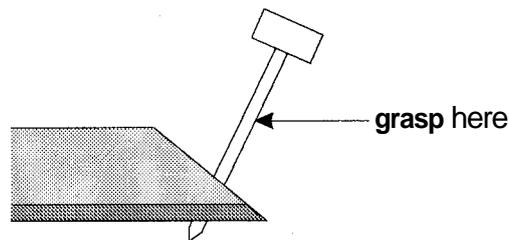

4. To load the electrodes into the splicer, push the electrode knob flush with the holding plate to ensure correct spacing.
5. Tighten the screws of the Holding Plates uniformly. **Do not overtighten the screws.**
6. Lower the windshield, and press **ARC** at least five (5) times to burn off any residue remaining on the electrodes.

7.2.3. Cleaning the objective lens

1. Remove the Electrodes.
2. Wipe the lens with a cotton swab soaked with denatured alcohol.
3. Dirty or damaged mirrors may prevent the splicer from performing a splice or may produce incorrect splice loss information.

7.2.4. Cleaning the Mirrors

1. Two mirrors for reflecting the LED light are equipped in the windshield. Open the windshield.
 2. Wipe the mirror surface with a cotton swab soaked with denatured alcohol.
- ◆ *Long duration or many times arc discharging causes smoke on the mirror.*



**Never use acetone for cleaning the mirrors and the objective lens.
Do not soak the cotton swab with too much alcohol.**

7.2.5. Cleaning the V-grooves

- ◆ *Dirt on the V-grooves or fiber clamp will offset the alignment of the fibers or cause stress points on the glass, making the fiber weak,*
1. Prepare a piece of fiber and cleave it approximately 10mm from the end.
 2. Hold the fiber at a 45° angle.
 3. Run the cleaved end back and forth along each groove to scrape off any debris.
- ◆ *If the V-grooves are extremely contaminated, it may also be necessary to wipe the grooves with a cotton swab soaked with denatured alcohol.*

7.2.6. Cleaning the V-groove Fiber Clamps

1. Two Fiber Clamps to press the fiber on the V-groove are equipped in the windshield. Open the windshield.
2. Clean the top of fiber clamps with a cotton swab soaked with denatured alcohol.

7.3. Storing and Shipping

To maintain optimum operating reliability, do not store the S175 fusion splicer in locations where the temperature falls below -40°C or rises above +60°C, and avoid any environmental conditions that can result in internal condensation. Ensure that these temperature and humidity requirements are also met whenever the S175 fusion splicer is shipped.

7.4. Claims and Repackaging

Immediately inform The Furukawa Electric Co., Ltd. or your local sales representative and, if necessary, the carrier, if the contents of the shipment are incomplete or if the S175 fusion splicer or any of its components are damaged or defective, or if the fusion splicer fails during operation. In the event of carrier responsibility, The Furukawa Electric Co., Ltd. will allow for the repair or replacement of the S175 fusion splicer or component while a claim against the carrier is being processed.

7.5. Return Shipments to The Furukawa Electric Co.

The Furukawa Electric Co., Ltd. will only accept returns for which an approved Return Material Authorization (RMA) has been issued by The Furukawa Electric Co., Ltd. customer service personnel. This number must be obtained prior to shipping any material back to The Furukawa Electric Co., Ltd. The owner's name and address, the model number and full serial number of the S175 fusion splicer, the RMA number, and an itemized statement of claimed defects must be included with the return material. Never ship the S175 fusion splicer without or outside of its carrying case.

◆ *If possible, return material in its original shipping container and packing material.*

1. Seal the shipping container securely, and clearly mark FRAGILE on its surface.
2. Always provide the model and serial number of the S175 fusion splicer and, if necessary, the RMA number on any accompanying documentation.

8. Programming Guide


8.1. Proarammina Functions and Menu

The following table is a list of functions available to the operator for programming and maintenance.

For details on <Arc Check> and <Select Program>, refer to “Arc Check, Getting Started”, “Changing the Fusion Program, Operating Instructions” and “Changing the heater Program, Operating Instructions”.

Press ✓ to enter to the Base menu from READY screen, press **A** or **V** to scroll to the required menu item and press ✓. When the item has a sub menu, press **A** or **V** to scroll to the required sub menu item and press ✓ again.

Press ✕ to end the operation in each item and return to the previous menu.

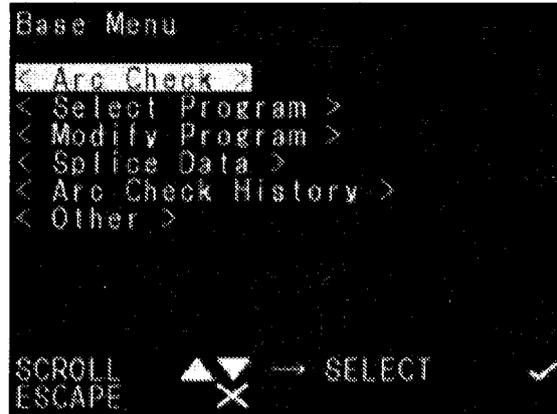


Base Menu Item	Sub Menu Item	Functions
<Arc Check>		Perform an arc check to help optimize arc power. See “Arc Check, Getting Started”
<Select Program>		Select a fusion program and/or a heater program either manually or automatically.
	<Fusion Program>	See “Changing Fiber Program” in “Getting Started”.
	<Heater Program>	See “Selecting a Fiber Program” in “Getting Started”.
<Modify Program>		Switch to Fusion/Heater Program selection.
	<Fusion Program>	Modify a fiber program for splicing.
	<Heater Program>	Modify a heater program for protection sleeve.
<Splice Data>		Capability of displaying, printing and clearing recorded splice data.

Programming Guide

Base Menu Item	Sub Menu Item	Functions
<Arc Check History>		Capability of displaying, printing and clearing recorded arc checks.
<Other>		
	<Configuration>	Allows the operator to select the language of operation, the arc counter, the total arc counter, the time before the LCD switches off for power saving and a Data Output function.
	<Environment monitor>	View environmental information, i.e. Humidity, Temperature and Air Pressure.
	<Manual Operation>	Allows the entire cycle of splicing to be completed manually using the keypad.
	<Dust Check>	Inspects the LCD for any dust and gives a result of the check.
	<Motor Limit Test>	Allows an individual motor to be selected and checks the operation of the home and overrun sensors.
	<Fiber Dimension>	Allows an auto or manual inspection of the fiber with regards to clad and core offset, relative eccentricity, gap, fiber tilt and relative cleave angle.
	<Program Management>	Allows programs to be moved from one location to another. E.g. When editing a default program and storing it under another program heading.
	<Adjust Date/Time>	Allows date and time of machine to be adjusted.


8.2. Modifying a Fiber Program

1. From Base Menu, select <Modify Program> and press ✓

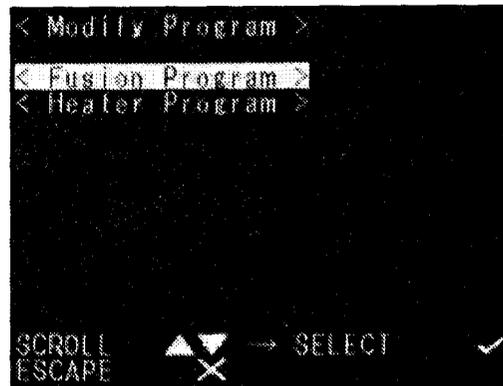


2. Select <Fusion Program> and press ✓.

3. If machine is in AUTO then the following is displayed informing the user that the current AUTO program cannot be edited

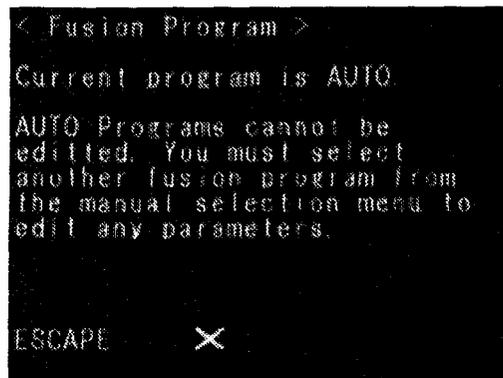


4. If it is possible to edit the current program then the following screen is displayed. The Parameters Table gives more details. Scroll to the parameter by pressing ▲ or ▼, and modify with + and - keys.

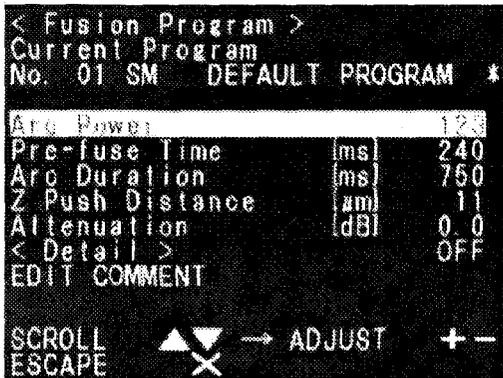


- ◆ By selecting <Detail> the number of parameters accessible becomes more extensive as can be seen on the Parameter Table.

5. By selecting "EDIT COMMENT" the name of the program can be edited to suit the user. Select the "EDIT COMMENT", press ✓ and the first character can be edited with + and - keys. Scroll to the character positions with ▲ and ▼ keys and continue to edit. Press ✕ to end editing.

6. When editing is finished press **X** to go to the <Store Program> Menu.
7. By selecting “Quit without changes” and pressing **✓**, the parameters do not change and return to the previous screen.

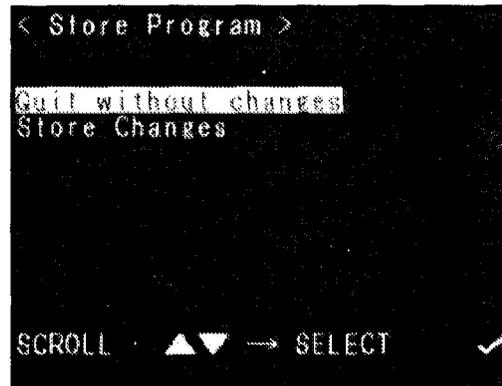

8. To store the changes, select “Store Changes” and press **✓**. The screen changes to the location menu for the store. Storing the program at “CURRENT” stores the change on the current fusion program and the change disappears when the power is turned off. Storing at “BACKUP RAM” enables to store the modified program at a location from 32 fusion program locations except No. 1 to 3 where DEFAULT Programs are stored. It can be reinstalled for splice at the next power on.

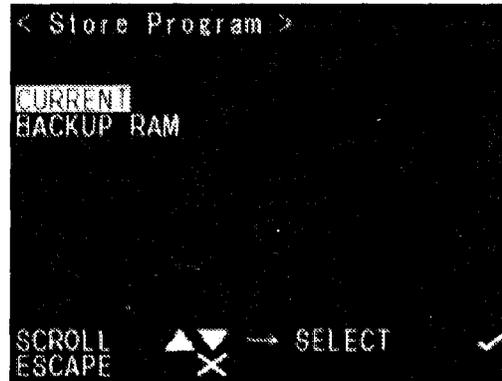


9. Select “CURRENT” and press **✓** to store the changes on the current program for a temporary use. The screen returns to the sub menu for <Modify Program>.
10. Select “BACKUP RAM” and press **✓** to store the modified program for a repeated use. The screen changes to select the destination program number. Select the number and press **✓**. The screen prompts to press **✓** again to set the number. Press **✓** again and the screen returns to the sub menu for <Modify Program>.

Parameter Table for Fusion Program

Fusion Program											
Program No	1	2	3	4	5	6	7	8	9	Description	
Mode name	SM	MM	DS	EX	TW	LF	SMDS	SMTW	SMLF		
Parameter name	Min	Max	Default								
Arc Power	0	255	70	70	70	70	70	70	70	70	Arc current for fusion splicing, measured in units (use arc check function to set)
Arc Compensation	0	255	20	20	20	20	20	20	20	20	Corrects the arc current based on the axis offset of the fibers
Cleaning A-Power Offset	0	255	40	40	40	40	40	40	40	40	Additional to Arc Power for cleaning purposes
Cleaning Time	0	32767	200	200	200	200	200	200	200	200	Arc duration for cleaning [msec]
Pre-fuse Time [ms]	0	32767	240	240	240	240	240	240	240	240	Time between arc starting and fibers first touching [msec]
Arc Duration [ms]	0	32767	750	750	1750	1750	20000	12000	3000	3000	Arc Duration for splicing [msec]
Z Pull Start Time [ms]	0	32767	0	0	0	0	0	0	0	0	Time taken to pull the fibers during arc for special cases. Normally used [msec]
Z Push Distance [μm]	0	32767	11	13	13	13	13	13	13	13	Distance fibers are pushed together during arc
Z Pull Distance [μm]	0	32767	0	0	0	0	0	0	0	0	Distance fibers are pulled apart during arc
Auto Additional Arc	0	255	0	0	0	0	0	0	0	0	Limit counts of automatic additional arc
Repeat Arc Times	0	255	0	0	0	0	0	0	0	0	Number of automatic arcs after splice completed
Repeat-Arc-Duration [ms]	0	32767	1000	1000	1000	1000	1000	1000	1000	1000	Duration of automatic arc after splice completed [msec]
Repeat-Arc Interval [ms]	0	32767	3000	3000	3000	3000	3000	3000	3000	3000	Interval between automatic arcs after splice completed [msec]
Repeat Arc Power Offset	-127	128	0	0	0	0	0	0	0	0	Power of additional arc is Arc Power added by Repeat Arc Power Offset
Attenuation [dB]	000.0	010.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	Function to allow attenuation splicing [dB] (Optional)
Aligning Type	CORE	CLAD	CORE	CORE	CORE	CORE	CORE	CORE	CORE	CORE	Defines the function of the machine to CORE align or CLAD align the fiber
Cleave Angle [deg]	000.0	090.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	Maximum permissible angle of cleaved fiber end for splicing to continue [deg]
Loss Limit [dB]	000.0	010.0	0.2	0.2	0.2	0.2	1.0	1.0	1.0	1.0	Maximum loss allowed for machine not to give a splicing error [dB]
Mode Field Radius L [μm]	00.00	99.99	4.75	25.00	4.00	4.23	4.9	4.23	4.9	4.9	Mode field radius of left hand side fiber [μm] (No meaning between L & R)
Mode Field Radius R [μm]	00.00	99.99	4.75	25.00	4.00	4.23	4.9	4.23	4.9	5.37	Mode field radius of right hand side fiber [μm] (No meaning between L & R)


8.3. Modifying a Heater Program

1. From Base Menu, select <Modify Program> and press ✓

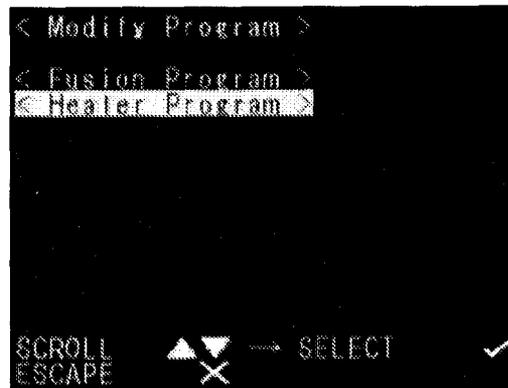

2. Select <Heater Program> and press ✓ .

3. The screen displays current Heater Program parameters. Scroll to the parameter by pressing ▲ or ▼, and modify with + and - keys.

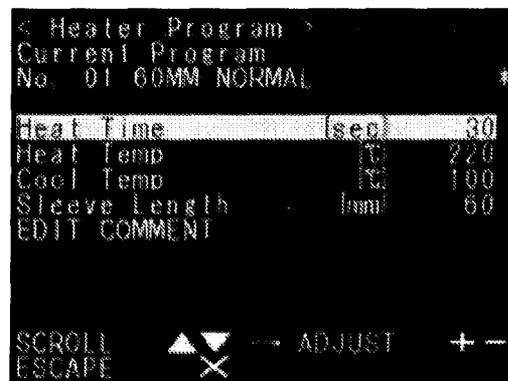

4. By selecting “EDIT COMMENT” the name of the program can be edited to suit the user. Select the “EDIT COMMENT”, press ✓ and the first character can be edited with + and - keys. Scroll to the character positions with ▲ and ▼ keys and continue to edit. Press ✕ to end editing.

5. Press ✕ to go to the <Store program> Menu and follow the same procedure as for the Modifying a Fusion Program.

Parameter Table for Heater Program


Heater Program						
Program No.	1	2	3	4	Description	
Mode name	60mm	40mm	60mm	40mm		
Parameter name	Min	Max	Normal	Extra1	Extra2	
Heat Temp. [deg.C]	100	230	220	180	180	Optimum temperature for protection sleeve [deg C]
Cool Temp [deg.C]	40	100	100	100	100	Temperature to be achieved during the cooling process [deg C]
Sleeve Length	40	60	40	60	40	Heat element to beswitched on depending upon users request : 60mm or 40mm

8.4. Splice Data

By selecting <Splice Data> the operator can access details of the previous 400 splices and also add a comment to an individual splice. The data also can be printed or cleared from this menu.

8.4.1. Viewing the data

- From the Base Menu, select the <Splice Data> and press ✓. The screen displays a splice data as shown in the figure.

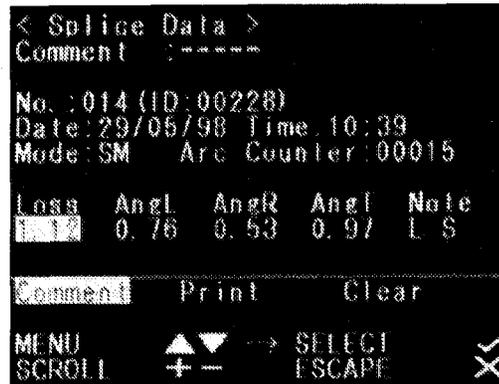

- ◆ No. 1 is the data for the last splice and the number is counted up for older splices.
 - ◆ The splice data can be stored for the capacity up to 400. Older data than the capacity are automatically erased.
 - ◆ When the splice is performed with an additional arc, the data shows results inspected after the additional arc.
- The data displayed are as follows;

Data Title	Description
ID:	Same number as of Total Arc Counter.
Date:, Time:	Date and time for the splice performed.
Mode:	Fiber type of the Fiber Program.
Arc Counter:	Same number as of Arc Counter.
Loss:	Estimated splice loss.
AngL:	Cleave angle of the left fiber.
AngR:	Cleave angle of the right fiber.
AngT:	Relative cleave angle between left and right fibers.
Note:	Error codes and additional arc if any. The data with error is highlighted. L: Estimated loss exceeds the set value S: Streak or bubble at the splice point or not spliced A: Cleave angle exceeds the set value C: Cleave end face has excessive defects +: Additional arc is applied


8.4.2. Adding a Comment

1. Highlight the "Comment" menu with Δ or ∇ key and press \checkmark .
2. The screen changes as shown in the figure and the first character can be edited with + and - keys. Scroll to the character positions with Δ and ∇ keys and continue to edit. Press \times to end editing.



8.4.3. Printing the Data

1. Highlight the "Print" menu with Δ or ∇ key and press \checkmark .
2. Select "Graph" or "List" and press \checkmark . Selecting "Graph" prints the data as a histogram shown in the figure, and the "List" as a list of numerical data.
3. Select "All" or "Partial" and press \checkmark . "All" is for printing all the stored data and "Partial" for selected data. When "Partial" is selected, set the data range for "From Record" and "To Record" with + and - keys.
4. Press \checkmark to print with the S902 printer or \blacktriangleright to output to a PC (personal computer). Printing or outputting the data will take some time according to the quantity of the data and the operating keys do not work during the time.

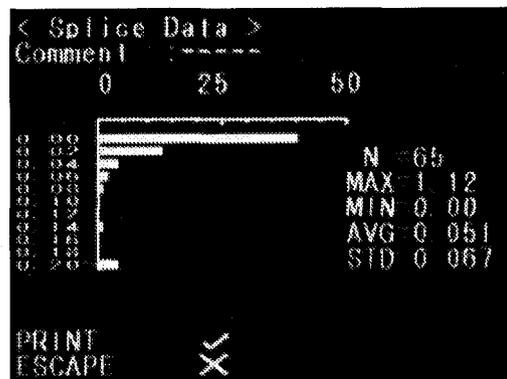


Follow the procedure below to transfer splice data from 175 to Microsoft Windows base PC.

Preparation

Prepare RS232C cross cable connected 9-pin DSUB connector for both end and PC with Win95. This cable is easily available from common supplier. And also available as an optional accessory part no.S175X-A02.

wiring

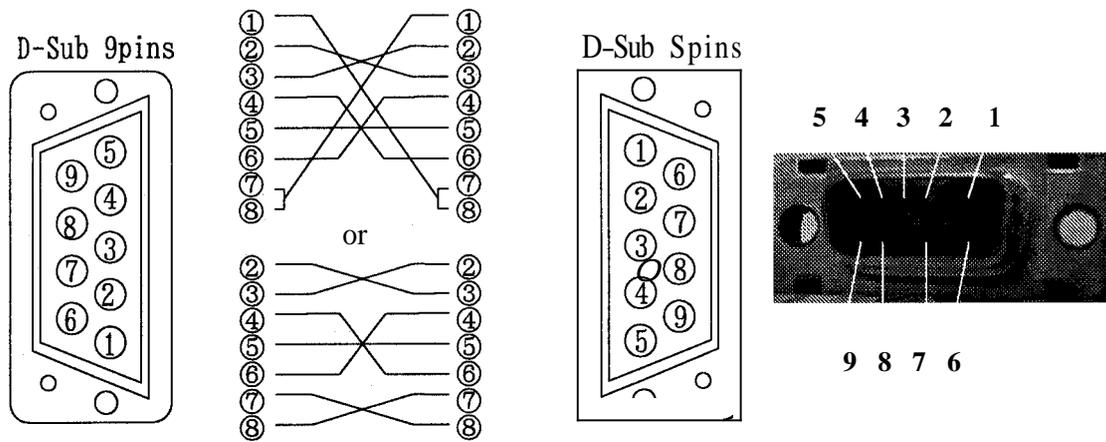

Procedure

1. Connect DSUB cable to PC. And Check its name by your hardware setting reference. Normally it would be COM2. (as COM 1 is for mouse usually) (Note; If you are using Modem or other things with COM port, this name would be very different. check your PC)
2. Open HYPER TERMINAL that is Windows 95 standard software in Accessory Holder.
3. Name "S175 CONNECTION" in the box for example and choose Icon as well.
4. Select COM2 (or COM1) in the " Connect using" blank box in DIAL NUMBER window.
5. Set 9600 bps, 8 bit, No parity, 1 stop bit.
6. Turn S175 On.
7. Install preferable fusion and heater program.
8. Connect DSUB cable to S175. Do not connect cable before power on.
9. Press Enter and select Splice Data then select Print from Print/Clear in its menu.
10. Select List from Graph/ List in its menu.


11. Select All or Partial.
12. In Hyper terminal menu. Select Transfer then Capture Text. Hypertext will ask you name.
13. Name TEST for example. And remember location that TEST will be stored in. (Default would be C:/ program files/ Accessory/Hypertext.) Now hyper terminal is ready for receiving data.
14. Select PC-out from Printer/PC-OUT in the S175 menu. When you press enter, S175 will send data to Hyper terminal and you will see data in the window.
15. Select Stop in Capture text in Transfer menu when transfer is finished.
16. Open Excel and choose Open File within Excel.
17. Go to folder in which TEST is stored and Select File Type all (*.*) in the box below. You must see TEST in file window. Open it.
18. Text Import Wizard will open. Select Delimit (wizard 1/3), Tab and Comma (wizard 2/3), Column Data General (wizard 3/3).
19. Here you can edit data using Excel.
20. END

8.4.4. Clearing the data

1. Highlight the "Clear" menu with \triangle or ∇ key and press \checkmark .
2. Select "All" or "Partial" and press \checkmark . "All" is for clearing all the stored data and "Partial" for selected data. When "Partial" is selected, set the data range for "From Record" and "To Record" with + and - keys.
3. Press \checkmark to initiate clearing.

8.5. Arc Check History

Details of the previous 100 Arc checks can be viewed and printed in exactly the same way as for Splice Data with the exception of displaying a graph on the screen.

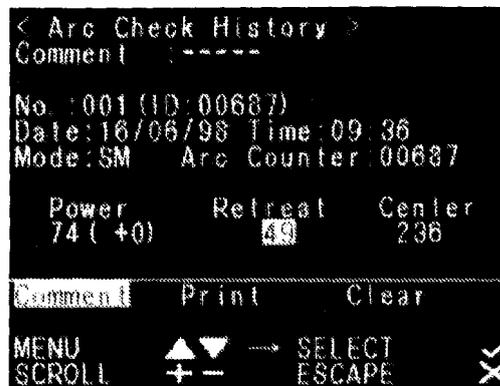

The data displayed are as follows;

Data Title	Description
Power:	Parameter value for Arc Power. The figure in the bracket is a compensated value by environmental sensing.
Retreat:	Distance between both fiber endfaces after arc check. (unit: pixel)
Center:	Center position between both fiber endfaces after arc check (unit: pixel).

Data with error is highlighted.

8.6. Configuration

The configuration settings are used for setting the machine program options, which are applicable to the user.

8.6.1. Language

Refer to "Selecting the Operating language, Getting Started".

8.6.2. Arc Counter

The S175 fusion splicer automatically counts the arc discharges and displays the number on the screen.

Using **A** or **V**, scroll to highlight <Arc counter> option to view the count reading.

The arc count reading can be changed with the following operation.

1. Using + or -, set the reading to a desired value.
2. Press ✖.
3. Using ▲ or ▼, scroll to highlight <Store Changes>. Highlight "Quit without changes" if cancel the change.
4. Press J.

For resetting the count reading to 0 when replacing the electrodes, refer to the Electrode Maintenance, **Maintenance**.

8.6.3. Total Arc Counter

The Total Arc Counter is to record the total arc discharges and can not be reset or set by the user. This counter gives an indication of the machines history whereas the Arc Counter is used as a trip counter.

8.6.4. Sleep Time LCD

The S175 fusion splicer automatically turns off the LCD display when the machine is not operated for the time set by this parameter.

1. Using ▲ or ▼, scroll to highlight <Sleep Time LCD> option.
2. Using + or -, set sleep time to desired figure in minutes. (Zero if LCD to remain on while machine switched on.)
3. Press ✖
4. Using ▲ or ▼, scroll to highlight <Store Changes>.
5. Press J

8.6.5. Data Output

When the "Data Output" is set "ON", the inspected data are displayed on the LCD screen for both fusion splicing and arc check.

1. Using ▲ or ▼, scroll to highlight <Data Output> option.
2. Using + or -, set Data Output to ON or OFF.
3. Press ✖
4. Using ▲ or ▼, scroll to highlight <Store Changes>.
5. Press ✓

8.6.6. Low Temp. Motor Rate

The speed of motors are decreased by the rate of “Low Temp. Motor Rate” in order to gain more torque when the environment temperature is lower than “Low Temperature” parameter. Try smaller value when the motor hardly moves in cold environment.

8.6.7. Low Temperature

The speed of motors are decreased by the rate of “Low Temp. Motor Rate” in order to gain more torque when the environment temperature is lower than “Low Temperature” parameter. Try smaller value when the motor hardly moves in cold environment.

8.6.8. TENSION TEST

The tension test after splicing can be canceled by this switch.

1. Using **A** or **V** ,scroll to highlight <TENSION TEST> option.
2. Using + or -, set Data Output to active or cancel.
3. Press **✖**
4. Using **A** or **V** ,scroll to highlight <Store Changes>.
5. Press **J**

8.6.9. Estimation Loss

The accuracy of splice **loss** estimation is selectable according to the application. The default is high-speed mode. (New function for S175 version 2000)

Accurate estimation mode (Estimation Loss = fine): 19 seconds for a splice.

High-speed mode (Estimation Loss = Coarse): 17 seconds for a splice.

1. Using **A** or **V** ,scroll to highlight <Estimation Loss> option.
2. Using + or -, set Data Output to Fine or Coarse.
3. Press **✖**
4. Using **A** or **V** ,scroll to highlight <Store Changes>.
5. Press **J**

8.6.10. Arc Count Reset

This menu is used to reset the Arc Counter.


1. Using **A** or **V** ,scroll to highlight < Arc Count Rest > option.
2. Using **A** or **V** ,to set Yes and press **✓** to rest the Arc Counter
3. Press **✖**

4. Using **A** or **V**, scroll to highlight <Store Changes>.
5. Press **✓**

8.7. Environment Monitor

This menu is to display environmental conditions. The machine in the calculation of Arc Power uses the data.


1. Select the <Environmental Monitor> menu with **▲ ▼** and **✓** keys.
2. HUMIDITY, TEMPERATURE and AIR PRESSURE are displayed as follows:
3. Press **✕** to return to the previous menu.

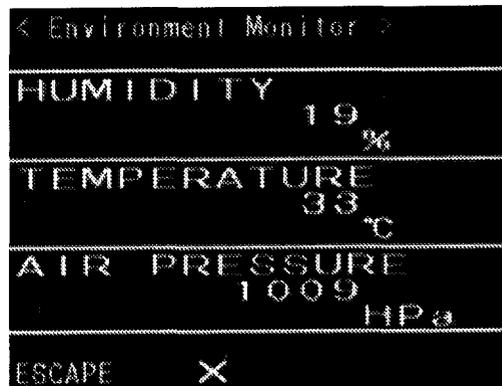


8.8. Manual Operation

This menu allows the entire cycle of splicing to be completed manually using the keypad.

1. Highlight the <Manual Operation> function and press **✓**.
2. Highlight <Yes> for manual operation and **J**.

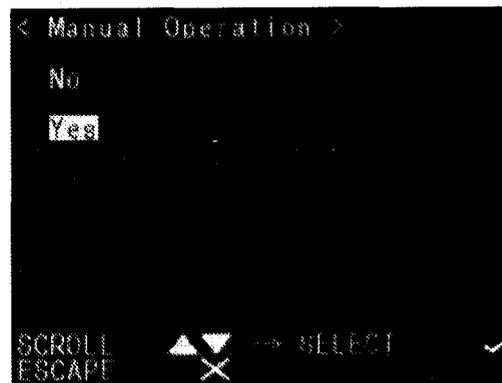

3. Use the keys indicated to manually operate the motors and perform the splice. If the distance is left at zero then the **+ / -** keys can be used to operate the selected motor in a forward or reverse movement. The arc can be discharged when the highlight is not at "Move". The first arc is discharged with Cleaning Arc parameters, second with Fusion Arc parameters and with Additional Arc parameters thereafter.

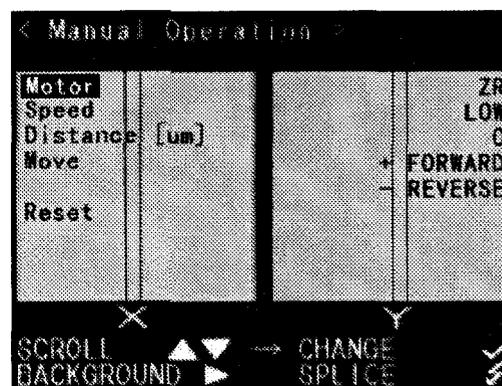

4. Press **✕** to end the operation and return to the previous screen.

8.9. Dust Check

The Dust Check operation is used to inspect the fiber observation unit (i.e. mirrors, lens and camera) for dust and damage. This procedure should be performed whenever the S175 fusion splicer is unable to set the fiber ends properly, unable to align the fibers and when high splice loss is obtained.

1. Ensure that there are no fibers in the fusion splicing area.
2. Select the <Other> menu item from the Base Menu and scroll down to <Dust Check>.
3. Press ✓ to initiate the Dust Check.


The dust check results are displayed as follows.

- Pass (BLUE background) : No Dust is found and the result is good.
 - Warning (YELLOW background) : A small amount of dust is found but should not effect the splice operation
 - Failing: (RED background) Display turns red because dust is found and indicates the number of pixels the camera registered as dust.
- ◆ *When the fiber observation unit requires cleaning. Clean the observation unit following the procedure given in “Maintenance, Maintenance and Handling Instructions”, and perform the measurement again.*
- ◆ *Contact the Furukawa Electric Co. or your local sales representative if the dust check operation fails again after cleaning.*
4. Press ✕ to return to the previous screen.

8.10. Motor Limit Test


Allows an individual motor to be selected and checks the operation of the home and overrun sensors.

1. Using ▲ or ▼, scroll to highlight <Motor Limit Test> and press ✓.
2. Select “Auto Inspection” or “Manual Inspection” and press ✓.

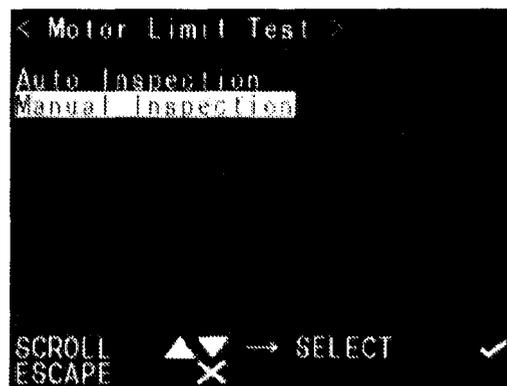

Manual Inspection

1. Using **A** or **V**, scroll to highlight motor requiring test.
2. Press **▶** key if actual screen background required.
3. Press the **✓** key to start the test on the selected motor.
4. Notice the operation of the HM-LSW (home) and the OV-LSW (overrun) sensors (ON and **OFF**).

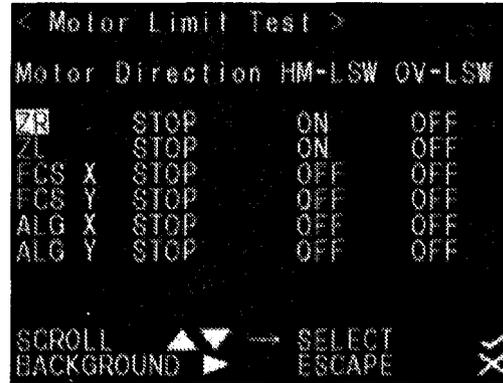


5. Repeat the operation for any of the other motors.
 6. Press **X** to return to the previous screen.
- ◆ Contact the Furukawa Electric Co. or your local sales representative if any sensor fails.

Auto Inspection

All the motors are automatically tested one by one and the result is displayed as shown in the screen right side.

When a sensor fails to detect the position, NG is displayed as shown in the screen right side.

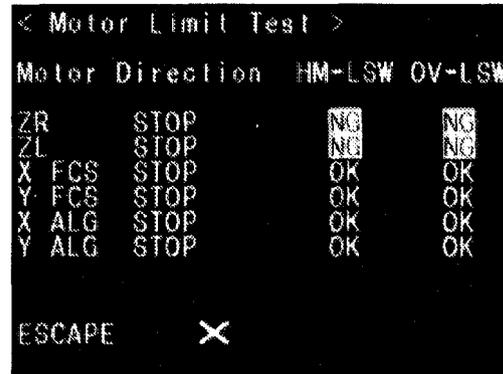

8.1I. Fiber Dimension

Allows an auto or manual inspection of the fiber with regards to clad and core offset, relative eccentricity, gap, fiber tilt and relative cleave angle.


1. Using **A** or **V**, scroll to highlight <Fiber Dimension> and press **✓**.
2. Select "Auto Inspection" or "Manual Inspection" inspection. "Auto Inspection" automatically loads the fiber and inspects. "Manual Inspection" allows the user to load the fiber and perform the inspection manually.

AUTO INSPECTION

1. Load fibers into machine.

2. Highlight <Auto Inspection> and press ✓.

- Machine loads fiber into display and sets gap.
- Fiber is aligned.
- Information is displayed as follows.

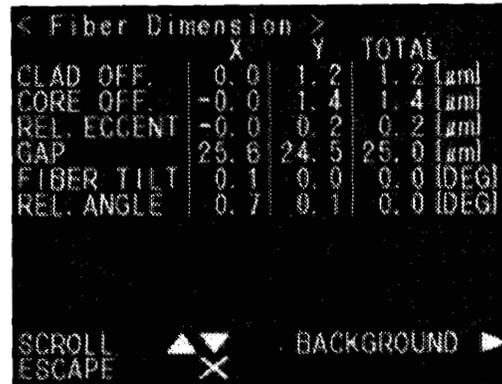

PARAMETER	DESCRIPTION
CLAD OFF	Amount of CLAD OFFSET between the two fibers.
CORE OFF	Amount of CORE OFFSET between the two fibers.
REL. ECCENT	Difference in ECCENTRICITY between the two fibers.
GAP	SETTING GAP distance between the two fibers.
FIBER TILT	Angle at which fibers come into the screen.
REL.ANGLE	The RELATIVE cleave angle between the two fibers.



Use the ▲ or ▼, to scroll to left or right fiber measurement

PARAMETER	DESCRIPTION
ECCENTRIC	Eccentricity of Fibers in micrometers
CUT ANGLE	Cleave Angle of fiber in degrees
CLAD (0) IX	Cladding Index to calculate center of Clad

PARAMETER	DESCRIPTION
CLAD (1) IX	Cladding Index to calculate center of Clad
CLAD WIDTH	Measurement of CLAD width in micrometers
BEAM WIDTH	Measurement of BEAM width in micrometers
CORE (0) IX	Core Index to calculate center of Core
CORE (1) IX	Core Index to calculate center of Core
CORE WIDTH	Measurement of CORE width in micrometers
DISTORTION	Measurement of distortion indicating perpendicularity of light source

MANUAL INSPECTION


1. Load fibers into machine.
2. Highlight <Manual Inspection> and press **J**.
3. Press **J** again.
4. Press **J** to select a motor to move.
5. Follow on screen instructions to load the fibers into the display and manually align them using the ZL and ZR feed motors, X and Y align motors and the X and Y focus motors.
6. When aligned press **X** to return to the inspection screen.
7. Press **▶** key to increase the magnification and check alignment.
8. Repeat steps 4 to 6 if necessary.
9. Press the scroll up key (**▲**) to execute the inspection.
10. The information is displayed as in the table explained for the Auto Inspection above.
11. Press **X** when inspection completed.

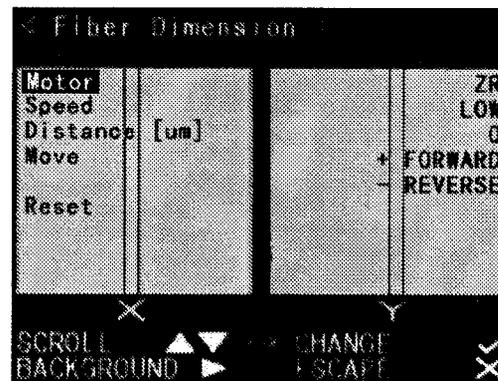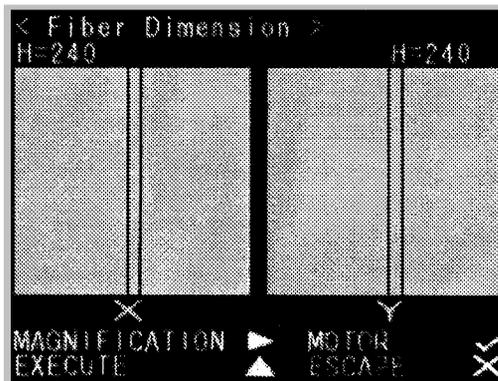

8.12. Program Management

This function allows the operator to utilise any of 3 major program-editing tools.

Using **▲** or **▼**, scroll to highlight <Fiber Dimension> and press **J**. The screen changes for choosing tools.

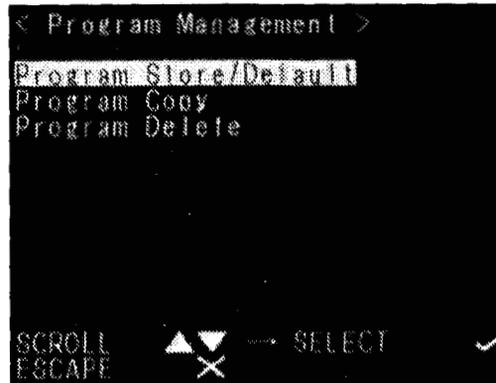


8.12.1. Program Store/ Default


Highlight the "Program Store/Default" and press **✓**.

Step 1 Reload the FACTORY SETTING to the BACKUP RAM


- Using the **▲** or **▼**, scroll to highlight the arrow between the FACTORY SETTING and the BACKUP RAM, and press **✓**.

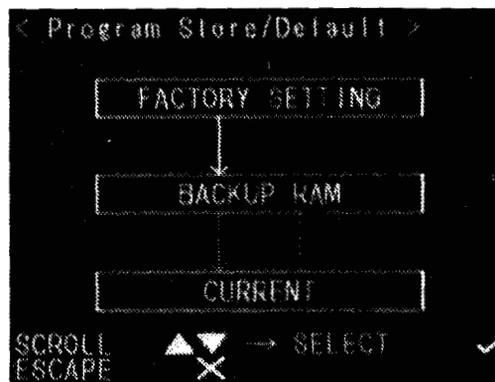

- Using the **▲** or **▼**, scroll to highlight the program (machine, fusion, heater or all) where the default factory settings are to be sent, and press **✓**.

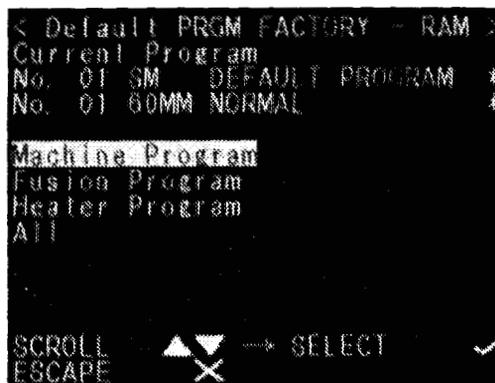

3. For machine program, select Set & Return, as this is common to all programs.
4. For fusion and heater programs highlight default program where factory settings must be located.
5. For All programs select Set & Return to retrieve all factory settings.
6. Press ✓ to select choice.
7. Press J again to Set.

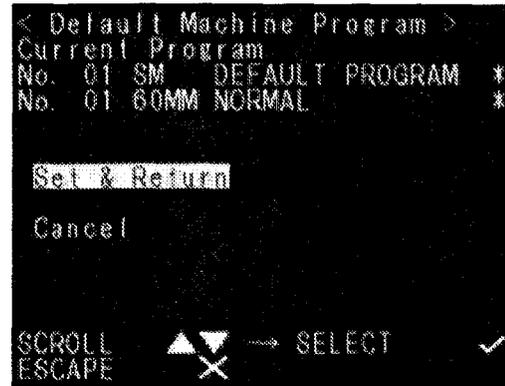

Step 2 Transfer the contents of the BACKUP RAM to the CURRENT program

1. Use ✕ to return to <Program / Store Default> Menu screen
2. Using the ▲ or ▼, scroll to highlight the direction indicator between BACKUP RAM and CURRENT
3. Press J
4. For machine program, select Set & Return, as this is common to all programs.
5. For fusion and heater programs highlight default program where contents of BACKUP RAM are to be located.
6. Press J to select choice
7. Press J to Set


Step 3 Save CURRENT program in BACKUP RAM

- Use ✕ to return to <Program / Store Default> Menu screen
- Using the ▲ or ▼, scroll to highlight the direction indicator between CURRENT and BACKUP RAM
- Press J
- Using the ▲ or ▼, highlight the type of program to be stored (Machine, Fusion or Heater)
- Press J
- Using the ▲ or ▼, highlight the current program to be stored in BACKUP RAM
- Press ✓ to select choice
- Press ✓ to Set


8.12.2. PROGRAM COPY

To COPY one CURRENT program (Fusion or Heater) to another CURRENT location,

1. Using the **▲** or **▼**, highlight the "Program Copy" option on the Program Management screen and press **✓**.
2. Using the **▲** or **▼**, highlight your choice, either "Fusion Program" or "Heater program" to be copied, and press **✓**.
3. Using the **△** or **▽**, highlight the program to be copied and press **✓**.

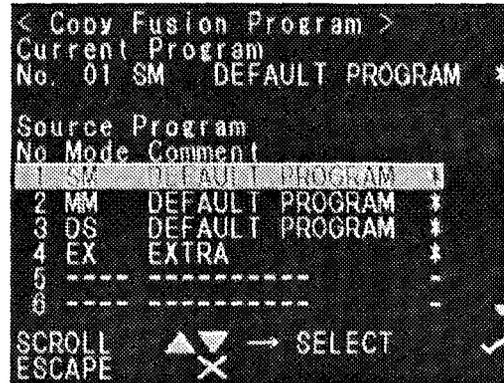

4. Using the **△** or **▽**, highlight the location for the new program and press **✓**.

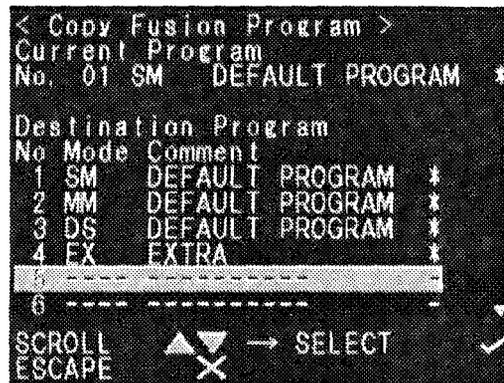


5. Press **✓** again to confirm destination
6. Use the EDIT COMMENT function in the <Modify Program> menu to put a title on the new program and its location.




8.12.3. PROGRAM DELETE

1. Using the **A** or **V**, highlight the "Program Delete" option on the Program Management screen, and press **✓**.
2. Using the **A** or **V**, highlight your choice, either "Fusion Program" or "Heater Program" to be deleted, and press **✓**.
3. Using the **A** or **V**, highlight the Program to be deleted, and press **✓**.
4. Press **✓** again to confirm Delete.

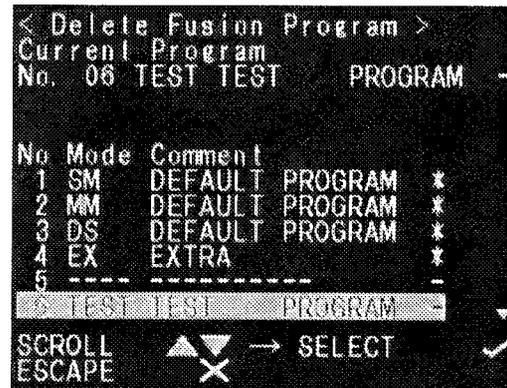

8.13. Adjust Date/Time

1. Highlight the <Adjust Date/Time> selection on the <Other> menu, and press **✓**.
2. Using **A** or **V**, scroll to the parameter requiring adjustment.
3. Use the **+** or **-** key to adjust.
4. Press **✕** to return to the OTHER menu.

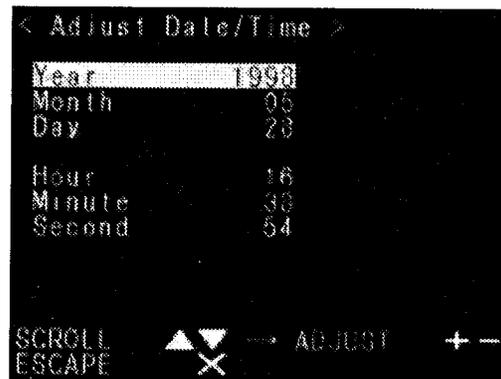

*For sales and service information,
contact THE FURUKAWA ELECTRIC CO., LTD.
or your local representative.*

 **THE FURUKAWA ELECTRIC CO., LTD.**

Head Office: 6-1 Marunouchi 2-chome, Chiyoda-ku, Tokyo, 100-8322 Japan
Engineering Department, FITEL Products Division

Tel: 81-3-3286-3443

Fax: 81-3-3286-3708

Sales and Marketing Department, Overseas Telecommunications Division

Tel: 81-3-3286-3223

Fax: 81-3-3286-3749